

GETTING STARTED

 
BATTERY

- Car is powered by 4 x 1.5V "AA" size batteries.
- Camera is powered by 2 x 1.5V "AAA" size batteries.
- Controller is powered by 4 x 1.5V "AA" size batteries.

INSTALL THE BATTERIES


CONTROLLER

- Removal of the battery cover requires a "Phillips head" screwdriver.
- After removing the screw, remove the battery cover.
- Make sure the "AA" batteries are new (Do not mix old or used batteries with new batteries).
- Place the batteries in the battery compartment being sure that the (+) and (-) poles of the batteries are positioned correctly.
- Replace the cover.

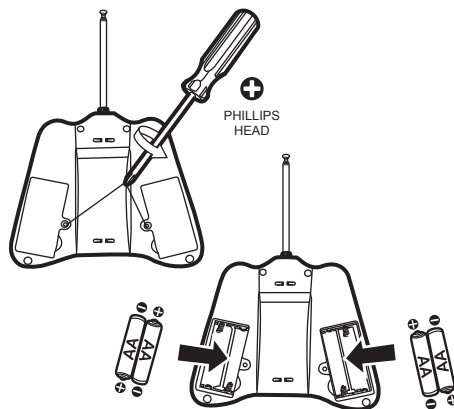


CAR

 - Removal of the battery cover requires a "Phillips head" screwdriver.
- After removing the screw, remove the battery cover.
- Make sure the "AA" batteries are new (Do not mix old or used batteries with new batteries).
- Place the batteries in the battery compartment being sure that the (+) and (-) poles of the batteries are positioned correctly.
- Replace the cover.

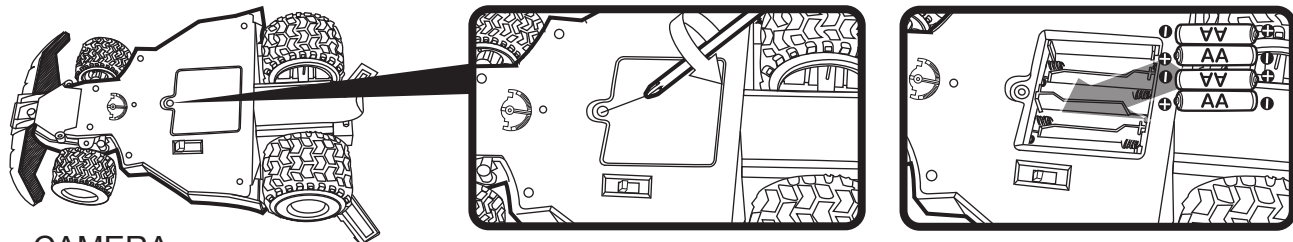

CAMERA

 
- Removal of the battery cover requires a "Phillips head" screwdriver.
- After removing the screw, remove the battery cover.
- Make sure the "AAA" batteries are new (Do not mix old or used batteries with new batteries).
- Place the batteries in the battery compartment being sure that the (+) and (-) poles of the batteries are positioned correctly.
- Replace the cover.

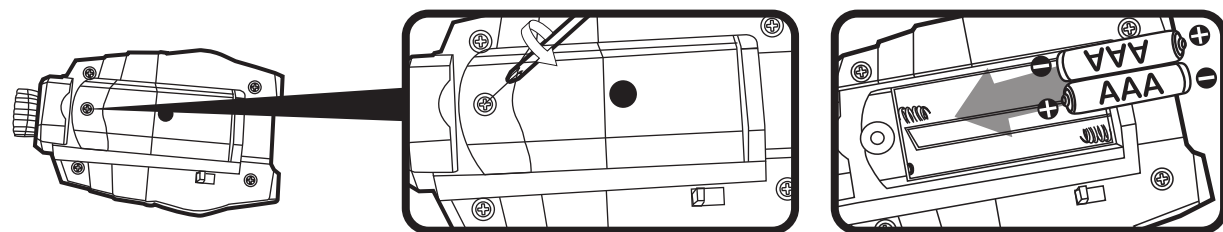

OPERATING THE PLAYSET

OPERATING THE VEHICLE

 
1. Turn the Car switch to "ON". (Located on the bottom of vehicle)
2. Turn the Camera switch to "ON". (Located on the bottom of vehicle)
3. Start operating by pressing the buttons on the controller.

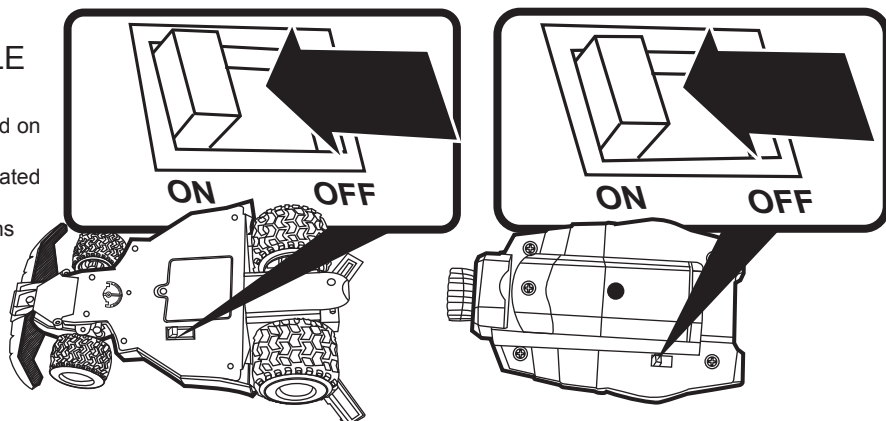


INSTALLATION

CAMERA

 - Insert the camera into the car in the direction shown

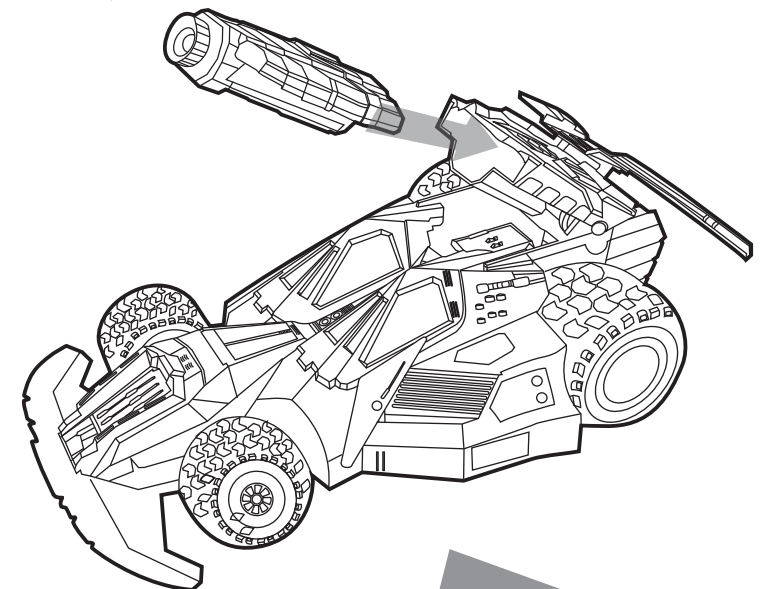


CONTROL TIPS

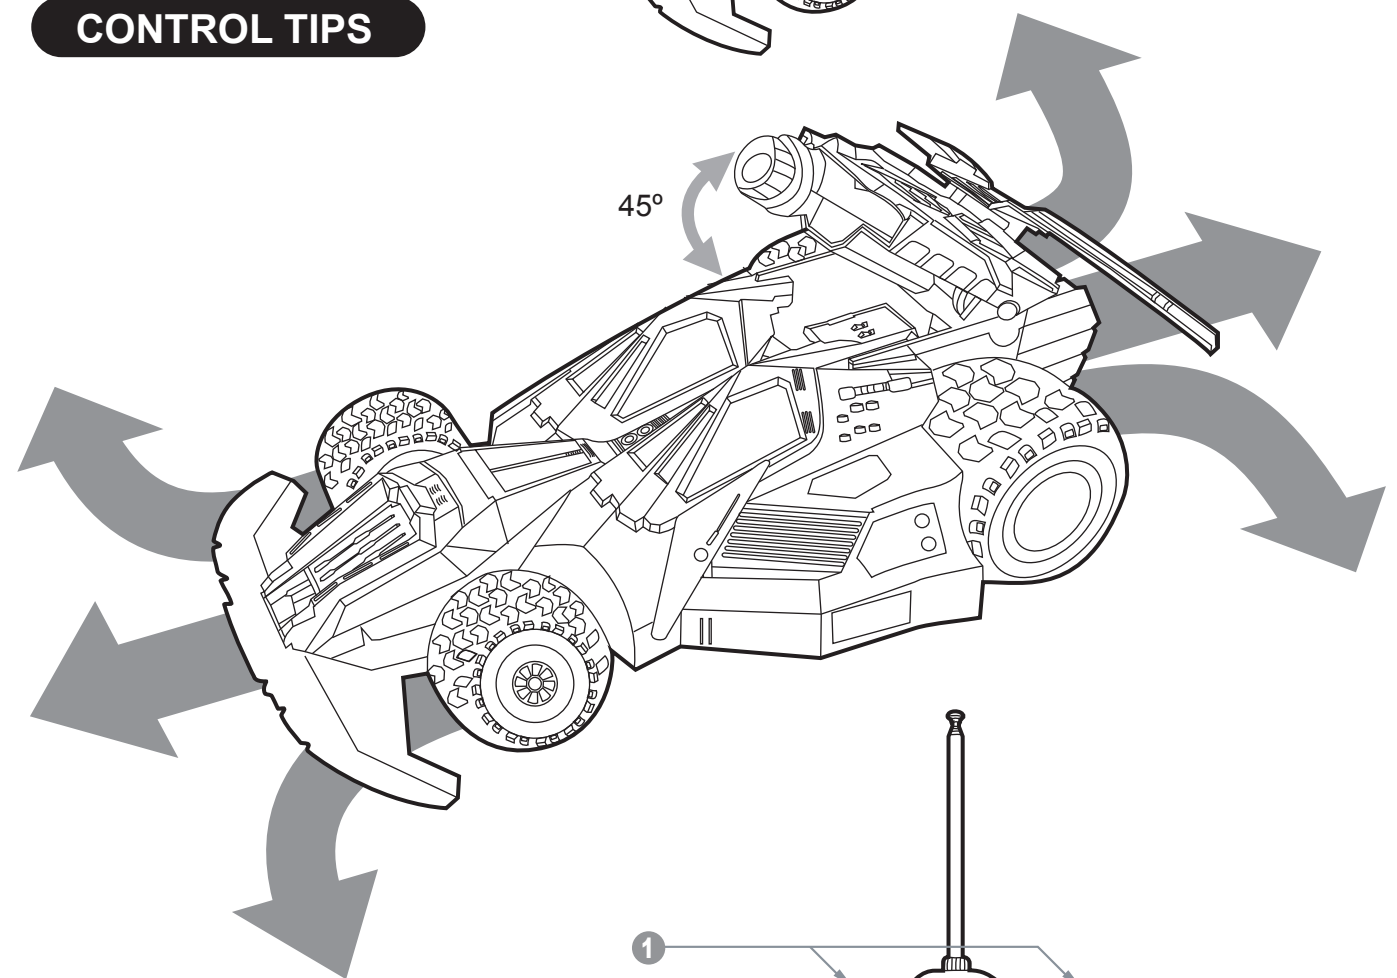 

RADIO CONTROLLER WITH COLOR LCD DISPLAY

 1. TILTING ANGLE CAMERA CONTROL
2. FORWARD / REVERSE CONTROL
3. POWER / LCD DISPLAY SWITCH
4. SUN SHIELD COVER
5. LEFT / RIGHT CONTROL
6. REAL TIME COLOR LCD DISPLAY
7. SWITCH ○ TOTAL ON
● TOTAL OFF

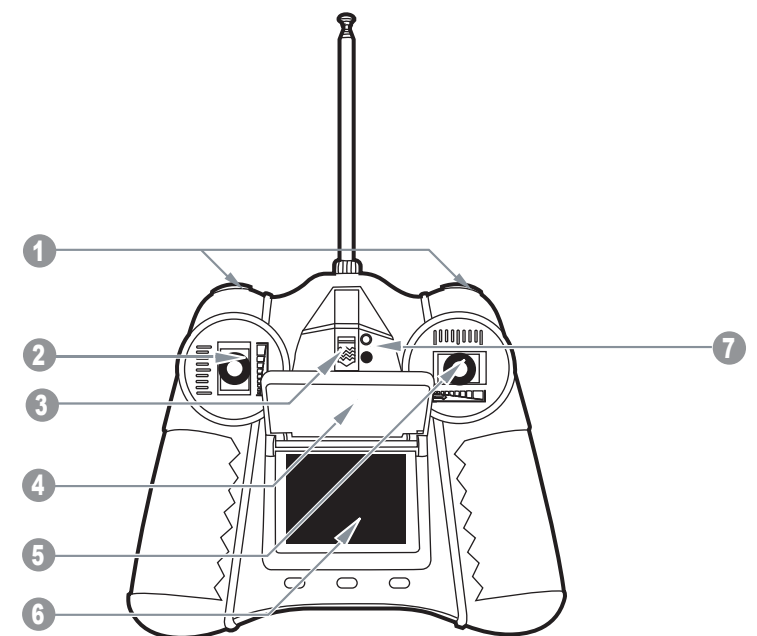

THINGS YOU SHOULD KNOW

TROUBLE SHOOTING:

If vehicle does not operate properly, try the following:

- Be certain that the antenna of the controller extends the maximum length.
- Radio interference can cause your car to react strangely.
- Try fresh alkaline batteries in the vehicle and controller.
- Check the polarity of the batteries in the vehicle and controller.
- Turn vehicle switch OFF and ON.

NOTE:

- Warning! Use under the direct supervision of an adult.
- Do not play with vehicle in the street.
- Do not play vehicle over mud, water, snow or sand.
- Keep fingers, hair, and loose clothing away from the tires while the vehicle is switched on.
- Another vehicle operating at the same frequency can disrupt the control of the vehicle.
- CB's, cellular phones, two way radios, other transmitting devices and high voltage wires may cause interference with operation.
- Your vehicle can sometimes cause interference with television or radio reception. Move to another area if you notice this occurrence.
- Clean the vehicle with a damp cloth.

FCC STATEMENTS:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

GOT A PROBLEM?

DO NOT RETURN PRODUCT TO PLACE OF PURCHASE.
We'll help you solve it. In spite of our best efforts, accidents do happen. If you're having trouble setting up your Artin Road Racing Set or you have a defective part, or just a question, we're here to help you.

Call us Toll-Free-On our Artin Hotline

1-800-972-7846

We'll do our best to solve your problem on the phone. If you need a replacement part, we will send it to you at once.

LIMITED 1 YEAR WARRANTY

All Artin Road Racing Sets are manufactured under strict quality control. However, if your set contains a defective part or if a part becomes defective within one year of purchase, just call our toll free hot line 1-800-972-7846 for a free replacement part. Warranty does not cover misused or abused items or electric bulbs. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

NOTE: Toll Free Hot Line Service available in the 50 United States, Canada, Puerto Rico and the U.S. Virgin Islands.

Artin North America
HOTLINE: 1-800-972-7846
E-mail: sales@artin.com.hk

 
Industry Canada Notice
Carrier frequency: 27.145MHz. Field strength: ** dBuV/m at 3m
This device complies with RSS-310 of Industry Canada. Operation is subject to the following two conditions:
(1) the device may not cause interference, and
(2) the device must accept any interference, including interference that may cause undesired operation of the device.
This category II radio communication device complies with Industry Canada Standard RSS-310.

ARTIN®

INSTRUCTION MANUAL

CONTENT

CAR x 1
CAMERA (Detachable) x1
CONTROLLER (With Video Display) x1

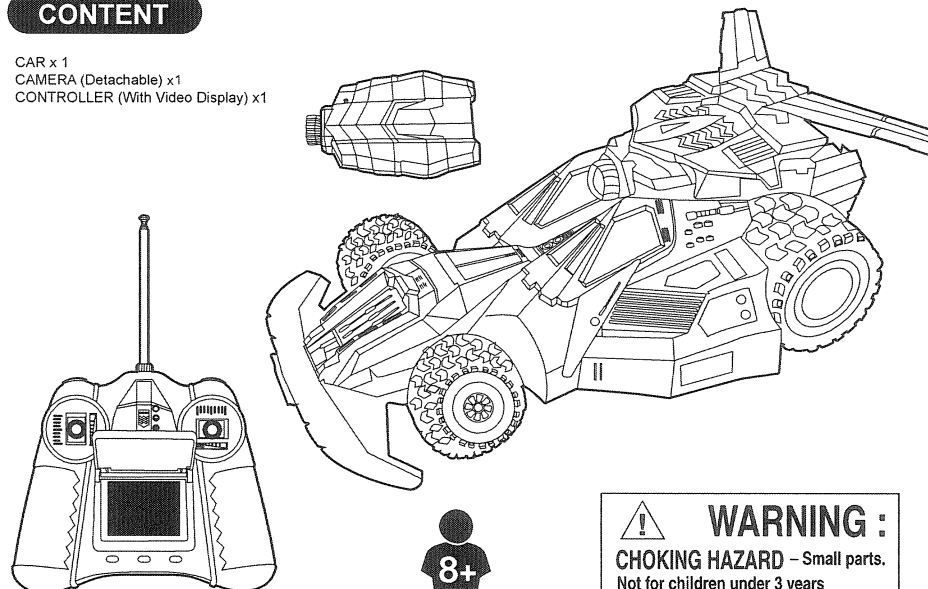

WARNING :
CHOKING HAZARD - Small parts.
Not for children under 3 years



IMPORTANT

GENERAL:

- Do not leave batteries in the vehicles or the controller when the toy is not in use.
- Dispose of old batteries in the proper manner, do not burn or place near fire.
- Not suitable for children under 3 years of age due to small parts.
- A screwdriver is not a toy.
- Do not give the screwdriver to children.
- When the vehicle slows down or does not operate properly, change the batteries.
- Do not leave vehicle in direct sunlight for lengthy periods.

BATTERY:

- Switch the toy to the "off" position before inserting batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before being charged.
- Do not mix old and new batteries together.
- Do not mix different types of batteries. Only batteries of the same or equivalent type as recommended are to be used.
(Alkaline batteries are recommended for use with this toy.)
- Batteries are to be inserted with the correct polarity
- Exhausted batteries are to be removed from the toy
- The supply terminals are not to be short-circuited.