



INSTALLING BATTERIES

IMPORTANT!

- Do not leave batteries in the vehicle or the transmitter when the toy is not in use.
- Do not use old and new batteries together.
- Do not mix different types of batteries. Only batteries of the same or equivalent type as recommended are to be used.(e.g. alkaline, Ni-Cd rechargeable, and manganese, or other non-alkaline batteries)
- Dispose of old batteries in the proper manner; do not burn or place near fire.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.
- Not suitable for children under 3 years of age due to small parts.
- Remove rechargeable batteries from the unit before recharging.
- The screwdriver is not a toy.
- Do not give the screwdriver to children.
- Change the car body by adult only.
- Exhausted batteries are to be removed from the toy.

BATTERY REQUIREMENTS

- This vehicle requires 4 "AA" (LR6) batteries (alkaline or Ni-Cd rechargeable batteries), and one 9V (6LR61) (alkaline) (6F22) (carbon zinc) battery for the transmitter.

INSTALLING THE BATTERIES


TRANSMITTER

Removal of the battery cover requires a "phillips head" screwdriver. See Figure 1. After removing this screw, slide the cover downward to remove. Place the 9 V battery in position so that the (+) and (-) are in the proper alignment as noted. Replace screw to battery cover. See Figure 2.

Figure 1



Figure 2

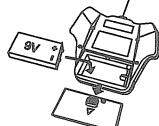

VEHICLE

Removal of the battery cover requires a "phillips head" screwdriver, push the tab on the battery compartment lid and slide the lid back on its hinge. See Figure 3. Make sure the "AA" batteries are new or freshly charged batteries (Do not mix old or used batteries with new batteries). Place the batteries in the battery compartment being sure that the (+) and (-) poles of the batteries are positioned correctly. See Figure 4. Replace the cover.

Figure 3


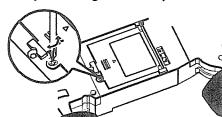


Figure 4

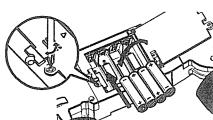

OPERATING R/C CAR

IMPORTANT!

- Do not use vehicle in mud, water, snow, or sand.
- Do not play with vehicle in the street.
- Do not crash vehicle into any object at high speeds.
- When the vehicle slows down install new or freshly charged batteries.
- Clean the vehicle with a damp paper towel after operating. (Do not use any chemicals to wipe off car)
- Do not leave vehicle in direct sunlight for lengthy periods.

OPERATING CAR

- Turn the car switch to "ON". (Located on bottom of car) See Figure 5.
- Screw the antenna on the top of the transmitter and extend to full length. See Figure 6.

Figure 5


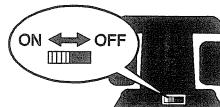


Figure 6

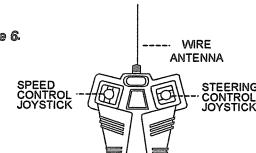

WARNING:

**CHOKING HAZARD - SMALL PARTS.
NOT FOR CHILDREN UNDER 3 YEARS.**

3. Start operating by moving speed control joysticks on the left forward. See Figure 7.

4. Release both control joysticks, the vehicle will stop. See Figure 8.

5. Vehicle steering is controlled by joystick on right by moving left or right. See Figure 9.



6. Do not let vehicle get out of transmitting range as you will then have no control. This range varies due to surroundings.

7. When finished, turn all switches to off position and remove all batteries. Vehicle operation varies from 35 to 45 minutes depending on how the car is used, and the age of the batteries.

Figure 7



Figure 8

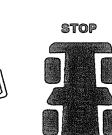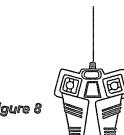

WHEEL ALIGNMENT

Your steering can be adjusted with the trim switch located on the bottom chassis area. Turn either left or right until you have made the adjustment to maintain a straight path of movement. See Figure 10.

Figure 10



THINGS YOU SHOULD KNOW

- Radio interference can cause your car to react strangely.
- Another vehicle operating on the same frequency can disrupt your controlling the vehicle.
- CB's, cellular telephones, two way radios, and other transmitting devices, and high tension wires may cause interference with operation.
- Your vehicle can sometimes cause interference with television or even radio reception. Move to another area if you notice this occurrence.


CHARGING THE BATTERY (IF APPLICABLE)

- Plug charger into a standard household outlet (110/120 Volt). See Figure 11.
- Join together the plug from the battery to the receptacle plug attached to the charger wires. Be sure to get a firm fit by having the ridge snap into place with the clip. See Figure 11.
- Allow battery to charges for 6-8 hours for a complete and full charge. Additional charging will not improve your battery's output, and could eventual damage the battery. Do not charge a battery if you notice it leaking or see corrosion on any part of the battery.
- A characteristic of Ni-Cd batteries is a loss of power quickly. A spare battery is therefore recommended for longer play, and happier operators.
- If the battery is hot after operation please wait until it is cool before recharging. Attempting to recharge a battery in this condition can reduce the life of the battery and maybe cause damage later.
- The rechargeable battery must be charged with the recommended battery charger.
- The battery charger is not a toy.
- The battery charger is to be regularly examined for damage to the cord, plug enclosure and other parts, in the event of such damage; the rechargeable batteries must not be used with this battery charger until the damage has been repaired.

NATURE POWER OF SUPPLY

Receiver : 4.8V == 1.2A

Transmitter : 9V == 0.05A

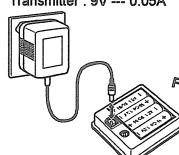

**90 DAY
WARRANTY**
ARTIN warrants this product against manufacturer's defects for a period of 90 days from the date of purchase. Please keep your sales receipt with the packaging for that period of time. (No cash back) Please call our HOTLINE 1-800-97-ARTIN(27846)

Within this period of time (90 days) we will repair or replace without charge for any manufacturer's defects only. This warranty does not cover damage and/or depreciation caused by normal wear and tear, misuse, abuse, or damage from dampness, or any other damage related to misuse or damage by this warranty. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

HOTLINE HOURS :
10:00 A.M. - 5:00 P.M. MONDAY - FRIDAY (EXCEPT HOLIDAYS)
ARTIN, INC. 1000 HILLSDALE AVENUE, HILLSDALE, NEW JERSEY, FAX: 1-201-471-5617
HOTLINE: 1-800-972-7746 Email: artinwarranty@aol.com

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Radio Control Vehicle
Full Function Buggy Series
Scale: 1:16
MCS: 316501840-002

CAUTION - ELECTRIC TOY
Not Recommended For Children Under 6 Years Of Age. As With All Electrical Products, Precautions Should Be Observed During Handling And Use To Reduce The Risk Of Electric Shock.
INPUT: 120V AC 60Hz 4.5W ONLY OUTPUT: 9V DC 180mA