



國際電器認證中心有限公司 International Electrical Certification Centre Ltd.

提供電器產品測試國際認證及諮詢服務 Technical Services in Electrical Product Testing, International Certification & Information

Agent of 
Accredited Laboratory

FCC ID: L9G9900R

Exhibit 6 - User's Manual

Head Office

Unit 602-605, 6/F, 31 Lok Yip Road, On Lok Tsuen, Fanling, NT, Hong Kong Tel (852) 2305 2570 Fax (852) 2756 4480

香港新界粉嶺安樂村樂業路31號6樓602-605室 電話 (852) 2305 2570 傳真 (852) 2756 4480

21 JAN 1998



INSTALLING THE WIRELESS CONTROLLER'S BATTERY

Removal of the battery cover requires a "phillips head" screwdriver. See Figure 1. After removing this screw, slide the cover downward to remove. Place the 9V battery in position so that the (+) and (-) are in the proper alignment as marked inside the battery cover. See Figure 2. Replace screw to battery cover.

Cautions:

- Use only fresh batteries of the required size and type.
- Do not mix old and new batteries.
- Never mix alkaline batteries with other types of batteries.
- Never leave dead or weak batteries in the transmitter.
- If you do not plan to use the Race Set for several days, remove the batteries.
- Dispose of batteries promptly and properly; do not bury or burn them.

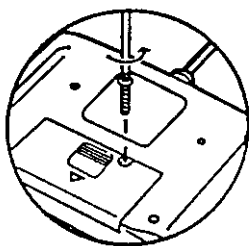 


Figure 1

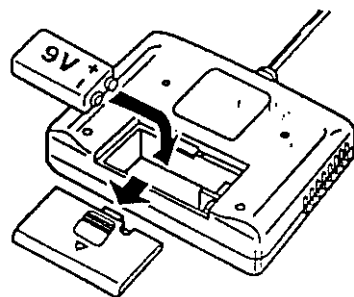 


Figure 2

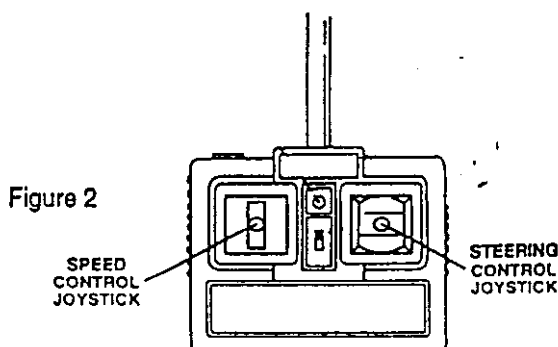 


Figure 2

OPERATION

Cautions:

If the Race Cars move slowly, and you have to install fresh batteries. Check the wheel mechanisms and remove any lint, thread, hair, or dust you find.

Follow These Steps To Operate Race Set:

1. Attach power pack cord to receiver.
2. Plug in the adaptor to a 120 V outlet.
3. Squeeze the trigger gently to start racing.

Help Hints:

These hints can help you get the most enjoyment from your Race Set.

- If the Cars move slowly or not at all, replace the transmitter batteries.
- If someone uses a CB nearby, it might interfere with control of the Race Set, if this happens, move the Set away from the CB.
- You cannot operate your Race Set near devices with transmitter which use the same frequency.
- Metal rails must be kept clean. Wipe rails completely before using.
- If the cars are not moving smoothly, or stop during operation, there may be interference by home appliances or a portable telephone. Please take the transmitter, and move to another position.

CARE AND MAINTENANCE

The following suggestions will help you care for your Race Set so you can enjoy it longer.

- Do not expose the components (transmitter and receiver) to temperature extremes.
- MODIFYING OR TAMPERING WITH THE RECEIVER OR THE TRANSMITTER COMPONENTS CAN CAUSE A MALFUNCTION AND MIGHT INVALIDATE THE WARRANTY AND VOID YOUR FCC AUTHORIZATION TO OPERATE THEM.**


THE FCC WANTS YOU TO KNOW

Your Race Set might cause TV or radio interference even when it is operating properly. To determine whether your Race Set is causing the interference, turn off your Race Set. If the interference goes away, your Race Set is causing the interference. Try to eliminate the interference by:

- Moving your Race Set away from the TV or radio.

ARIN® FULLY CONTROL RACING WIRELESS RADIO CONTROL ROAD RACING

THIS SET CONTAINS

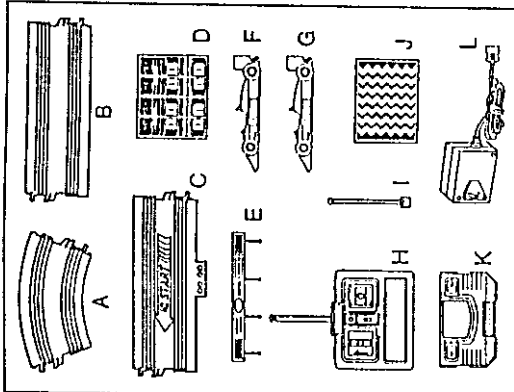

- A 8 PCS CURVED TRACKS
- B 7 PCS STRAIGHT TRACKS
- C 1 PC POWER INTAKE TRACK
- D 1 SET SHEET OF FLAGS
- E 6 PCS ADVERTISING BOARDS AND LABELS
- F 2 PCS FORMULA-1
- G 2 PCS TRANSMITTER
- H 10 PCS FLAG POLES
- I 1 SET SHEETS OF ARROWS
- J 1 SET TRANSFORMER
- K 1 SET RECEIVER
- L 1 SET CAR

ASSEMBLY PROCESS

1. Assemble as Figure 1. It is easier to assemble the tracks upside down. You can see better the system. Assemble the layout as Figure 2.
2. Stick the flags labels on the flag poles Figure 3. Install flags and advertising boards onto the track following the location as Figure 2.
3. Plug the radio-control receiver into the power intake track as Figure 4, then plug the adaptor socket in the radio-control receiver as Figure 5.
4. When the car is completed, wipe off the dust on the track with dry cloth. Place the car on the track. Check that the brushes on the bottom of the car are in a vertical position and make contact with track.
5. Your car is now ready for racing.

HOW DOES IT WORK

1. Release both control joystick, the vehicle will stop.
2. When steering is controlled by joystick on right by moving left or right. So steering is controlled by joystick on left by moving right or left. So steering is controlled by joystick on right by moving left or right. So steering is controlled by joystick on left by moving right or left.
3. Always check the brushes to make sure there is no dirt on them otherwise the car cannot race smoothly.
4. Push the left joystick to the turbo position to increase speed, let it out to decrease speed. Reduce speed when going into a curve. Considerable skill can be developed in the fascinating study of where to shut off and to re-apply power.

NATURE OF POWER SUPPLY

ADAPTOR: PRI : 120 V - 60 Hz
SEC : 2 x 6 V = 12 V

BATTERY:
USE: 9V BATTERIES x 2
TYPE: CARBON, ALKALINE
SIZE: OOSP

NOTE:
This toy must only be operated through a adaptor complying with CEE publication 15. Parents should regularly examine the adaptor for potential hazards such as cable, plug and enclosure damage. The toy must not be used until that damage has been properly repaired. It is recommended that parents or adults connect the toy to the power supply. Please note that your approved adaptor includes a circuit breaker that will cut off power to the connector panel in the following happens:
A. A short circuit occurs on the track.
B. The set is played for more than an hour continuously.

WARNING:
Do not hold the car on track during operation as it might cause the motor and the receiver be damaged by overheating. Do not place the metal objects (such as hair pins or paper clips) on the track during operation, as a result the receiver will be damaged by overheating. Please disconnect the power source when the set is not in use. Do not assemble, or operate your racing set on a carpeted surface. It is safe to remove all packaging wires and plastic bags before presenting item to children. The toy must only be used with the recommended transformer. The transformer is not a toy. The toy is not to be connected to more than the recommended number of power supplies. The packaging has not been replaced it contains important information.

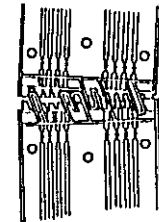 


Figure 1

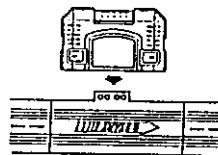 


Figure 4

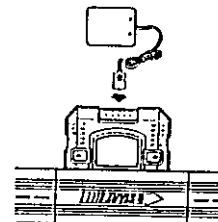 


Figure 5



Figure 3

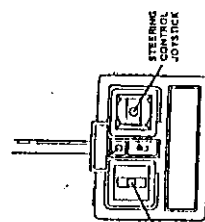 


Figure 6

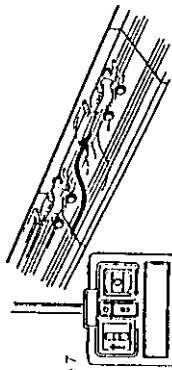 


Figure 7

ITEM NO.

9900