

- d. Press OK KEY to enter the selected folder.
All the received messages that are saved in this folder will be listed in chronological order.



- ※ The MESSAGE LIST will display with the folder name, source name and message preview.
- e. Press ▲▼ KEY then OK KEY to select and read the desired message.

8-1-4. MESSAGE PROTECT

For Message Protection purpose, when **Message Protect** is activated in the Pager Programming Software, the read messages are protected by pre-set password. You need to enter the password to open the MESSAGE BOX.

- Press MENU KEY, the feature list will display, and the cursor will stay on "MESSAGE BOX".
- Please press OK KEY to enter MESSAGE BOX.
- "PASSWORD" screen will display.
- Press ▲▼◀▶ to enter the password.



- e. If the password is correct. The FOLDER LIST will display on the screen.
- f . If the password is incorrect, an "ERROR WARNING" will display.
- ※ If the password is incorrect for 3 times, the E5 will return to stand-by mode. Please follow the same steps to read the messages.



- 8-2. MESSAGE ACKNOWLEDGEMENT(ONLY FOR GSM MODEL)
E5 GSM Model provides four features for the Message Confirmation:
 1. RECEIVED ACK (Received Confirmation)
 2. READ ACK(Read Confirmation)
 3. RESPONSE ACK(Response Confirmation)
 4. ACK (Confirmation) STATUS



8-2-1. RECEIVED ACK (Received Confirmation)

When a GSM Received ACK requested message is received, the pager GSM module will be automatically activated, a GSM signaling icon  will display on the status bar, the pager will then send out a "RECEIVED ACK" automatically.

After sending out the RECEIVED ACK, a “ACK SEND SUCCESS” text will display on the LCD to indicate the “RECEIVED ACK” transmission. After the message is sent, the GSM Module will turn off and the GSM antenna icon will disappear.

8-2-2. READ ACK(Read Confirmation)

- a. When a GSM Read ACK requested message is received, the pager will automatically activate GSM module when the message is read.
- b. A GSM signaling icon  will display on the status bar and “READ ACK” will be sent automatically.
- c. After sending out the READ ACK, a “ACK SEND SUCCESS” displays on the LCD to indicate the “READ ACK” transmission.

8-2-3. RESPONSE ACK(Response Confirmation)

 
When a GSM RESPONSE ACK requested message is received, the LCD will display “New ACK MESSAGE”. On the tool bar, there will be an “RESPONSE ACK” icon displays on the tool bar for you to send out the SMS confirmation.


- Press ◀▶ to move the cursor to  “RESPONSE ACK”.
 - Press OK to display the “Confirmation List”.
 - The cursor will stay on the first SMS option.
 - Press ▲▼ to select the desired option.
 - Press OK to send the selected option.
- “Sending ACK” indication will display on the LCD.



8-2-4. ACK (Confirmation) STATUS

After sending the SMS confirmation, ACK STATUS allows you to check out the acknowledgement status to see if all the acknowledgements are sent successfully.

- In Message Screen, press ◀▶ to move the cursor to  "ACK STATUS".
- Press OK to display the "ACK STATUS". The status of sending the SMS confirmation will be displayed on the screen.

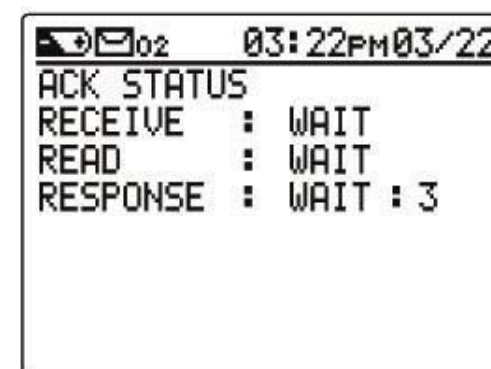

► 8-3. OTHER FEATURES

While reading the messages, the E5 TOOL BAR will provides you with the following features:

8-3-1. ZOOM IN/ OUT

To read the messages with larger character size, you may zoom in the message.

- Press ◀▶ to move the cursor to "ZOOM IN".
- Press OK KEY to confirm the setting. The message that you are reading will display with larger characters immediately.
- At this moment, "ZOOM IN" feature will change to "ZOOM OUT". You may directly press OK KEY to zoom out the message. The message will display as default setting.



8-3-2. MESSAGE LOCK/ UNLOCK

If the message you are reading is very important, you may lock this message to protect.

- a. Press ◀▶ to move the cursor to "LOCK".
- b. Press OK KEY to confirm the setting.

After locking the message, a  icon will display.



- ※ When a message is locked, it is protected from deletion, unless the "lock" is removed.

8-3-3. MESSAGE ALARM

If the message you are reading is important and you need to read it again at a certain time, you can set up a message alarm. When the setting time is up, the pager will alert and remind you to read the message.



- 8-3-3-1. ACTIVATE MESSAGE ALARM
 - a. On message screen, press ◀▶ to move the cursor to "MESSAGE ALARM".
 - b. Press OK KEY to enter "ALARM SETTING". The alarm setting screen displays, and the cursor will stay on "ACTIVATE ALARM".
 - c. Press ▲▼ to switch the message alarm "ON" or "OFF" to enable or disable the MESSAGE ALARM.

- 8-3-3-2. ALARM TIME SETTING
 - a. Press ◀▶ to move the cursor to "HOUR" then press ▲▼ to switch the figures.
 - b. Press ◀▶ to move the cursor to "TEN'S MINUTE" then press ▲▼ to switch the figures.
 - c. Press ◀▶ to move the cursor to "UNIT'S MINUTE" then press ▲▼ to switch the figures.
- 8-3-3-3. SAVE SETTINGS
 - a. After all the settings are completed, press ◀▶ to "SAVE".
 - b. Press OK KEY to confirm Alarm settings.

※ After the message alarm setting, this message will not be able to be deleted till the alarm setting is removed.



8-3-4. DELETE MESSAGE

While reading a message, you may delete the message.

- a. Press ◀▶ to move the cursor to "DELETE MESSAGE".
 - b. Press OK KEY to delete this message.
 - c. A confirmation window will display on the screen.
Press OK KEY to "YES" to confirm the deletion.
 - d. Press ◀▶ to "NO" then OK KEY to cancel the deletion.
- ※ After deleting a specific message, the next message will display on the screen. If there is no more message in the reading folder, the screen will display FOLDER LIST.



8-3-5. DELETE ALL MESSAGES

You may delete all the messages in this folder:

- Press ◀▶ to move the cursor to "DELETE ALL".
- Press OK KEY to delete all the messages.
- A confirmation window will display on the screen. Press the OK KEY and select "YES" to confirm the deletion.



※ There is no "DELETE ALL " feature in "NOTEBOOK" folder.

8-3-6. MOVE TO NOTEBOOK

After reading a message, if this message is important, you can move this message to NOTEBOOK FOLDER. The messages in the NOTEBOOK FOLDER will not be auto-deleted when the pager text memory size is full:

- a. Press ◀▶ to move to "MOVE TO NOTEBOOK", then press OK KEY to confirm the setting.

The selected message will be saved in NOTEBOOK.



8-3-7. BACK

After reading the messages, press BACK to return to Message List:

- a. Press ◀▶ to move the cursor to "BACK", then press OK KEY, the screen will return to MESSAGE LIST.

9. EMERGENCY MESSAGE (GSM MODEL ONLY)

For the security purpose , The E5 GSM Model provides Emergency Message for the pager users to send out the preprogrammed emergency message to the assigned GSM number or GPRS IP address in case the pager users are in need for help.

► 9-1 TO ACTIVATE THE EMERGENCY MESSAGE

Function status key is a programmable key to be as a SOS button, when SOS button is enabled in the PPS, pager user can send out an emergency message via operating the pager.

※ The Emergency Message can only be activated when the pager has an active LCD screen i.e. standby or menu screen .

To operate Emergency from ECM condition , The screen must first be made active with a short press of any key.

- a. Press the SOS button  for 3 seconds, a chirp alert will be generated to remind the SOS button has been pressed.
- b. A confirmation will be displayed on the LCD, press ► to “YES” then press OK to confirm sending the emergency message.
- c. When sending the emergency message is activated, “SENDING EMERGENCY MESSAGE” will be displayed on the LCD.
The GSM antenna  will be displayed on the status bar.
- d. When the emergency message is sent, the GSM module turns off.

10. FUNCTION STATUS



When SOS button is not enabled in the PPS,  is the Function Status key for a quick view of the features' status. Function Status is a shortcut for you to view the status of frequently used functions and a quick approach for you to change the settings. The E5 provides 2 methods to enter FUNCTION STATUS.

► 10-1. ENTERING FUNCTION STATUS

10-1-1. PRESSING FUNCTION STATUS KEY TO ENTER

- a. In stand by mode, you can simply press FUNCTION STATUS KEY to enter FUNCTION STATUS directly.

10-1-2. ENTERING FROM MENU

- a. Press MENU KEY, the MAIN MENU will display on the screen.
- b. Press ▲▼ to move to "FUNCTION STATUS".
- c. Press OK KEY to enter the "FUNCTION STATUS" screen.

► 10-2. FUNCTION ENABLE/ DISABLE/ SETTINGS

10-2-1. ALERT MODE

- a. After entering to the FUNCTION STATUS, the cursor will stay on ALERT MODE, and the current status will also be displayed.
 - b. Press OK KEY to switch between alert modes.
 - c. Current alert mode status will also be changed while switching through the alert modes.
 - d. There are 3 alert modes: AUDIBLE/ VIBRATION/ SILENT.
 - e. After an alert mode is selected, the change will be automatically saved.
 - f. If you would like to enter the full setting screens, please press ► to move the tool cursor to "ENTER" then press OK.
- ※ The full setting operations of ALERT MODE is exactly same as the operations in PAGER SETTINGS-Alert Settings.



10-2-2. ON/ OFF DUTY

- a. After entering the FUNCTION STATUS, please press ▲▼ KEY to move to ON/OFF DUTY. The current status of ON/OFF Duty will also be displayed.
 - b. Press OK KEY to switch between ON or OFF.
 - c. Current duty status will also be changed while switching through the status. Only ON and OFF are in switch.
 - d. After a duty mode is selected, the change will be automatically saved.
 - e. If you would like to enter to the full setting screens, please press ► to move tool cursor to "ENTER" and press OK.
- ※ The full setting operations of ON/ OFF DUTY is exactly same as the operations in SETTINGS-ON/ OFF DUTY.



10-2-3. PROFILE

- a. After entering the FUNCTION STATUS, please press ▲▼ KEY to move to PROFILE. The current PROFILE in use will also be displayed on the Profile item.



- 10-2-3-1. Operations for Single Profile:
 - a. When the cursor stays on “PROFILE”, press OK KEY to switch profiles.
 - b. Current receiving mode status will also be changed while switching through the profiles.
 - c. The profiles to choose are based on pre-programmed settings in the Pager Programming Software.
 - d. After a profile is selected, the change will be automatically saved.

- e. If you would like to enter to the full setting screens, please press ► to move tool cursor to "ENTER" and press OK.
- 10-2-3-2.Operations for Multi-Profile:
When Multi-Profile is activated, the standby mode will display with "Multi-Profile". The Profile item listed in the Function Status will be named with "Multi-Profile". Then Function Status is only for a quick approach to enter the "Profile" setting, but not allowed to switch the default activated Profile through OK key.
 - a. If you would like to enter to the full setting screens, please press ► to move tool cursor to "ENTER" and press OK.
- ※ The full setting operations of PROFILE is exactly same as the operations in PAGER SETTINGS. Please refer to PAGER SETTINGS-PROFILE.

10-2-4. CLOCK ALARM (5 Alarms)

- a. After entering the FUNCTION STATUS, please press ▲▼ to move to ALARM 01~05.

The current status of the selected alarm will also be displayed.


- b. Press OK KEY to switch ON or OFF.

- c. Current status will also be changed while switching.

- d. After the status is selected, the change will be automatically saved.

- e. If you would like to enter to the full setting screens, please press ► to move tool cursor to "ENTER" and press OK KEY.

- ※ The full setting operations of Alarm is exactly the same as the operations in SETTINGS. Please refer to SETTINGS-ALARM.

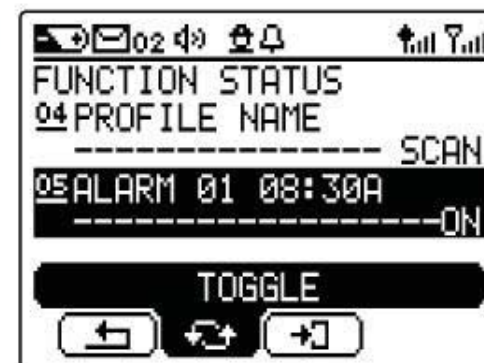

11. SETTINGS



There are more features you can activate in SETTINGS.

- Press MENU KEY, the MAIN MENU will display on the screen.
- Press ▲▼ then OK KEY to move to SETTINGS.

► 11-1. PROFILE

- After entering SETTINGS, the cursor will stay on PROFILE.
- Press OK KEY, the PROFILE list will display.
- Press ▲▼ to select the profile that you want to activate.

※ When “Multi-Profile” is activated, you are allowed to activate more than one Profile.

- Press ◀▶ OK KEY to confirm the selection, a ✓ will label with the profile that you just selected.



e. Press ◀▶ to move to "SAVE" and press OK KEY to save the setting.

▶ 11-2. TIME & DATE

a. After entering SETTINGS, please press ▼ to move to TIME & DATE. Press OK KEY to enter TIME & DATE settings. In TIME & DATE SETTINGS, you may set up the TIME & DATE and display format of date.



11-2-1. TIME & DATE

a. Press OK KEY to enter TIME & DATE.
In TIME & DATE screen, the cursor will stop on HOUR Setting.

b. Press ▲▼ to adjust the figures on "HOUR SETTING."



- c. Press ◀▶ to move the cursor to "MINUTE SETTING."
- d. Press ▲▼ to adjust the "MINUTE SETTING."
- e. Press ◀▶ to move the cursor to "HOUR FORMAT SETTING."
- f. Press ▲▼ to adjust among the hour format options.
- g. Press ◀▶ to move the cursor to "DAY SETTING."
- h. Press ▲▼ to adjust the "DAY SETTING."
- i. Press ◀▶ to move the cursor to "MONTH SETTING."
- j. Press ▲▼ to adjust the "Month."
- k. Press ◀▶ to move the cursor to "YEAR Setting."
- l. Press ▲▼ to adjust the "YEAR".
- m. Press ◀▶ to move the cursor to "SAVE" then press OK KEY to save the settings.

11-2-2. DATE FORMAT

In TIME & DATE screen, press ▼ then OK KEY to enter DATE FORMAT.

- Press ▲▼ to select a specific format to display the date.
- Press OK KEY to confirm the selection.
- Press ◀▶ to move to "SAVE" and press OK KEY to save the setting.



11-2-3 DAYLIGHT SAVING

In TIME & DATE screen, press ▼ then OK KEY to enter DAYLIGHT SAVING.

When enable DAYLIGHT SAVING, the real time running of the pager timer will be automatically advanced one hour.

When disable DAYLIGHT SAVING, the pager will automatically adjust the real time one hour back.

- Press ▲▼ to select enable or disable.
- Press OK KEY to confirm the selection.

The real time will be automatically adjusted after the selection.



► 11-3. CLOCK ALARM

The E5 provides 5 alarms for you to activate. You are allowed to set up the specific time for each alarm.

- In SETTINGS screen, press ▲▼ to move to "CLOCK ALARM".
- Press OK KEY to enter "CLOCK ALARM."



※ The alarm list will display with alarm status and alarm time.

- Press ▲▼ KEY to select a certain alarm.
- Press OK KEY to enter the selected "ALARM."



In ALARM setting screen, there are 4 settings to be set up:

11-3-1. ACTIVATE ALARM

- Enter the ALARM setting screen, the cursor will stay on the "ALARM."
- Press ▲▼ to switch the Alarm On or OFF



11-3-2. ALARM TIME

- Press ◀▶ to move the cursor to "HOUR SETTING."
- Press ▲▼ to adjust the figure.
- Press ◀▶ to move the cursor to "TEN'S- MINUTE" then press ▲▼ Key to adjust the figures.
- Press ◀▶ to move the cursor to " UNIT'S MINUTE" then press ▲▼ Key to adjust the figures.

11-3-3. CYCLE ALARM

- Press ◀▶ KEY to move the cursor to CYCLE ALARM.
- Press OK KEY to enter the cycle setting.
- Press ▲▼ to move the cursor to the specific cycle then press OK KEY to check the selection. A ✓ will label with the selected option. (Multi-options)
- Press ◀▶ KEY to move the cursor to "SAVE" then press OK KEY to confirm the settings. After saving the settings, the screen will return to ALARM List.



11-3-4. SNOOZER

- a. Press ◀▶ to move to "SNOOZER".
- b. Press ▲▼ to select among the options to enable the snoozer and determine the interval time for activating the snoozer.

11-3-5. SAVE

- a. Press ◀▶ to move to "SAVE".
- b. Press OK KEY to save the settings. There will be a "SAVED" window displayed on the screen.