



## **Operational Description**

### **I . Installing the Video Driver (Windows 95/98)**

To install the video driver, refer to the following sequence.

    Select Start/Setting/Control Panel.

    Click Add New Hardware.

    Click Next.

    Click Next after selecting No, the device isn't in the list.

    Click Next after selecting No, I want to select the hardware from a list.

    Click Next after selecting Monitors.

    Click Have Disk...

    Insert the supplied 3.5 floppy disk to A Drive.

    Select OK.

    Select Next after selecting the same model which you purchased.

    Click Finish.

### **II. Connections**

To make a normal connection to the monitor, bring a cord from a camera or other video source to one of the BNC jacks or from a PC to the PC jack on the back of the monitor, Either the left or right BNC jack can be used for input. To other jack may be optionally connected to another user of the same signal.

#### **Auto Termination**

The input circuit of the monitor normally terminates the incoming cable in 75ohms, but these BNCs jack are auto-terminating. When two cables are connected, the internal termination is switched out, letting the final destination equipment provide the end termination. This arrangement is also specially offered for the Y/C(S-Video) jacks.