


BATTERY CHANGE

FOR HEADPHONE :

1. Make sure headphone receiver is off.
2. Slide open battery compartment cover.
3. Insert two AA (1.5V) batteries with the (+) and (-) poles correctly aligned into the battery compartment. Alkaline type or ni-cd rechargeable type batteries are recommended.
4. Close the battery compartment.

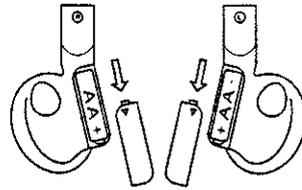

TROUBLESHOOTING GUIDE

SYMPTOM	CAUSE	SOLUTION
No sound	Headphone is not turned on.	Turn on the headphone.
	Batteries are exhausted.	Change batteries.
	Transmitter's power is off.	Turn on the transmitter's power.
	Headphones' volume is completely turned down.	Turn the volume up.
	Automatic "muting" at headphone	Move closer to transmitter.
Poor sound quality	Headphones' batteries are weak.	Change batteries.
	Out of range	Move closer to transmitter or adjust the transmitter antenna.

TECHNICAL SPECIFICATIONS

Communication level mode	Frequency modulation (quartz locked)
Communication level	Stereo
Power requirement:	
Transmitter	6v 200mA AC/DC adapter
Headphone (receiver)	3V (2 x 1.5V AA / LR06 /UM3 Alkaline, Ni-Cd batteries)
Frequency Response	30-15000Hz
S/N Ratio	50 dB
Distortion	< 1% dB


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

P 4

INSTRUCTION MANUAL


Stereo

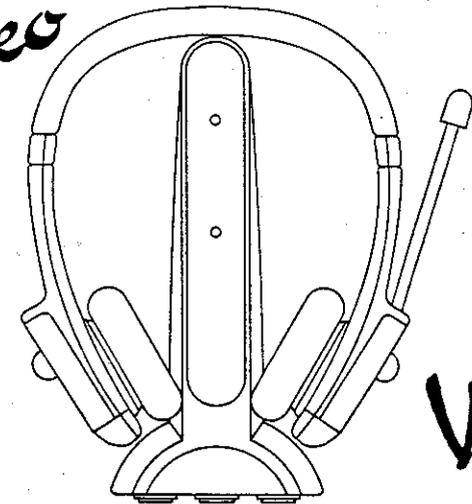

VHF

VHF CORDLESS HEADPHONE SYSTEM

SYSTEM COMPONENTS

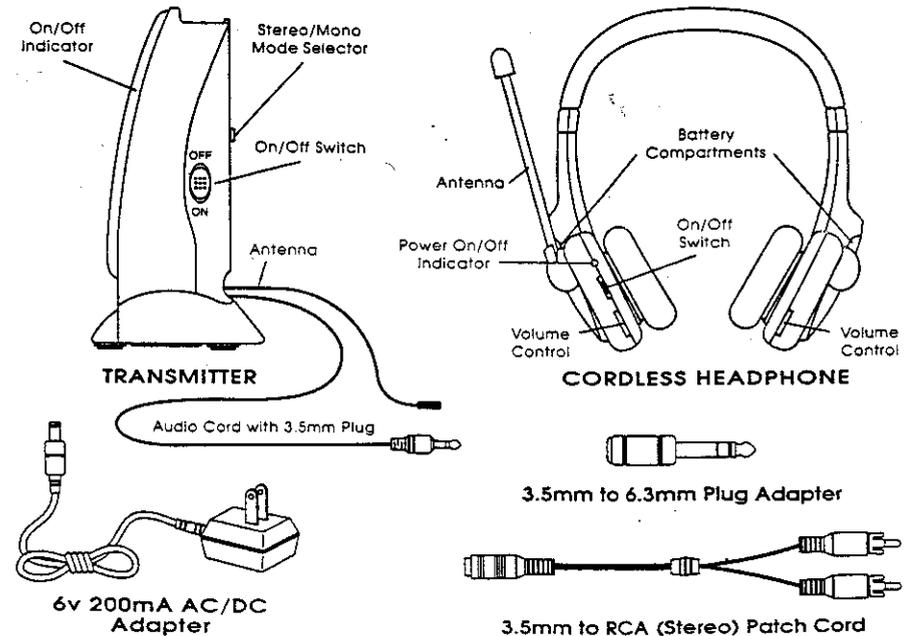


P. 1

INSTALLATION


For the following illustration, we use television as the audio source equipment. For actual usage, you may select any type of audio source equipment for connection.

I. Equipment with 3.5mm phone jack

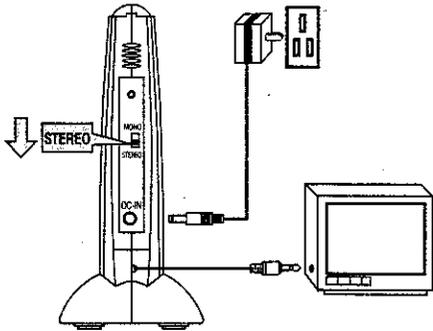


If the audio-out jack of your equipment is a 3.5mm type, connect the audio out jack with the audio cord attached at the back of the transmitter.

II. Equipment with 6.3mm phone jack

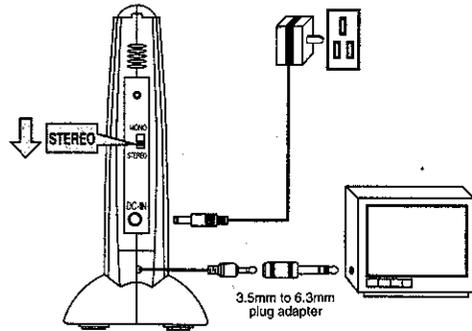

If the audio-out jack of your equipment is a 6.3mm type, plug in the supplied "3.5mm to 6.3mm plug adapter" to the audio-out jack of your equipment, then connect it with the audio cord attached at the back of the transmitter.

III. Equipment with RCA jack

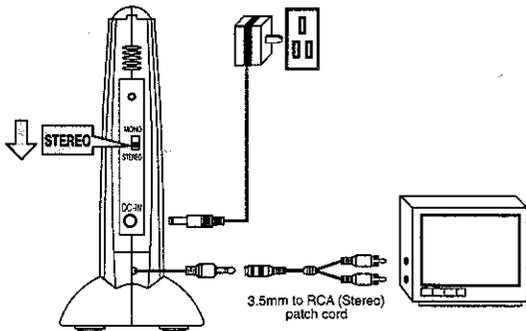

If the audio-out jack of your equipment is a RCA type, plug in the supplied "3.5mm to RCA (stereo) patch cord" to the audio-out of your equipment, then connect it with the audio cord attached at the back of the transmitter.

IMPORTANT :

The "MONO/STEREO" switch at the rear panel of the transmitter should always be set at "STEREO" position for best sound reproduction. Switch to "STEREO" mode when your audio/ video equipment is a stereo type.

IMPORTANT : CONNECTION TO MONO EQUIPMENT


Switch the position to "MONO" whenever you encounter the following situations.

- when your audio/video equipment is a **mono** type.
- only one side of the headphone is heard.

POSITION OF THE TRANSMITTER

This cordless headphone system is designed for indoor use within a distance of 25 meters between the transmitter and the receiver. The picture below shows how the signal covers the area.


Should you experience any interference on the headphone, move to another location. Adjusting the transmitter antenna up, down or sideways, may also resolve the interference.

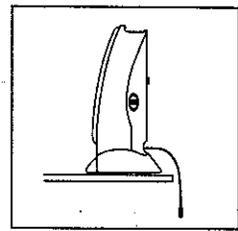

IMPORTANT :

To obtain best performance from this system, please make sure that the transmitter's antenna is fully extended as shown.

Note : Do not place the transmitter in a location near sources such as radiators, heater, or any place subject to direct sunlight or vibration.

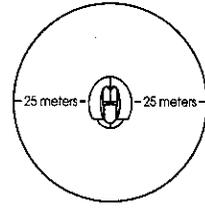

OPERATION

1. Turn on your audio equipment and the transmitter. You will be able to see the LED power indicator light go on at the transmitter.
2. Set the volume of your audio equipment at medium level.
3. Turn on the headphone receiver, the LED power indicator should go on. Adjust the size of the headphone by pulling up or down on each side until it fits on your head comfortably. Adjust the audio volume as desired.