



Karaoke Kid Bluetooth® Mic with Stand

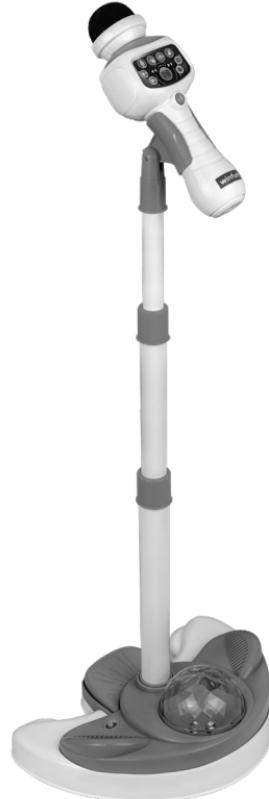


36m
+

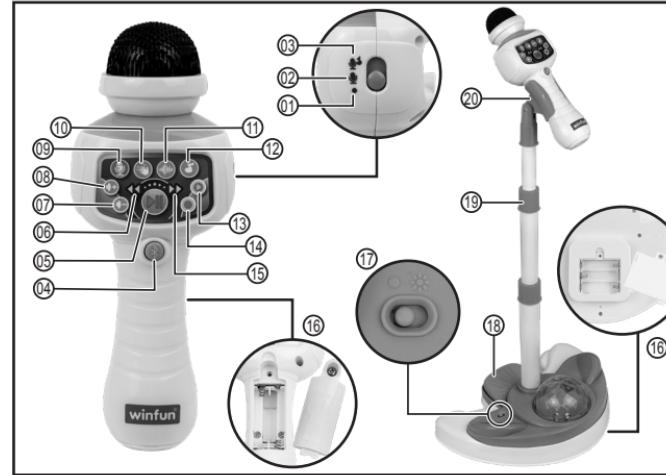

EN

Diagram
01) Mic Off switch
02) Mic On switch
03) Karaoke function switch
04) Bluetooth® pairing button
05) Play/Pause button
06) Previous track button
07) Volume down button
08) Volume up button
09) Voice changer button
10) Applause button
11) Beatbox rhythms button
12) Melody button
13) Recording playback button
14) Voice recording button
15) Next track button
16) Battery compartment
17) Mic stand base On/Off switch
18) Foot pedal button
19) Adjustable mic stand
20) Mic holder

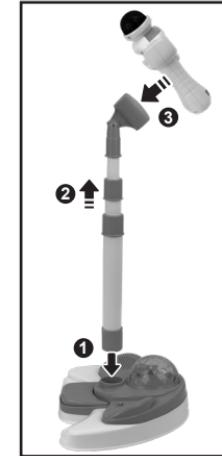

EN

How to play
To start/Amplifying effect
Slide the switch to On position, sing or talk into the mic for an amplifying effect.
Karaoke function
Slide to this position to reduce the main vocal track of the song. Sing into the mic with karaoke function.
Bluetooth® pairing
To connect the Bluetooth® to your own device/external music player.

How to connect Bluetooth®
1. Make sure no other Bluetooth® devices nearby (e.g. phone, speaker, or tablet).
2. Press and hold the Bluetooth® pairing button for several seconds, the mic continues flashes quickly with blue color.
3. On device: Settings → Bluetooth® → Search for mic → Select "WINFUN BT" for pairing.
4. Bluetooth® connected → You will hear a "Sound signal". Mic stops to flash.
5. To disconnect → Press and hold the Bluetooth® pairing button for several seconds → Flash red color on the mic.
* When the mic is successfully connected to one device, it cannot be connected to other device until the pairing information is erased.

Play/Pause button
Press the button to play or pause any music.

Next track/Previous track button
Press the button to play next track or previous track of the melodies.

Voice changer button (Total 4 effects)
Press the button for funny voice changing effects. Press again for next effects.

Applause button (Total 2 effects)
Crowd clap sound effects → Stop → Crowd cheers → Stop.

Beatbox rhythms button (Total 5 rhythms)
Beatbox rhythms → Stop → Another rhythms → Stop.

Melody button (Total 10 melodies)
Melody → Stop → Another Melody → Stop.

Voice recording button
Press the button to record your voice (up to 50 seconds). Flash red color on the mic. Re-press the button to stop.

Recording playback button
Press the button to playback the recorded sounds.

Foot pedal button (Total 5 effects)
Press the button to adjusts light effects, press again for another effects.

Automatic shut-off
To preserve battery life, the below part will auto-off when not in use.
Mic will auto-off around 5 minutes. Mic stand base will auto-off around 10 minutes. The unit can be turned on again by pressing any button or slide the On/Off switch.

Adult assembly requirements
Caution! To ensure your child's safety, this product must be assembled by an adult.