

BUTTON 1 : A. Press and release to Arm/Disarm

B. Press and hold for 4 seconds to activate panic mode.

BUTTON 2 : A. Quickly press and release to Arm/Disarm with no siren chirp(silent).

B. Press and hold for 2 seconds to activate AUX channel # 1.

BUTTON 1 + 2 : Press together for 1.5 sec. To activate AUX channel # 2.