

NVIDIA

GeForce2 MX

3D GRAPHIC ACCELERATOR

MANUAL

NVIDIA GeForce2 MX User's Manual

1. NVIDIA GeForce2 MX	2
1.1 NVIDIA GeForce2 MX Features	2
2. GeForce2 MX Board Outline	3
2.1 GeForce2 MX using SDRAM (SP6800 REV:1)	3
2.2 GeForce2 MX using SDRAM (SP6800 REV:P38)	3
3. Hardware installation	4
3.1 Package Contents	4
3.2 Installing the card	4
3.3 Micro Cross DVI Connector System	5
3.4 Resolutions and colors supported	6
4. Smart Installation	7
5. Manually install Windows 95 & Windows 98 drivers	9
5.1 Installation and Setup	9
5.1.1 Windows95	9
5.1.2 Windows98	9
5.1.3 Windows NT 4.0	10
5.1.4 Windows 2000	11
5.2 How to Change Color Depth and Resolution	12
5.3 How to Change Refresh Rate	12
Warning:	14
Trademark Acknowledgments	14

1. NVIDIA GeForce2 MX

Memory Size:

SP6800 GeForce2 MX 32MB on Board with SDRAM

1.1 NVIDIA GeForce2 MX Features

KEY FEATURES

- NVIDIA shading rasterizer
- 4 texels per clock
- Integrated second-generation Transform and Lighting engines
- 256-bit 3D and 2D graphics accelerator
- 32-bit color with 32-bit z/stencil
- Cube environment mapping
- DirectX and S3TC texture compression
- 700-Mtexel fill rate
- 20 Mtriangles/sec setup
- 2.8 GB/second memory bandwidth
- Memory Support 2MX32 SDRAM to 32MB
- 350 MHz Palette-DAC
- AGP 4X
- HW Anti-aliasing
- Multi-texture and multi-pass
- Reflection maps
- Single pass multi-texture

HIGH-PERFORMANCE 256-BIT 2D ACCELERATION

- Optimized for multiple color depths including 32,24,16,15 and 8-bit per pixel.
- True-color hardware cursor.
- Multi-buffering (double, triple quad buffering) for smooth animation and video playback.


COMPREHENSIVE SYSTEM INTERFACE

- AGP 4X, 2X and 1X support.
- Windows 2000, Windows NT 4.0 display drivers.
- Windows 98 and Windows 95 display drivers.
- DirectDraw, Direct3D, DirectVideo, ActiveX
- OpenGL I for Windows 95, Windows 98, Windows 2000, Windows NT and Linux.
- Out-put device TV-OUT or DVI-Connect (optional , only for SP6800 REV:P38)

2. GeForce2 MX Board Outline


2.1 GeForce2 MX using SDRAM (SP6800 REV:1)

32M on board

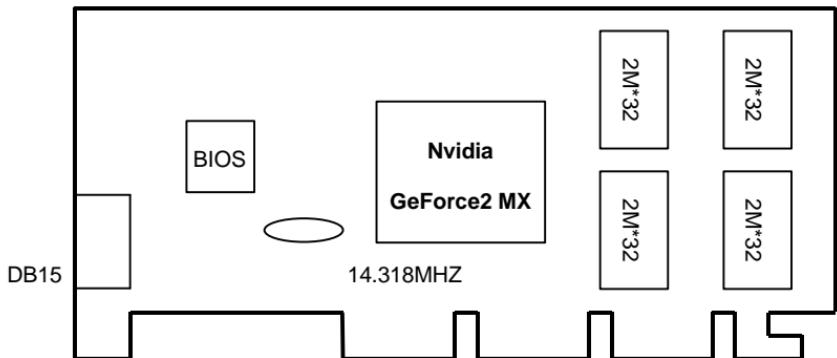

2.2 GeForce2 MX using SDRAM (SP6800 REV:P38)

32M on board

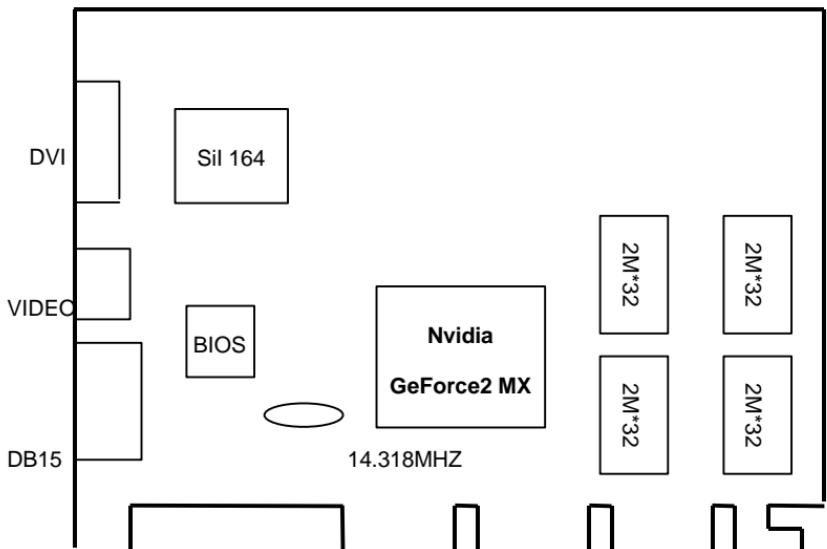

NOTE 1: TV output connector and encoder are reserved for optional

NOTE 2: DVI connector and LCD encoder are reserved for optional

3. Hardware installation


3.1 Package Contents

1. NVIDIA GeForce2 MX 3D Accelerator card
2. CD title or Software diskettes
3. This manual

3.2 Installing the card

1. Turn off your computer
2. Remove the cover of the computer per the owner's manual
3. Install the card in the AGP bus slots
4. Replace the cover.

3.3 Micro Cross DVI Connector System

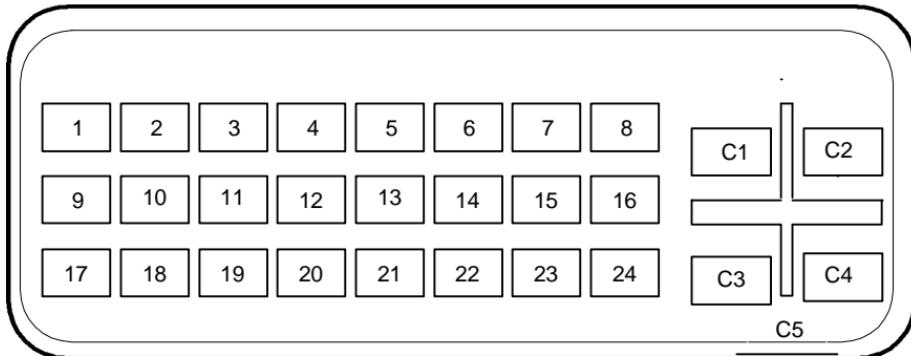

"Micro Cross:"/high speed pins;

- C1 Analog Red Video Out
- C2 Analog Green Video Out
- C3 Analog Blue Video Out
- C4 Analog Horizontal Sync
- C5 Analog Common Ground Return (Red , Green , Blue Video Out)

Note: C1 – C5 Analog signal is not support, just for SPEC. reference

Main Pin Field:

1. TMDS Data 2-
2. TMDS Data 2+
3. TMDS Data 2/4 Shield
4. TMDS Data 4-
5. TMDS Data 4+
6. DDC Clock
7. DDC Data
8. Analog Vertical Sync
9. TMDS Data 1-
10. TMDS Data1+
11. TMDS Data1/3 Shield
12. TMDS Data 3-
13. TMDS Data 3+
14. +5V Power
15. Ground (+5, Analog H/V Sync)
16. Hot Plug Detect
17. TMDS Data 0-
18. TMDS Data 0+
19. TMDS Data 0/5 Shield
20. TMDS Data 5-
21. TMDS Data 5+
22. TMDS Clock Shield
23. TMDS Clock
24. TMDS Clock

3.4 Resolutions and colors supported:

NV11

	Bits Per pixel	Memory Req. (MB)	Refresh Rates (HZ)
640*480	8	1MB	60/70/72/75/85/100/120/140/144/150/170/200/240
	16	1MB	60/70/72/75/85/100/120/140/144/150/170/200/240
	32	2MB	60/70/72/75/85/100/120/140/144/150/170/200/240
800*600	8	1MB	60/70/72/75/85/100/120/140/144/170/200/240
	16	1MB	60/70/72/75/85/100/120/140/144/170/200/240
	32	2MB	60/70/72/75/85/100/120/140/144/170/200/240
1024*768	8	1MB	60/70/72/75/85/100/120/140/144/150/170/200/240
	16	2MB	60/70/72/75/85/100/120/140/144/150/170/200/240
	32	4MB	60/70/72/75/85/100/120/140/144/150/170/200
1152*864	8	1MB	60/70/72/75/85/100/120/140/144/150/170/200
	16	2MB	60/70/72/75/85/100/120/140/144/150/170/200
	32	4MB	60/70/72/75/85/100/120/140/144/150
1280*960	8	2MB	60/70/72/75/85/100/120/140/144/150/170
	16	4MB	60/70/72/75/85/100/120/140/144/150/170
	32	8MB	60/70/72/75/85/100/120/140/144/150
1280*1024	8	2MB	60/70/72/75/85/100/120/140/144/150/170
	16	4MB	60/70/72/75/85/100/120/140/144/150/170
	32	8MB	60/70/72/75/85/100/120/140/144/150
1600*900	8	2MB	60/70/72/75/85/100/120/140/144/150
	16	4MB	60/70/72/75/85/100/120/140/144/150
	32	8MB	60/70/72/75/85/100/120
1600*1200	8	2MB	60/70/72/75/85/100/120
	16	4MB	60/70/72/75/85/100/120
	32	8MB	60/70/72/75/85/100
1920*1080	8	4MB	60/70/72/75/85/100
	16	8MB	60/70/72/75/85/100
	32	16MB	60/70/72/75/85
1920*1200	8	4MB	60/70/72/75/85/100
	16	8MB	60/70/72/75/85/100
	32	16MB	60/70/72/75/85
1920*1440	8	4MB	60/70/72/75/85
	16	8MB	60/70/72/75/85
	32	16MB	60/70/72/75
2048*1536	8	4MB	60/70/72/75
	16	8MB	60/70/72/75
	32	16MB	60

4. Smart Installation


For Windows 95 OSR2.1, Windows 98, WindowsNT4.0, Windows 2000

4.1 Put the DRIVERS CD in your CD-ROM




4.2 Click the Driver installation


4.3 If everything fine, screen will show Confirm Installation window. Then Select the OK

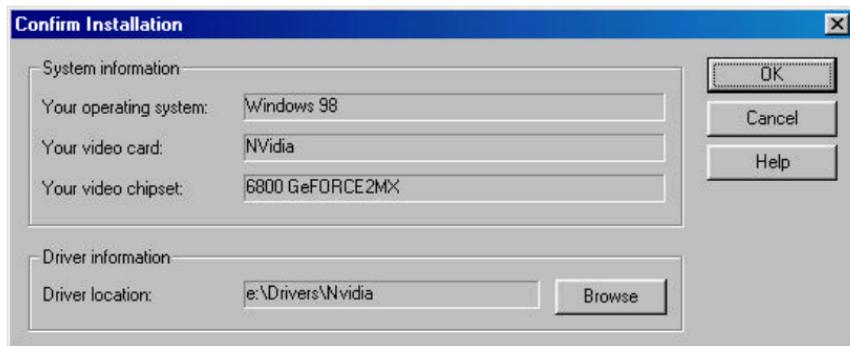

**4.4 Now appears the Driver Confirmation window
Select the Install**

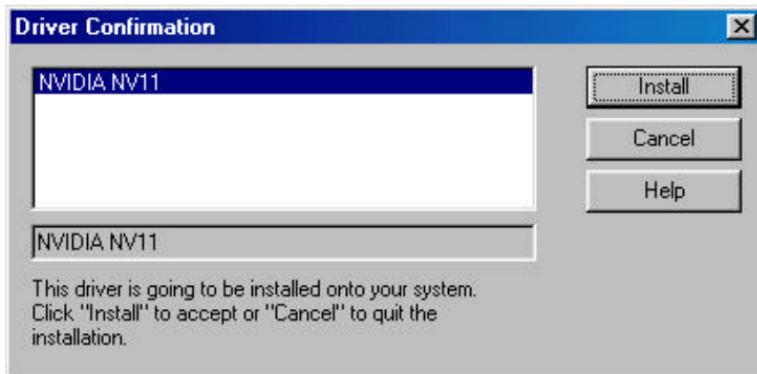

4.5 Then restart your computer.

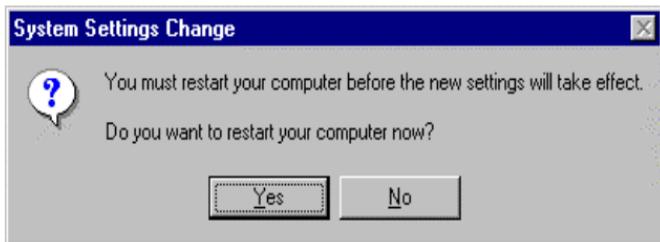

5. Manually install Windows 95 & Windows 98 drivers

5.1 Installation and Setup

5.1.1 Windows95

The Windows setup program installs and modifies all of the necessary files. Follow these steps to install the Windows 95 drivers.

- Insert the DISC (CD Title Driver).
- Select **Control Panel** from **My Computer** group.
- Select the **Display** icon
- Double-click on the **Display** icon in the Setting -> **Control Panel** folder. You can also click the right mouse button anywhere on the desktop and select the Properties option from the pop-out menu.
- Click the **Settings** tab.
- Click the **change** Display Type button.
- Click the **Have Disk** button.
- Change directories and Select **NV4agg.inf**

Disc (CD Title) is **E:\drivers\Nvidia\6800\WIN9X (GeForce2 MX:6800 REV:P38)**

Note: “E:”-> CD Drive “**Nvidia**”-> VGA chip brand name “**6800**”-> VGA model name

- Select AGP driver form the list and click the **OK** button. If a message stating that one or more driver files is older than the files on the system respond **YES** to overwrite the files.
- Click the Close button and Apply button, and restart your computer.

5.1.2 Windows98

The Windows setup program installs and modifies all of the necessary files. Follow these steps to install the Windows 98 drivers.

- Insert the DISC (CD Title Driver).
- Select **Control Panel** from **My Computer** group.
- Select the **Display** icon
- Double-click on the **Display** icon in the Setting -> **Control Panel** folder. You can also click the right mouse button anywhere on the desktop and select the Properties option from the pop-out menu.
- Click the **Settings** tab.
- Then show **[Unknown Device.] Properties** tab
- Select **Adapter**
- Then show **Standard PCI Graphics..tab**
- Select **Change**
- Then show **Update Device ..tab**
- Select **Next**
- Then show **Update Device ..tab**
- Select **Search for a better...**
- Then select **Next**.
- Then show **Update Device ..tab**
- If the **Specify a location** is wrong
- Please select **Brows**
- Then show **Browse for Folder** tab

Disc (CD Title) is **E:\drivers\ Nvidia\6800\WIN9X(GeForce2 MX:6800 REV:P38)**

Note: “E:”-> CD Drive “**Nvidia**”-> VGA chip brand name “**6800**”-> VGA model name

- Then select **OK**
- Then show **Update Device Driver Wizard** tab
Select **CD-ROM driver**
Click the **Specify a locator**, if right
Then select **Next**
- Then show **Update Device Driver Wizard** tab
Select **Next**
- Then show **Update Device Driver Wizard** tab
Select **Finish**
- Then show **System Settings Change** tab
Select **OK**

5.1.3 Windows NT 4.0

The following steps describe how to install Windows NT4.0 display drivers

1. Select **Control Panel** from the **Main** group.
2. Select the **Display** icon.
3. Select **Change Display Type**.
4. Select **Change** from the **Adapter Type** area.
5. Select **Other**.
6. Place the Disc (CD Title) into Driver. Click **OK**.
7. Select **Install** and click “**YES**” when the Installing Driver dialog box appears.
8. When the Windows NT **Setup** dialog box appears select **CDROM**, and click “**Continue**”.

A message appears stating that drivers were successfully installed. Click **OK**. Another message appears stating that the driver could not be restarted dynamically. Restart **Windows NT** to run the new driver. Click **OK**.

5.1.4 Windows 2000

First time install drivers under windows2000

1. When system boot up, system will prompt find new device. Suppose the device is VGA, now system will find the default drivers for you.
2. If you want to install our drivers along with the SP6800 pack. Please put the drivers CD in your CDROM drive. If now shows Smart Install window, please click **EXIT** button to quit.
3. Drivers for windows2000 are located at \2000drv\nvidia\win2000 or \drivers\nvidia\6800\win2000
4. If the drivers is very new may not certified by Microsoft, if so, system will prompt you the drivers do not have "digital signature", still you can force to install.
5. Follow on screen instructions will finish the installation.

The following steps describe how to update Windows2000 display drivers

1. Place the Disc (CD Title) into CDROM Drive. If now shows Smart Install window, please click **EXIT** button to quit
2. Right click mouse button on Desktop Area, now shows a sub menu window. Please select **Properties**.
3. Now come up **Display Properties** window, please select **Settings** on the top.
4. Select **Advanced**
5. Select **Adapter**.
6. Select **Change**
7. Now comes up a update drivers wizard window. Please follow the on screen instruction.
8. Please specify the drivers location at your CDROM letter:\2000drv\nvidia\win2000 or \drivers\nvidia\6800\win2000 or the directory where you put your drivers
9. Select **Install** and click "**YES**" when the Installing Driver dialog box appears. If the drivers is very new may not certified by Microsoft, if so, system will prompt you the drivers do not have "digital signature", still you can force to install.

A message appears stating that drivers were successfully installed. Click **OK**. Another message appears stating that the driver could not be restarted dynamically. Restart Windows2000 to run the new driver. Click **OK**.

5.2 How to Change Color Depth and Resolution

1. Make sure that you have installed windows95/98 Driver.
2. Click on the Start box in the lower left corner and proceed to Control Panel.
3. Inside the Control panel group , click on Display icon to open the Display Properties folder and select the Setting table
4. Click on the pull-down arrow from the Color palette area to select color depth or adjust the sliding bar to either Less or More from the Desktop area
5. Select OK to restart WINDOWS95 and new color depth or the new resolution takes effect.

5.3 How to Change Refresh Rate

1. Make sure that you have installed windows95/98 Driver. Click on the Start box in the lower left corner and proceed to Setting, **Control Panel**
2. Inside the **Control panel** group , click on **Display** icon to open the **Display Properties** folder and choose **Settings** click the **Advance Settings** choose **Adapter**
3. Click on the **Refresh Rate** sub window to change refresh rate
4. Select **OK** and new refresh rate takes effect

Note: If your monitor is not Branded or Plug&Play, you will only see Adapter default and optimal. Please contact your monitor supplier to get right or compatible drivers for your monitor. Otherwise you can not select the refresh rate you wanted.

NVIDIA GeForce2 MX Properties

?

X

Color Management

NV11

Output Device

General

Adapter

Monitor

Performance



NVIDIA GeForce2 MX

Change...

Adapter / Driver information

Manufacturer: NVIDIA

Features: DirectDraw 1.00

Software version: 4.0

Current files: nvdisp.drv, "vdd, nvmini.vxd, NVDD32.DLL

Refresh rate

Optimal

Optimal

60 Hz

70 Hz

72 Hz

75 Hz

85 Hz

100 Hz

120 Hz

140 Hz

144 Hz

OK

Cancel

Apply

- Refresh Rate default is Optimal.
- If you change Refresh Rate from Optimal to another, you maybe need to restart WINDOWS 95 or 98

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two condition.(1).this device may not cause harmful interference. (2).this device must accept any interference received, including interference that may cause undesired operation

Warning:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, used and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference in to radiate communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different form that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Notice:

(1) An Unshielded-type power cord is required in order to meet FCC emission limits and also to prevent interference to the nearby radio and television reception. It is essential that only the supplied power cord be used.

(2) Use only shielded cables to connect I/O devices to this equipment.3

(3) Changes or modifications not expressly approved by the party responsible for compliance could void the use's authority to operate the equipment.

Trademark Acknowledgments

All brand names and trademarks are the property of their owners.