



NK[®]
radio control




- SEA EXPLORER
- PATROL BOAT
- FIRE BOAT

OPERATOR'S MANUALS

BATTERY INSTALLATION

TRANSMITTER


INSTALL 1 x 9 VOLT BATTERY
WITH POLARITY AS SHOWN
INSIDE BATTERY COMPARTMENT

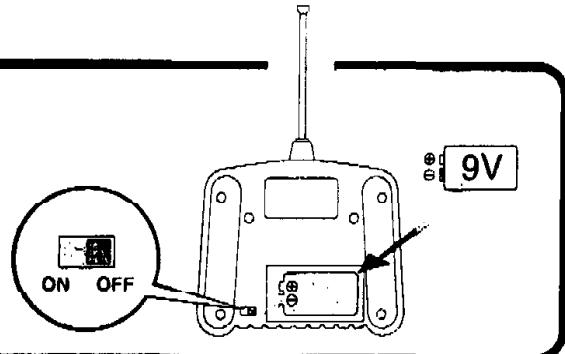

BOAT

To remove **Battery Compartment Cover**,
make sure all **Lockers** are turned to the
arrow direction as shown


To install **Battery Compartment Cover**,
make sure the slot on the cover will fit into the back of
the battery compartment

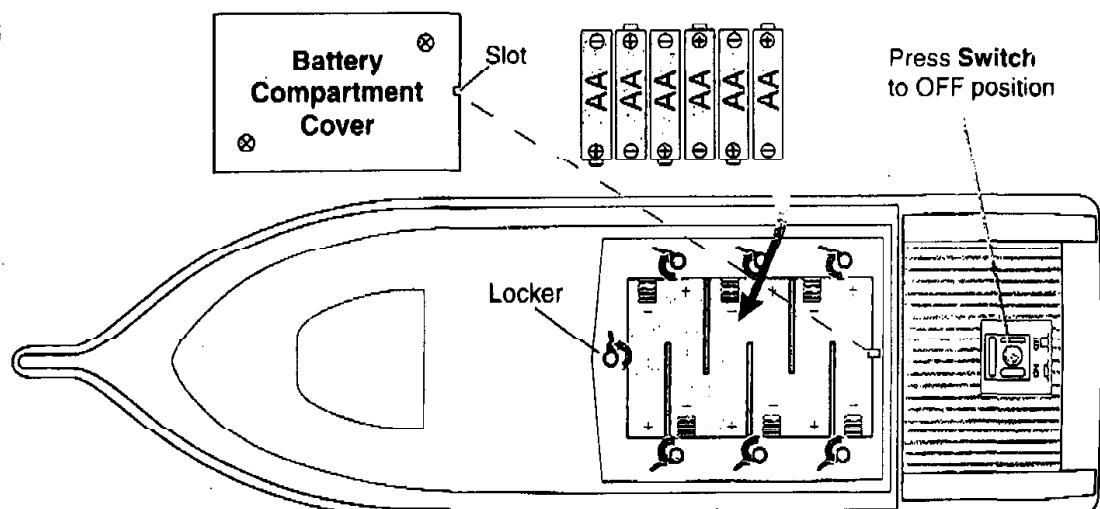

Use 6 x AA (UM-3) R6 alkaline (1.5V) or Ni-Cd (1.2V) batteries

OPERATING THE BOAT AND THE TRANSMITTER

1. Switch Transmitter and Boat to ON position. (LED light up in Transmitter).
2. Extend Transmitter antenna to its fullest length.
3. Do not operate your Boat too far away from the transmitter, your signal strength will become weak and Boat will not function properly. The average control range should be between 30 to 65 feet (9 to 20 meters.)
4. For best results, hold Transmitter antenna up, not pointed down toward R/C Boat.
5. Keep your Boat clean, remove dirt or other material that may collect around propellers. And do not forget to dry up the Boat after use.
6. Turn transmitter and Boat switches to OFF position when not in use.

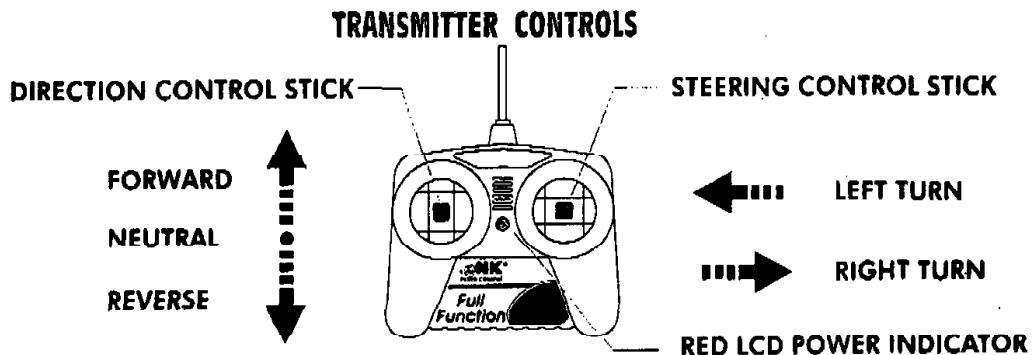

RADIO INTERFERENCE

When your R/C Boat runs erratically or loss of control, the problem is due to being in an area near High Tension Wires, Telephone Poles with High-Voltage Transformers, TV or Radio Station antenna or CB Radios, even other R/C Boat running close by on the same Frequency as yours. You may have to choose different location.

CAUTION WHEN USING BATTERIES

1. Replace the whole set of batteries at one time, taking care not to mix or use old and new batteries or batteries of different types.
2. Do not use non-rechargeable batteries with rechargeable batteries or rechargeable batteries of different capacities.
3. Take care to fit your batteries correctly, observing the + and - marks on the battery and matching the battery compartment markings.
4. Remove all batteries from the Transmitter and the Vehicle when not in use for extended period of time.

Modifications not authorized by the manufacturer may void users authority to operate this device.