 



BATTERY INSTALLATION

TRANSMITTER


INSTALL 1 x 9 VOLT BATTERY
WITH POLARITY AS SHOWN
INSIDE BATTERY COMPARTMENT

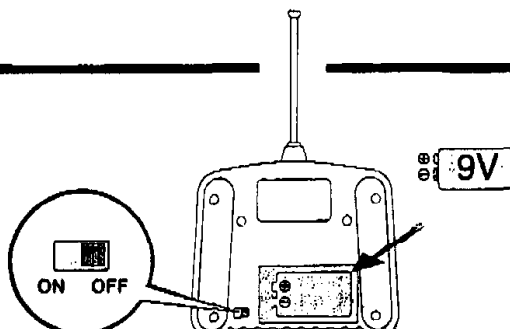

 VEHICLE

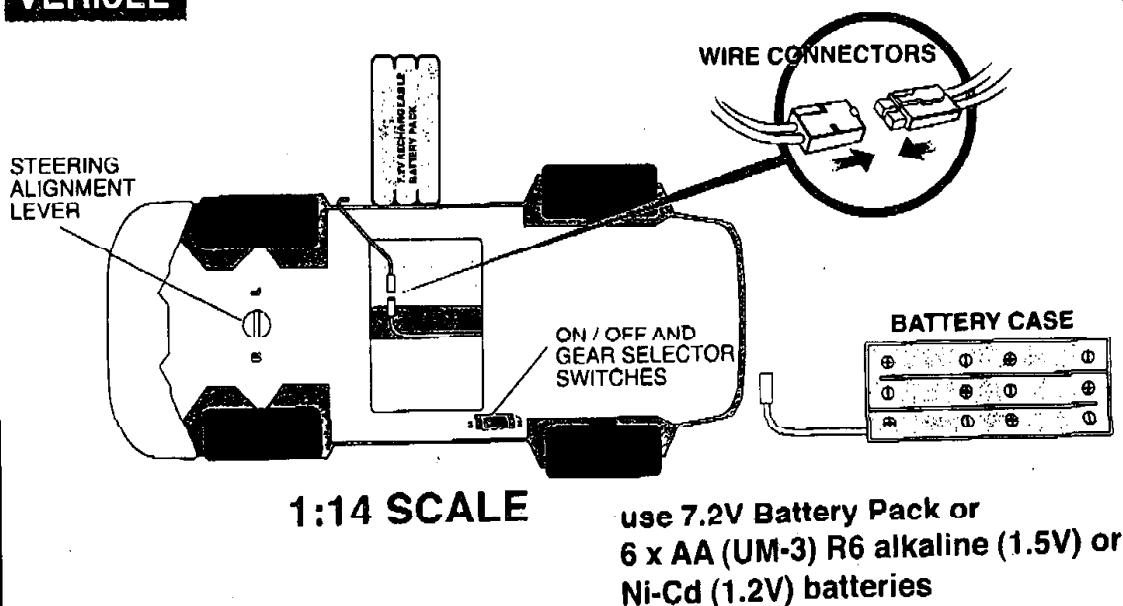

 
The tip of the antenna cord should
be set to hang down naturally

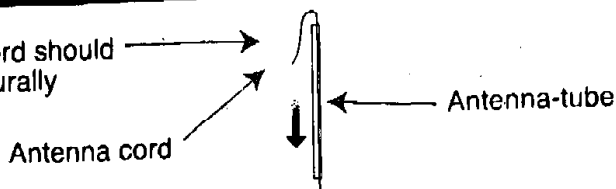

RECEIVER ANTENNA INSTALLATION
INSERT ANTENNA CORD THROUGH ANTENNA TUBE

OPERATING THE VEHICLE AND THE TRANSMITTER

 1. Switch Transmitter and Vehicle to ON position. (LED light up in Transmitter).
2. Turn Gear Selector to either Fast or Slow.
3. Adjust Steering Alignment Lever Left or Right when the steering is not properly aligned.
4. Operate your Vehicle in a dry, open area, do not drive in the street. Avoid sand and water.
5. Do not operate your Vehicle too far away from the transmitter, your signal strength will become weak and Vehicle will not function properly. The maximum range for the Vehicle should be between 30 to 65 feet (9 to 20 meters), when operating outdoor.
6. For best results, hold Transmitter antenna up, not pointed down toward R/C Vehicle.
7. Turn Transmitter and Vehicle switches to OFF position when not in use.

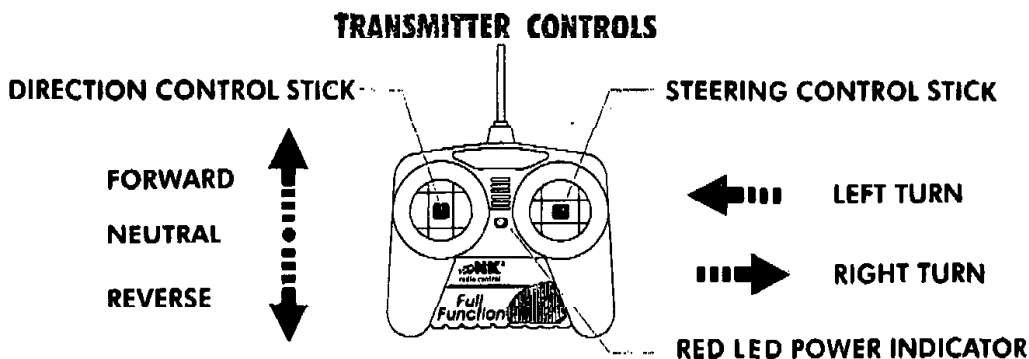

RADIO INTERFERENCE

When your R/C Vehicle runs erratically or loss of control, the problem is due to being in an area near High Tension Wires, Telephone Poles with High-Voltage Transformers, CB Radios, even certain Building or other R/C Vehicle running close by on the same Frequency as yours. You may have to choose different location.

CAUTION WHEN USING BATTERIES

1. Replace the whole set of batteries at one time, taking care not to mix or use old and new batteries or batteries of different types.
2. Do not use non-rechargeable batteries with rechargeable batteries or rechargeable batteries of different capacities.
3. Take care to fit your batteries correctly, observing the + and - marks on the battery and matching the battery compartment markings.
4. Remove all batteries from the Transmitter and the Vehicle when not in use for extended period of time.

Modifications not authorized by the manufacturer may void users authority to operate this device.