

Save Battery Life

Make sure that the vehicle and the transmitter are turned off when not in use.

This device complies with Part 15 of the FCC. Rules

Operation is subject to the following two conditions:(1) this

device may not cause harmful interference, and (2) this

device must accept any interference received, including

interference that may cause undesired operation.

TROUBLE SHOOTING

PROBLEM	CAUSE	CORRECTION
CAR DRIVES SLOWLY	-WEAK BATTERIES IN CAR	-REPLACE NEW BATTERIES IN CAR
POOR STEERING CONTROL	-WEAK BATTERIES IN TRANSMITTER -FLOOR TOO SLICK	-REPLACE WITH NEW BATTERIES -TRY ASPHALT OR CONCRETE
NO POWER	-POWER SWITCH "OFF"	-CHECK POWER SWITCH ON VEHICLE TURNED "ON"
POOR RANGE CONTROL	-WEAK BATTERIES IN TRANSMITTER OR VEHICLE -STRONG INTERFERENCE AT THE SURROUNDED AREA	-REPLACE WITH NEW BATTERIES -MOVE TO A BETTER LOCATION TO DRIVE YOUR CAR

CLEANING AND MAINTENANCE:

This toy car needs periodic maintenance and cleaning.

OF AGE AS WITH ALL ELECTRIC PRODUCTS, PRECAUTIONS SHOULD BE OBSERVED DURING HANDLING AND USE TO PREVENT ELECTRIC SHOCK.

Batteries used with this toy should be kept away from small children who still put things in their mouth.

(If swallowed, promptly see a doctor.) Read and follow operating instructions.

Do not mix old and new batteries.

Do not mix alkaline, standard or rechargeable batteries.

Only batteries of the same or equivalent type as recommended are to be used. Batteries are to be inserted with the correct polarity.

Exhausted batteries are to be removed from the toy.

The supply terminals are not to be short-circuited.

"Modifications not authorized by NKOK, Inc. / NGAI KEUNG METAL & PLASTIC MANUFACTORY LTD. may void users authority to operate this device"

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, these is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

OPERATOR'S MANUAL (1:32) **FULL FUNCTION RADIO CONTROL**

BATTERY INSTALLATION




Use 2 "AA" batteries (Batteries not included)




Use 3 "AAA" batteries (Batteries not included)



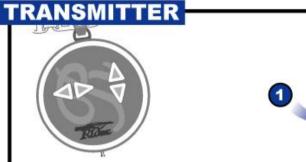

- 1. Turn off the controller
- 2. Lift cover
- 3. Insert 3 x "AAA" size batteries
- 4. Fasten lid cover

VEHICLE

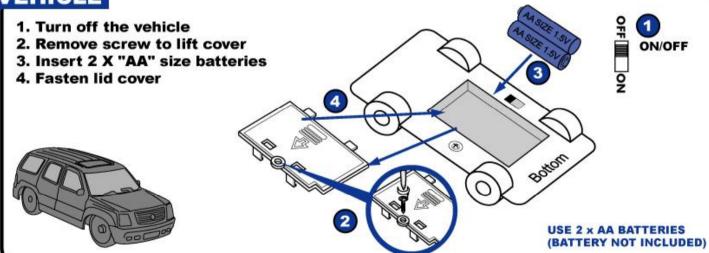

HINTS WHEN USING BATTERIES

- 1. Do not use old and new batteries or batteries of different types at the same time. When changing batteries, always replace with a new set of batteries.
- 2. Do not use non-rechargeable batteries with rechargeable batteries or rechargeable batteries of different capacities.
- 3. Observe the polarity marks on the batteries and match them according to the battery compartment
- 4. Remove all batteries from the transmitter and the car when not in use for an extend period of time.
- 5. Stop using whenever it's wet to avoid short-circuit.
- 6. Never throw the battery into water or fire or disassemble or weld it.
- 7. Do not use, charge or store the toy near a fire source or in hot and humid place.