

# Universal Transmitter TX-0123


COMPATIBLE WITH 3000/5000/6000 SERIES WIRELESS HOME SECURITY SYSTEM

## INSTALLATION

1. Remove the battery cover
2. Select your own Site Code by sliding the Side Code DIP Switches 1-9; make sure it is identical to that of the control panel.
3. Select the Zone Code for this transmitter. (See ZONE CODE TABLE)
4. Install a DC 12V alkaline battery (not included).
5. Connect the detector N/C (Normal Close) you select to work with this transmitter.
6. Mount the transmitter on the location you have selected.

**CAUTION: If the unit is mounted close to metal frame or doors this may reduce the transmitting range. DON'T FORGET to test the detector after installation.**

Example: Installing the Universal Transmitter Tx-0123 to be connected with door/window magnetic contact.

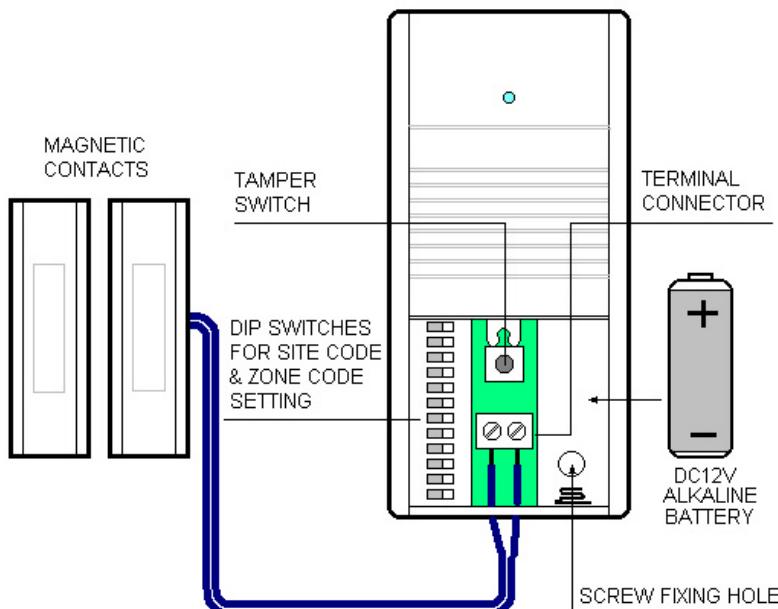

## TESTING (Example: connected with door/window magnetic contact)

1. Set the Control Panel in TEST/BATTERY CHANGE mode before testing the system.
2. Trigger the magnetic contact by opening the door or window to observe the LED indicator on the magnetic transmitter.
3. The chirps from the control panel will sound and correspond to the zone nos. that the detector operates on.
4. You may wish to repeat the above steps while the system is in ARM mode. By this way you can confirm correct operation and simulate the entry of a Burglar. Keep your remote control handy for disarming the system after alarming.

## ZONE CODE TABLE


You can select the Zone you wish to use the detector on by sliding the Zone Code DIP Switches 10-12 as shown in the table below.

### NOTE

Be sure to change the Zone Code from the maker's initial setting in order to meet your own requirements.

The Changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## ZONE CODE SWITCH SETTINGS

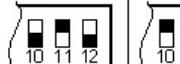ZONE DIP SWITCH	ZONE 1 ENTRY/EXIT	ZONE 2 INSTANT	ZONE 3 INSTANT	ZONE 4 INSTANT	ZONE 5 INSTANT	ZONE 6 24 HOUR
10	ON	OFF	ON	OFF	ON	OFF
11	OFF	ON	ON	OFF	OFF	ON
12	OFF	OFF	OFF	ON	ON	ON
ZONE CODE SETTINGS						

### REMARKS:

1. The Universal Transmitters can be used for a number of functions. The most popular is protection of doors and windows; however, the unit can be connected to a panic switch and by setting all Zone Code Switches to OFF, the Panic Zone can be activated. This is ideal as a fixed Wireless Panic Alarm.
2. The detectors connected with the transmitter should be N/C type (normal close). Or momentary N/O (normal open) type.