

Usbide Docking / PhatDock User Manual

I. Hardware setup :

1. Computer with Win98 OS with USB installation
2. Power Adapter DC +12V 800 mA
3. Cartridge (Hardisk)

II. Software setup :

1. USBIDE_drivers Version 2.1

III. Installation Procedure :

1. For new computer, have to install the driver to computer first.(After installation have to reboot the computer)
2. Plug Usb connector to computer
3. Plug the cartridge to Usbide docking
4. Plug Adaptor power to docking (Turn on)
5. Wait... till computer finished setup
6. Find out Removeable Disk .
7. Then you can get and copy file to the cartridge

Usbide Docking / PhatDock User Manual

I . Feature :

1. Transfer data to and from computer to removeable hardisk
2. Data storage system

II . Hardware setup :

1. Computer with Win98 OS with USB installation
2. Power Adapter DC +12V 800 mA
3. Cartridge (Hardisk)

III . Software setup :

1. USBIDE_drivers Version 2.1

IV. Installation Procedure :

1. For new computer, have to install the driver to computer first.(After installation have to reboot the computer)
2. Plug Usb connector to computer
3. Plug the cartridge to Usbide docking
4. Plug Adaptor power to docking (Turn on)
5. Wait... till computer finished setup
6. Find out Removeable Disk .
7. Then you can get and copy file to the cartridge

General Usage of the DMS Cartridge and USB Cradle

Your USB Cradle and DMS Cartridge data cartridge together are a hot-swappable data storage system. This means that you can insert or remove the data cartridge even when your computer is on. When you insert the DMS Cartridge data cartridge into the USB Cradle, the red power LED should come on, and your computer is able to read and write data to the DMS Cartridge. While data is being transferred, the green LED on the USB Cradle will flicker on and off. Always wait until the green LED stops flickering (but remains on) before removing the cartridge from the Cradle, or some of the data files stored on the DMS Cartridge may become corrupted.

When you insert the DMS Cartridge into the USB Cradle, you'll hear 2 latches click into place. These latches keep the DMS Cartridge securely in the Cradle; to release them, just press and hold the button on the top of the DMS Cartridge, and it should slide out easily. These latches also help keep the DMS Cartridge secure inside the PhatBox so it does not slide out while you are driving.

Setup for Windows 95/98/NT:

Run setup.exe file (included on CD-ROM) – follow instructions on the screen to install the software driver. Your computer should remain on.

Attach the USB dock to your computer's USB port.

Also attach the power cable to a North American standard wall outlet (110V, 60Hz AC).

Insert a DMS cartridge into the USB dock.

The red LED should light up, and the green LED will begin to flicker.

Once the green LED has stopped flickering, a new drive letter will be added to your computer's file system – go to My Computer from the desktop to see this.

You can now use this drive letter to transfer files to and from the DMS cartridge directly.

Setup for Windows 2000/ME:

Because Windows 2000 or ME already has the correct driver for the USB dock installed, you do not need to run setup.exe. Your computer should be on.

Attach the USB dock to your computer's USB port.

Also attach the power cable to a North American standard wall outlet (110V, 60Hz AC).

Insert a DMS cartridge into the USB dock.

The red LED should light up, and the green LED will begin to flicker.

Once the green LED has stopped flickering, a new drive letter will be added to your computer's file system – go to My Computer from the desktop to see this.

You can now use this drive letter to transfer files to and from the DMS cartridge directly.

Special Notes

Notes on DMS Cartridge Data Cartridge

Handle the data cartridge carefully

Keep the connector pins free of dust and dirt

Do not place cartridge:

- in direct sunlight

- in dirty, dusty or wet areas

- near the car heater

- on the seats or dashboard