

## Exhibit E

## User's Manual

**E. LEAD ELECTRONIC CO., LTD.**

**FCC ID.: MGEL-609R**

**RECEIVER (LOSING ALERT)**

# MOBILE FRIEND-INTELLIGENT LOSINC/CALL VIBRATOR

*NOTIFY YOU OF INCOMING CALL  
OR LOSING YOUR VALUABLES*

## [ FUNCTION ]

### \* Losing Alert :

Vibration to inform you of losing or leaving your mobile phone, kid, pet, purse, laptop, or valuables in a crowded area like shopping malls, train stations, bus stations, or taxis.

### \* Call Vibration :

Vibration to inform you of an incoming call without annoying other people. Let you turn off the ringer on your mobile phones and still know incoming calls. It can be used with your phones in a meeting, a theater, or an noisy public place.

## [ INSTRUCTION ]

1. The Losing/Call Vibrator set includes an easycarry receiver (vibrator) and a transmitter.
2. Insert battery correctly into the battery chambers in the receiver and the transmitter.
3. To set up the Losing/Call Vibrator, please turn the power on the transmitter to "ON" position first. Wait for about 8 seconds before bringing the receiver within a 8 inches (20cm) distance from the transmitter, then turn the power on the receiver to either "HI" or "LO". Few seconds later, the receiver will vibrate 2 to 3 times and then remain quiet. This indicates that a code between the two pieces has been randomly and successfully selected and setup procedure has completed.

**Note :** If the receiver vibrates continuously, the setup fails. Please turn off the power of the receiver and repeat procedure 3.

4. Put or stick the transmitter in or to your valuables like purse, laptop...etc. and carry the receiver with you. When the transmitter-attached object goes beyond a detectable range (see spec. below), the

receiver will vibrate. If the object moves within the detectable range within 10 minutes, the receiver will stop vibrating. When the object moves back in the detectable range after leaving for more than 10 minutes, you have to restart your receiver or press "RESET" for more than 3 seconds until the receiver gives 2-3 vibrations.

5. When the transmitter is attached to a mobile phone and there is an incoming call, the receiver will vibrate for 3 seconds, stop vibration for 3 seconds and repeat the pattern until "RESET" is pressed or the conversation is over. Meanwhile, the device can also be used to protect from losing your mobile phones.
6. "RESET" also functions as a confirmation key which confirms a good signal reception. When the object is within the detectable range, the receiver will vibrate once every second by pressing and holding "RESET" button on the receiver.
7. When the object leaves the detectable range and the receiver vibrates, press "RESET" can stop vibration, but vibration will resume 1 minute after. Repeat the previous action to stop vibration until 10-minute limit is reached. The receiver vibrates once every other second after the time limit.
8. If you feel the vibration not strong enough when the receiver is put in your pocket, you may use the provided clip to clip the receiver at a suitable place like belt, shirt pocket. (Please stick the clip to the receiver first.)

## NOTICE :

- (1) If you use a double-side tape to stick the transmitter to any object, please do not cut off the cable which is hanging outside and acts as an antenna. Doing so may cause malfunction.
- (2) Please start the device in a place where no other similar transmitters are present to avoid from picking up wrong signals. Please keep from putting similar vibrators and transmitters closely together to reduce any possibility of interference.
- (3) The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.