


PCB-02 CH. Switch/Display Drive Board Assembly

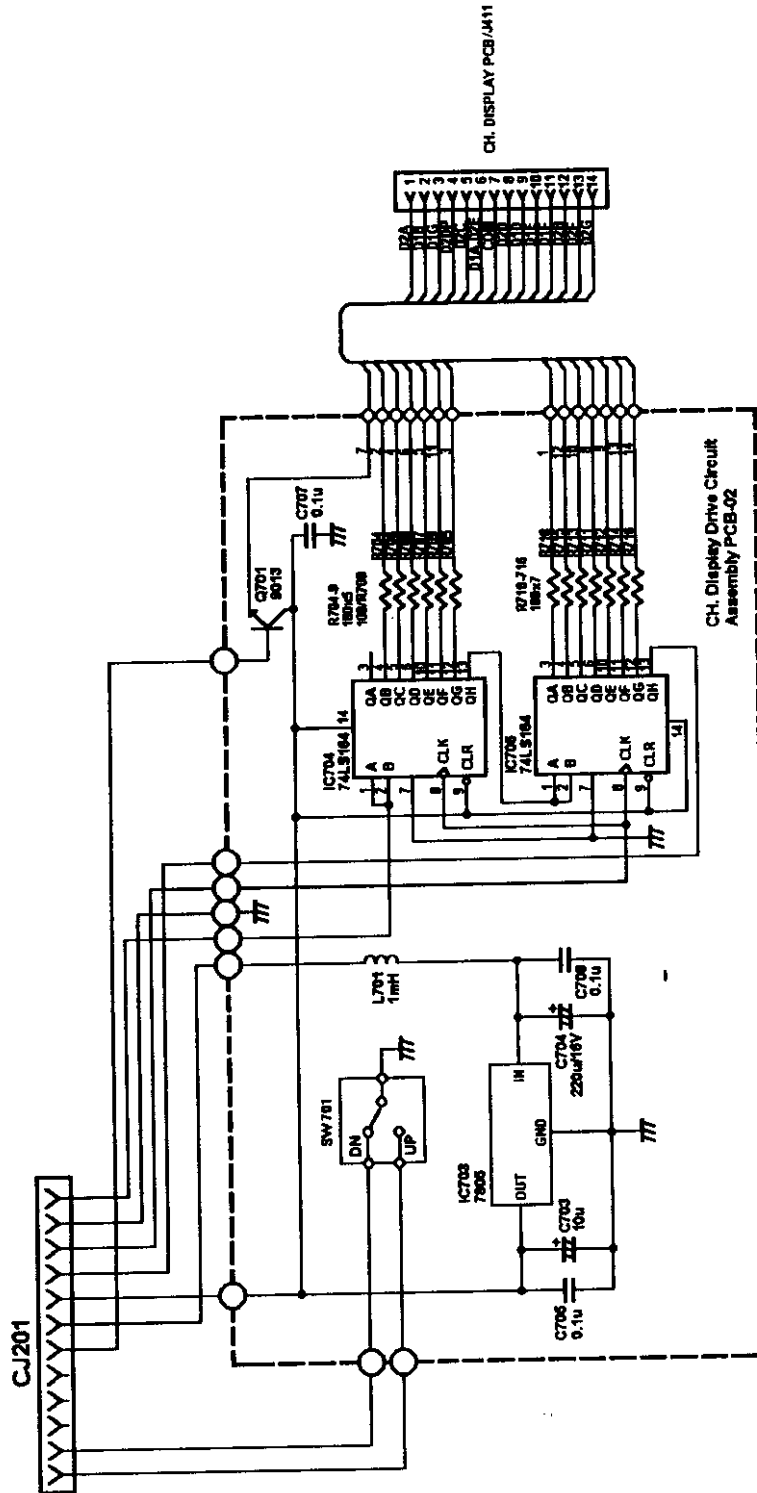


CBS-2100 CH. Switch/Display PCB Assembly PCB-02

FILE: CH SW Driver Board.PCX

Date: 13-4-1999

DWN BY: TUNG

Frequency Counter PCB

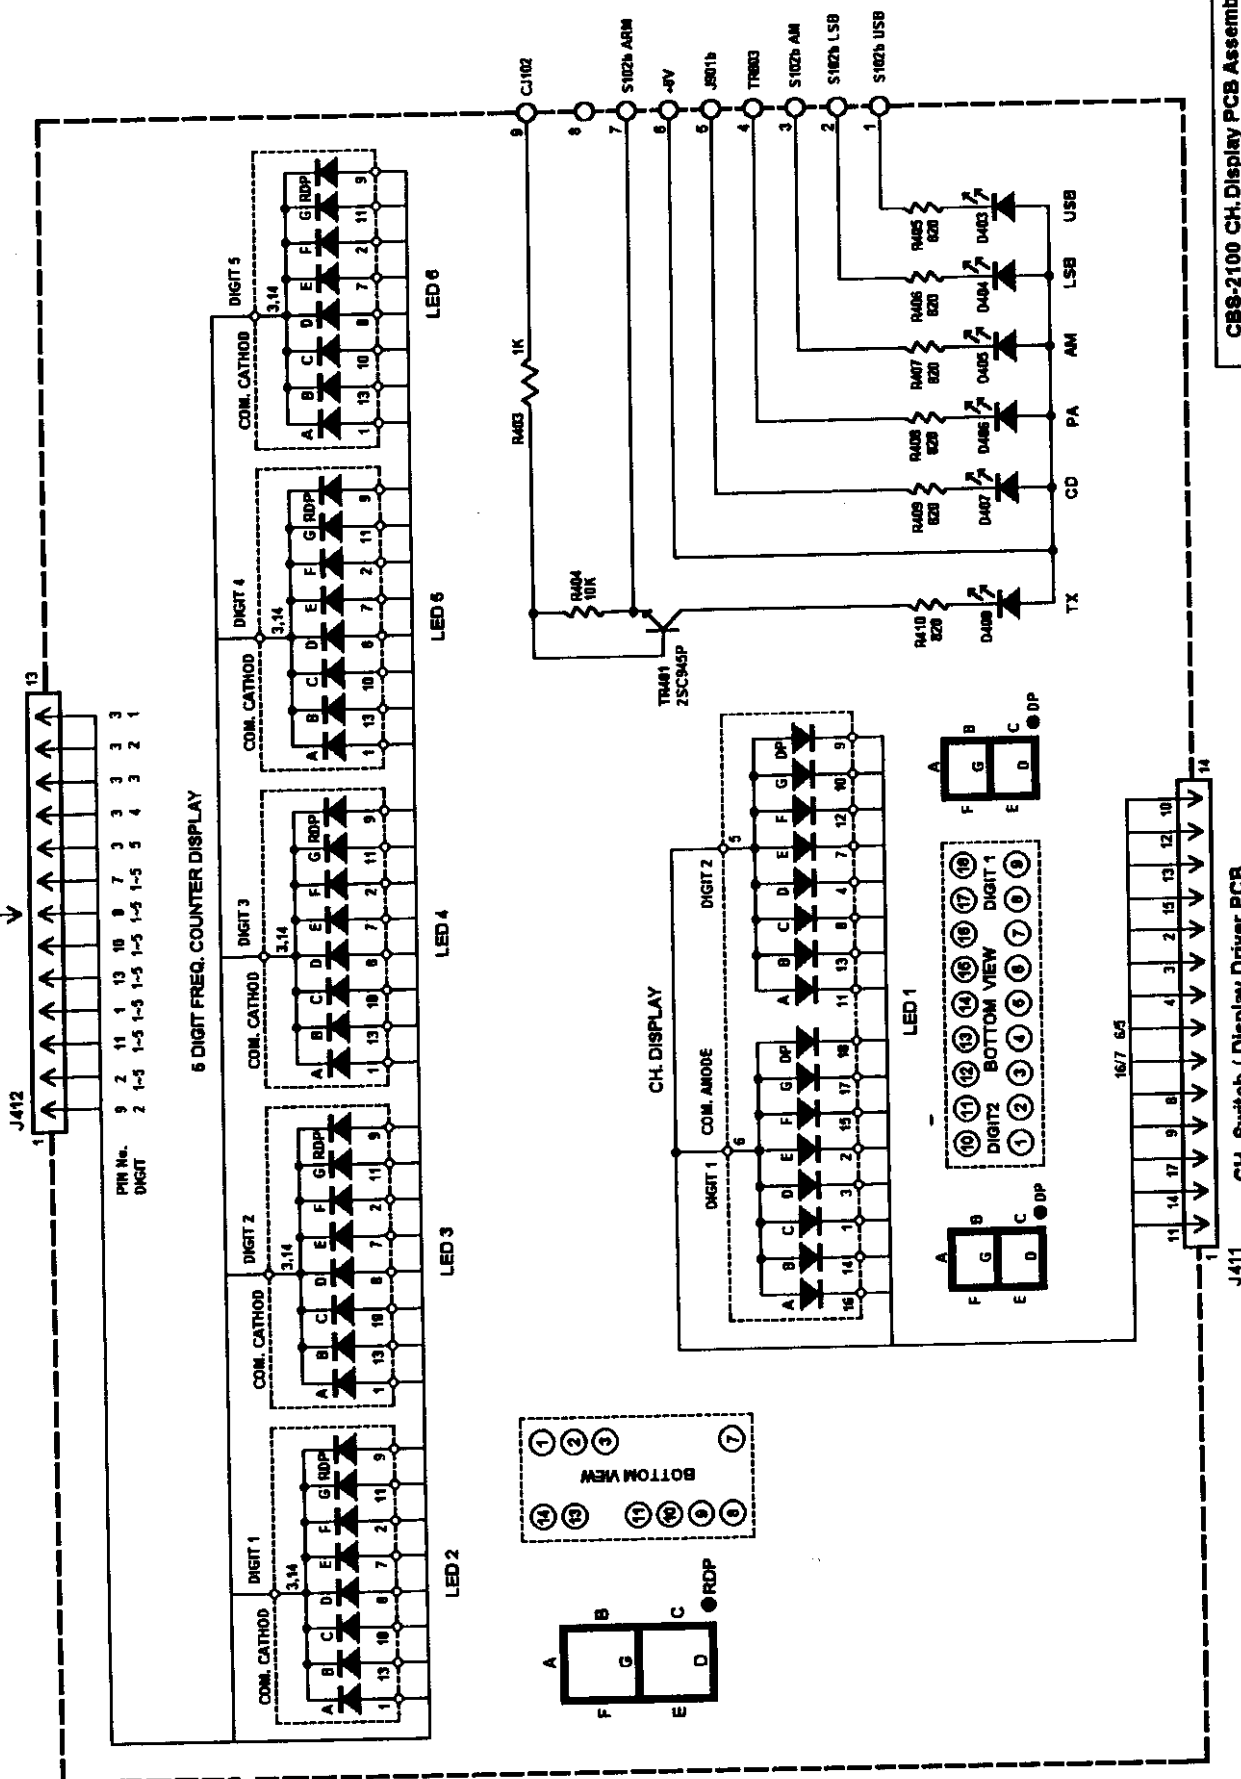


CBS-2100 CH. Display PCB Assembly PCB-03

FILE: CH Display Board.PCX

Date: 13-4-1998

DWN BY: TUNG

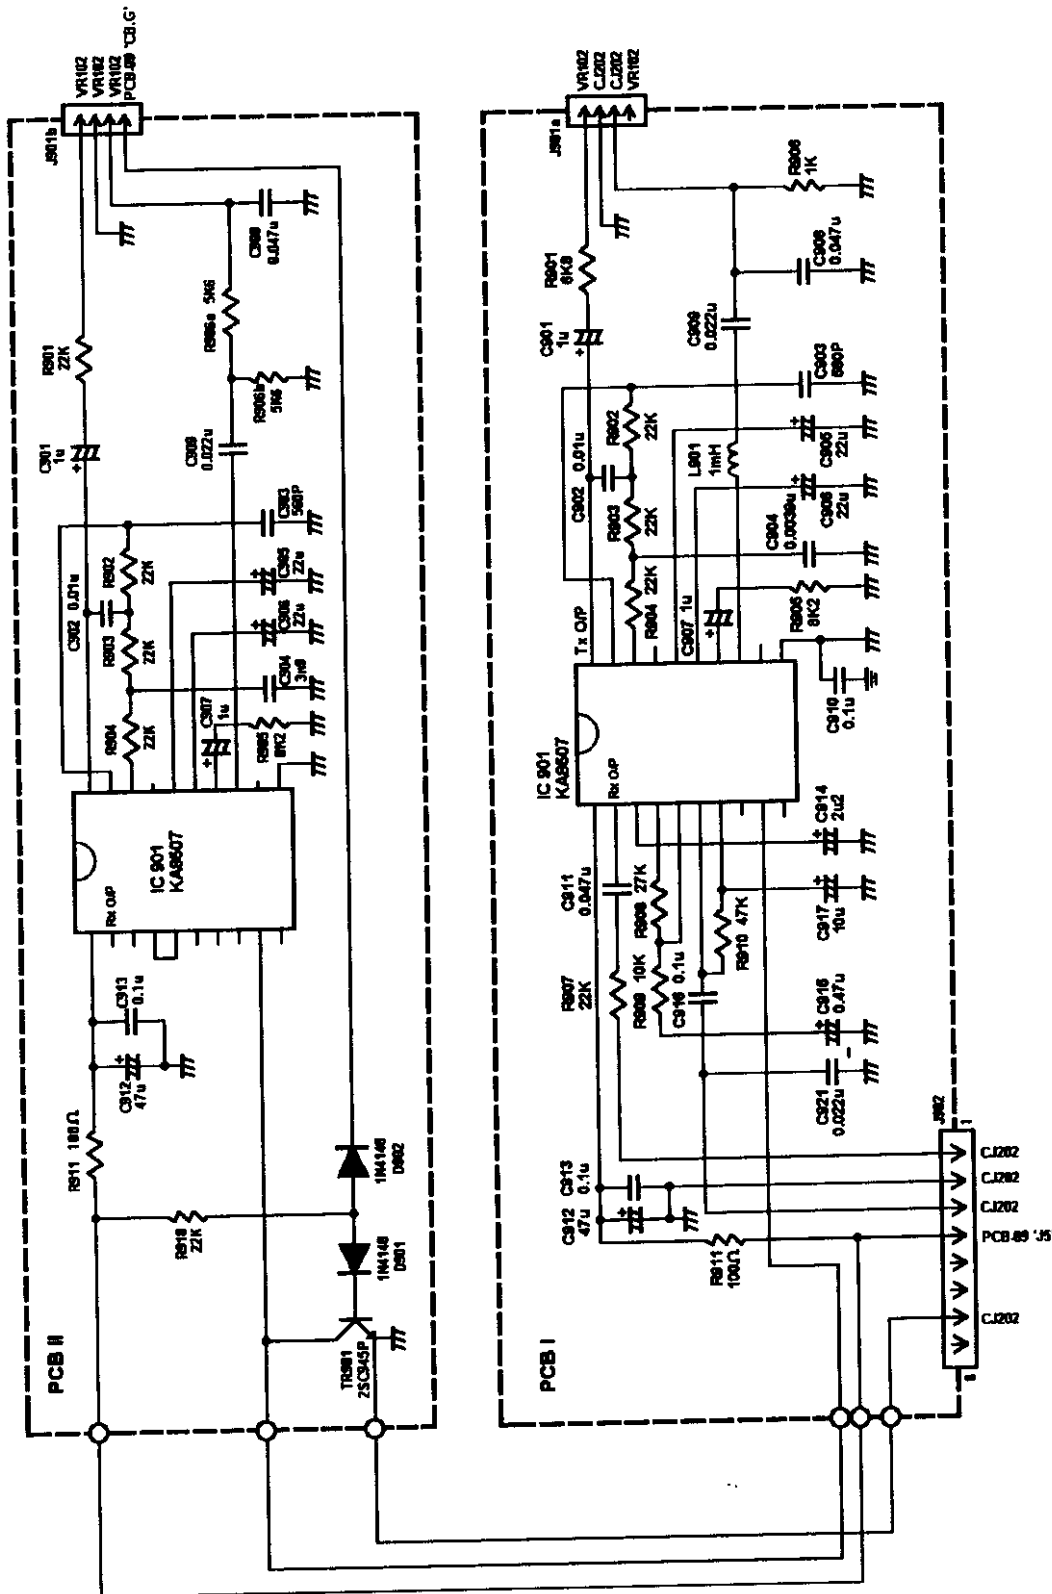


CBS-2100 Clear Drive PCB Assembly PCB-08

FILE: Clear Drive Board.PCX

Date: 13-4-1998

DWN BY: TUNG

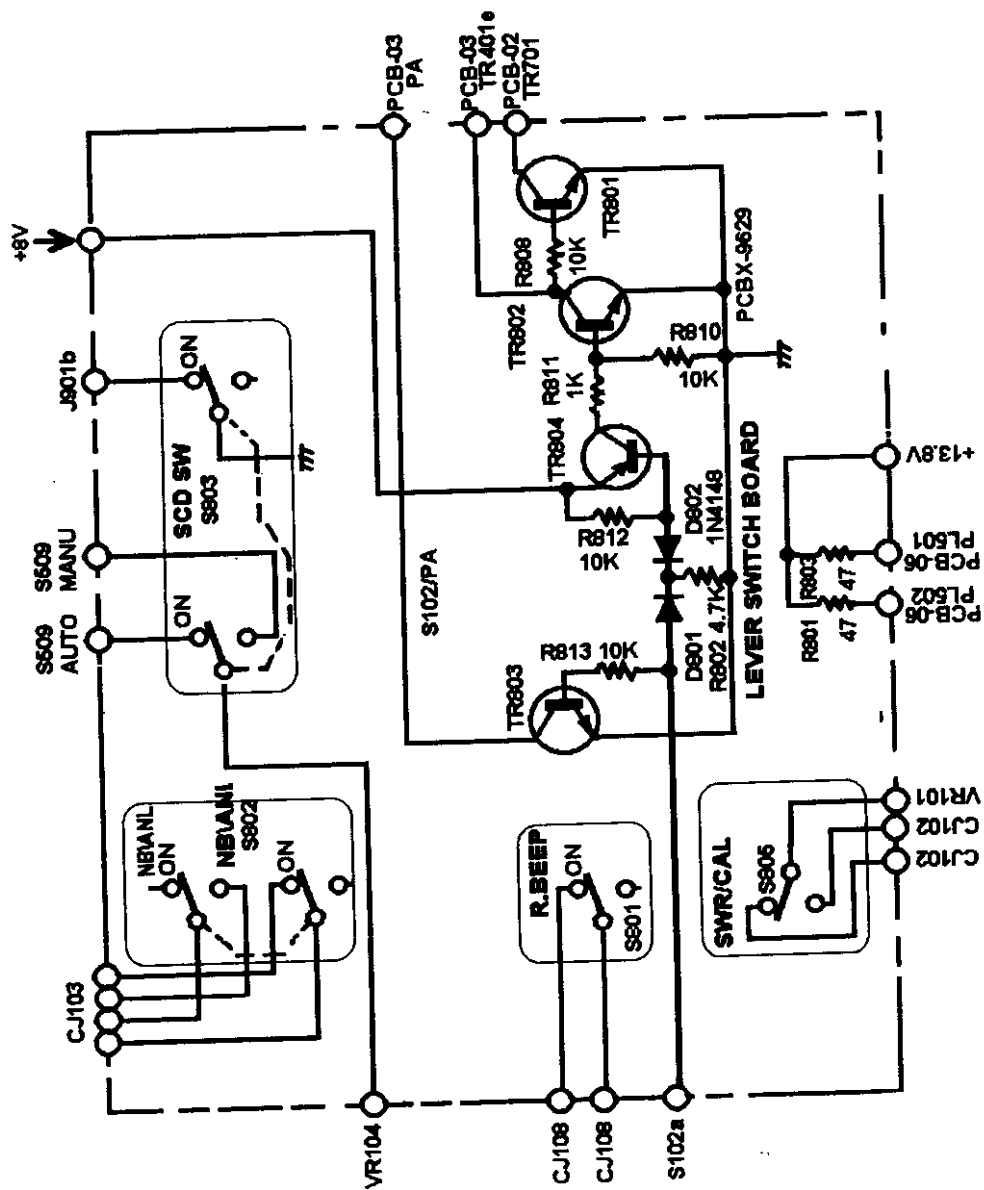


CBS-2100 LEVER SWITCH PCB ASSEMBLY PCB-09

FILE: Lever Switch Board.PCX

Date: 13-4-1999 DWN BY: TUNG

PA. PRE-AMP.

BOARD

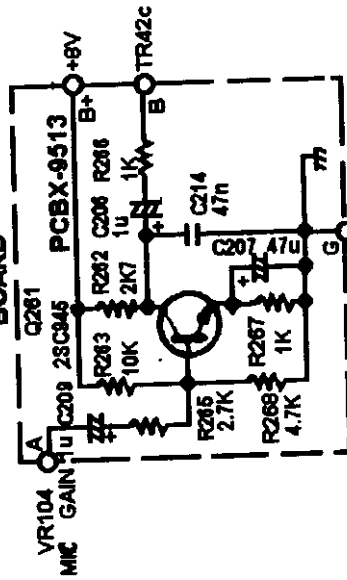


CBS-2100 PA. PRE-AMP. PCB ASSEMBLY PCB-10

FILE: PA PRE-AMP Board.PCX

Date: 13-4-1999 DWN BY: TUNG

FREQUENCY COUNTER BOARD

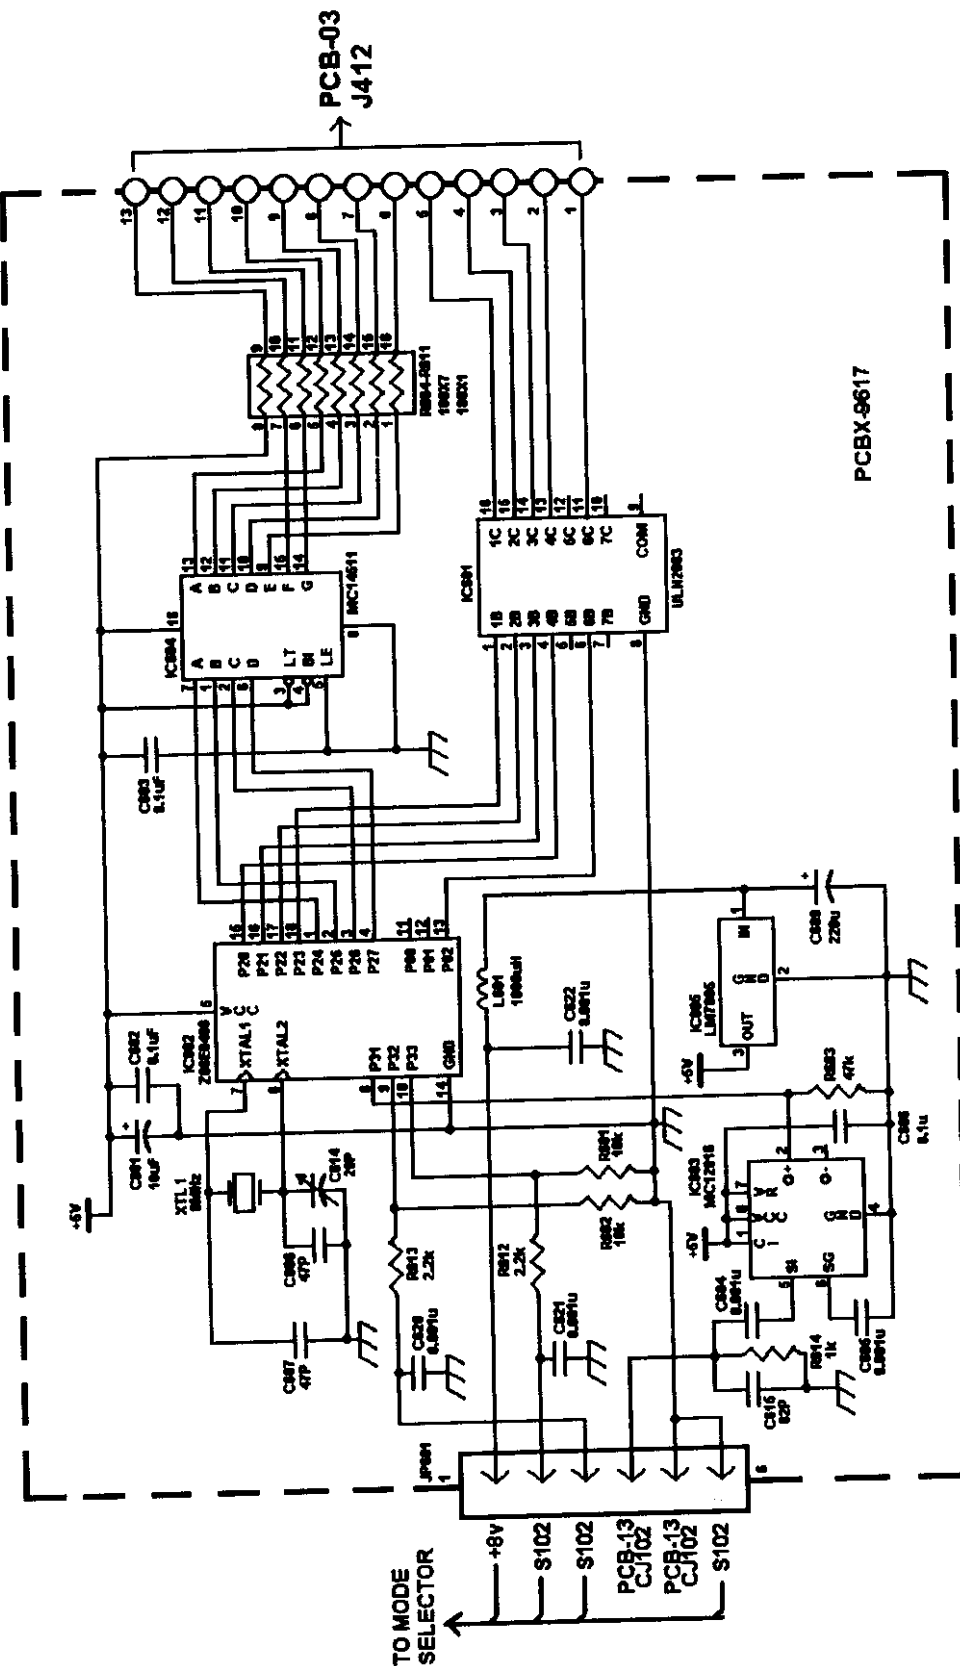

CBS-2100 Frequency Counter PCB Assembly PCB-12

FILE: FREQ Counter.PCX

Date: 13-4-1999


DWN BY: TUNG

FCC ID: MGP CBS2100



CBS-2100 BASE STATION
TRANSCEIVER BOARD (MAIN PCB) ASSEMBLY

Date: 12-4-99

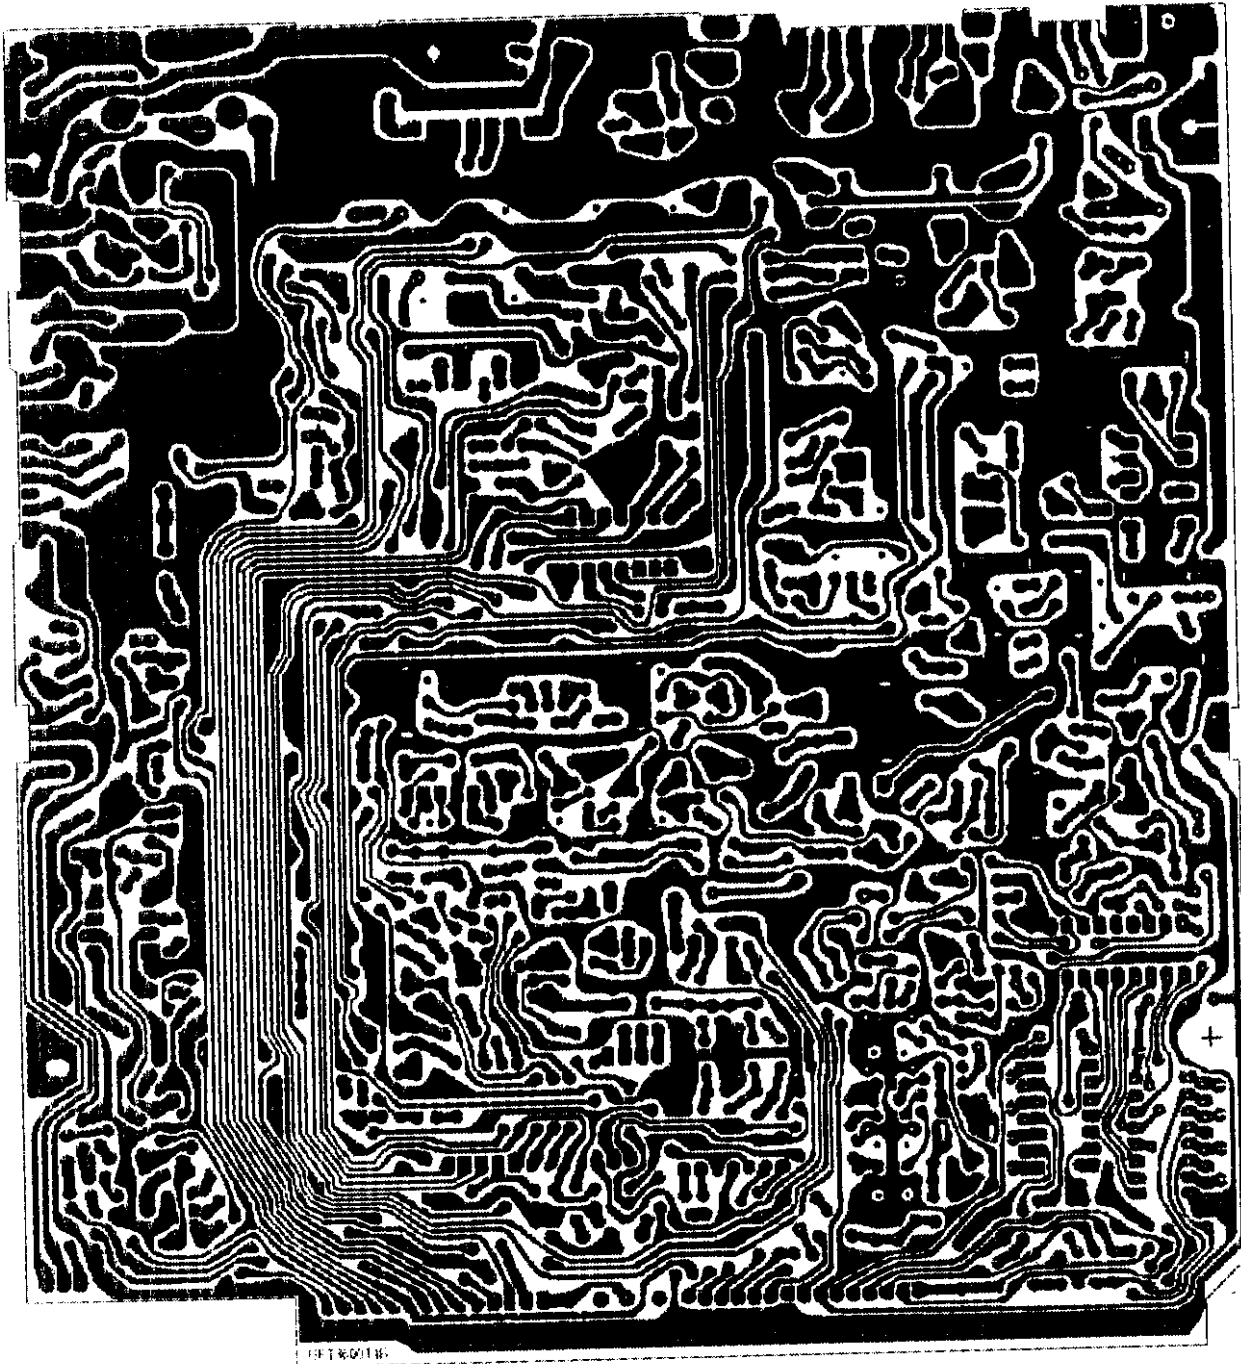


PCB LAYOUT (Copper Side)

CBS-2100 BASE STATION

TRANSCEIVER BOARD (MAIN PCB) ASSEMBLY

Date: 12-4-99

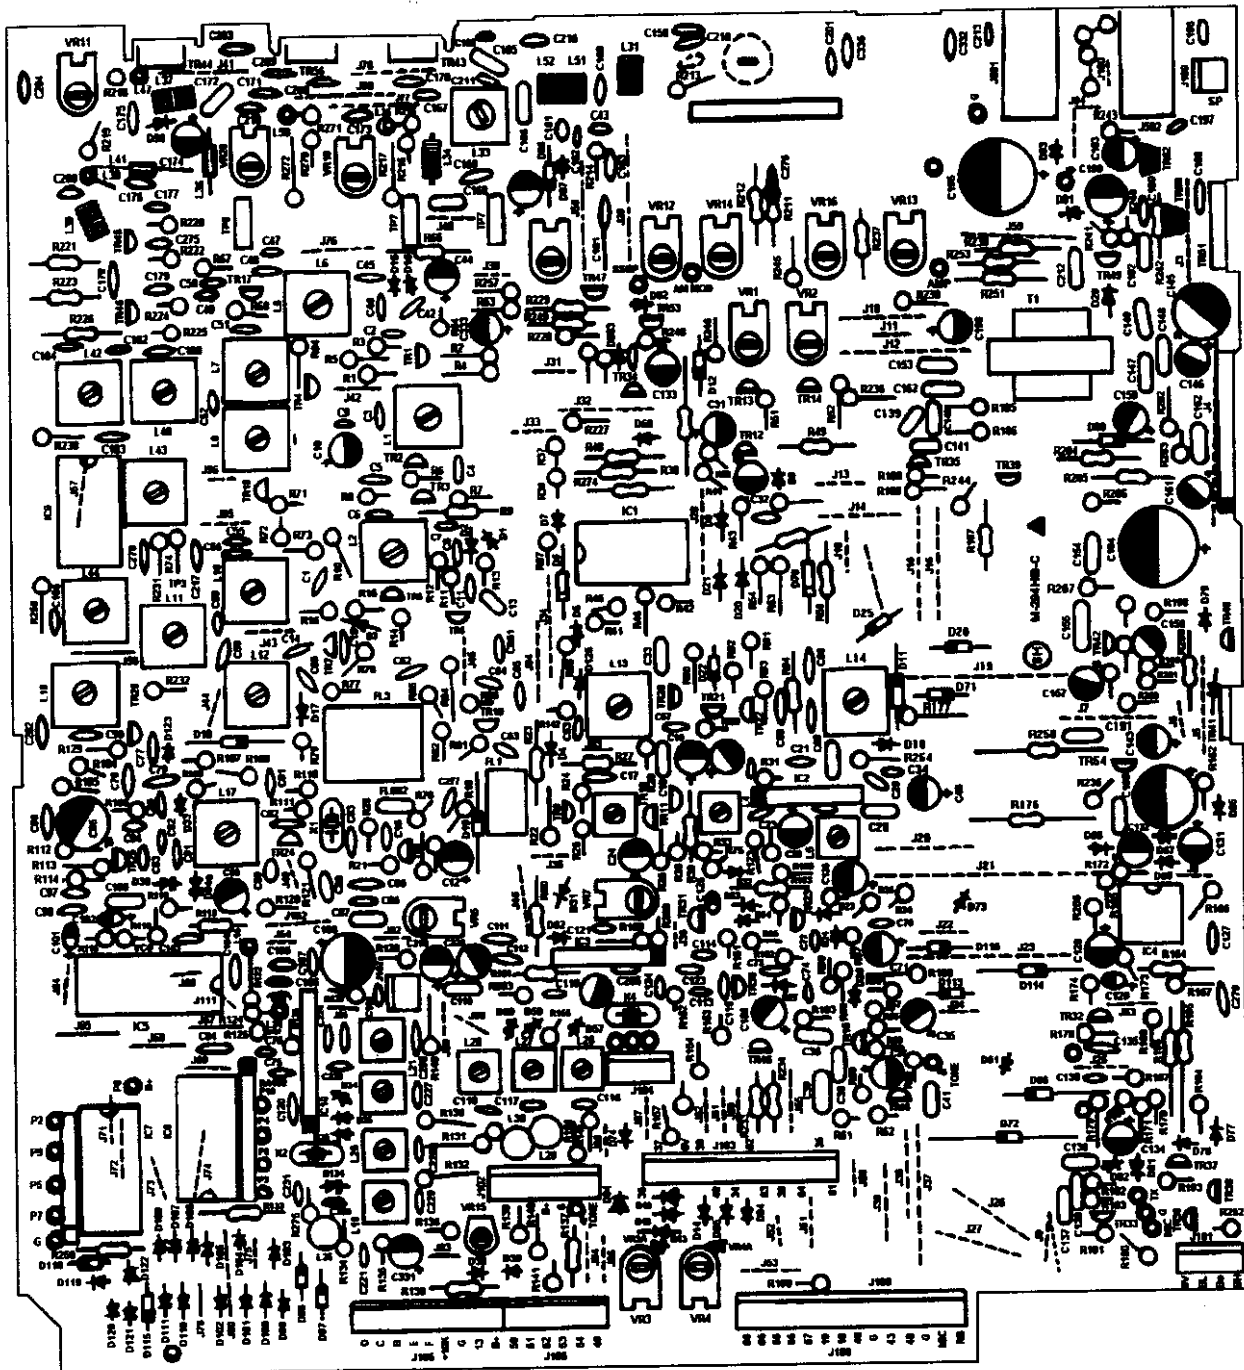

COMPONENT LOCATION

REMARK: This is a common part PCB for different transceiver models.

Some components are not required and not installed in the CBS2100.

Details in installed components can be found in the Main PCB Parts List.