


View Radiated Disturbance Worst Case Configuration – Horizontal, Internal Antenna



View Radiated Disturbance – Vertical, Internal Antenna Configuration




View Radiated Disturbance – On Edge, Internal Antenna Configuration

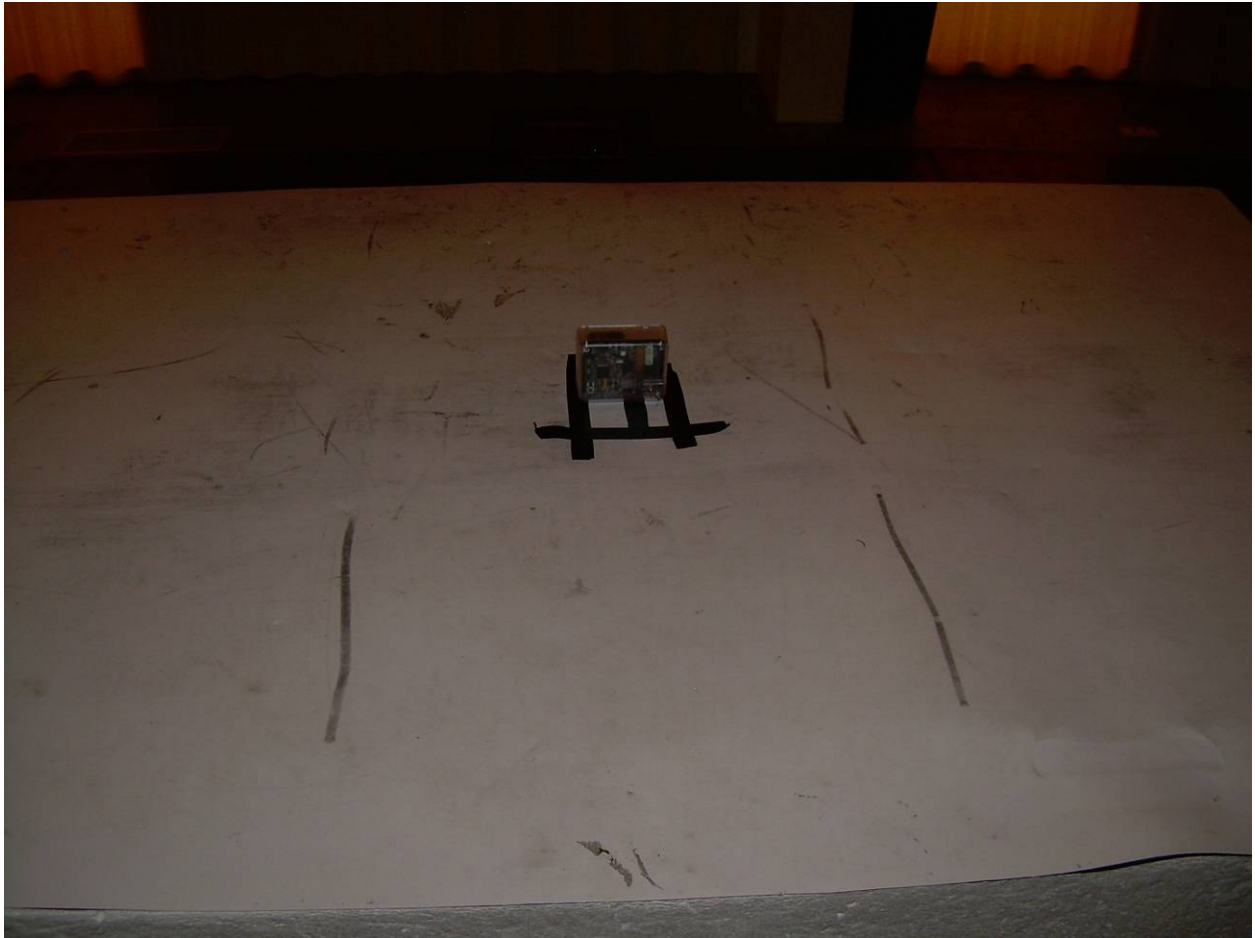

View Radiated Disturbance – Using External Antenna



View Radiated Disturbance – Using External Antenna

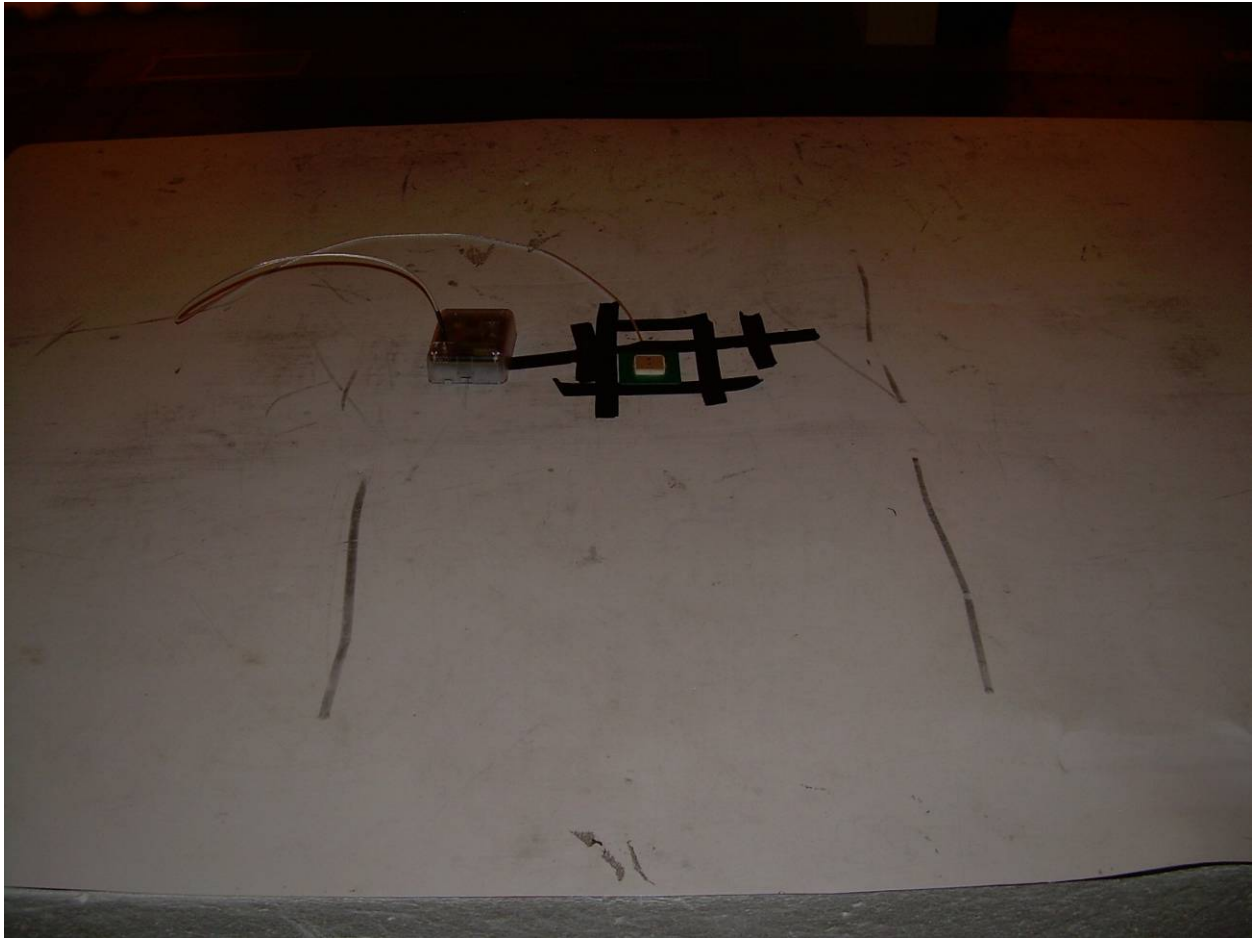

View Radiated Disturbance – Using External Antenna

