

TABLE OF CONTENTS

Section	Description	Page
1.0	Introduction	2
2.0	Safety Information	4
3.0	Installation Preparation	5
4.0	Mounting the Antenna	7
4.1	Mounting an Omni-Directional Antenna	7
4.2	Mounting a Yagi Antenna	7
5.0	Mounting Solar Panel to Antenna Mast	8
6.0	Mounting Solar Panel to Wall	10
7.0	Mounting the BSR-2 Box	10
8.0	BSR-2 Box Equipment Installation	11
9.0	Installing the Base Station Repeater	12
9.1	Rooftop Base Station Mount	12
9.2	Self-Supporting Tower	13
9.3	Tripod	15
10.0	Grounding the BSR-2 Installation	15
11.0	Groundhog Housing Installation	16
12.0	Electronic Module Installation	16
13.0	Specifications	19
14.0	Groundhog Model G-1 and G-2 Installation Guide	21
15.0	Limited Warranty	29
16.0	Limitation of Liability	29
17.0	Service of Your Equipment	30

DISCLAIMER OF LIABILITY

A reasonable attempt has been made to insure the accuracy of the material in this manual. It is, however, supplied without warranty or representation of any kind. Nu-Metrics assumes no responsibility and shall have no liability of any kind arising from the use of this publication or the material contained herein. Nu-Metrics reserves the right to add, delete and/or change the material at any time. Since the conditions or methods of installation, operation, use and maintenance of this equipment are beyond its control, Nu-Metrics does not assume responsibility and expressly disclaims liability of loss, damage, or expense arising out of or in any way connected with any installation, operation or maintenance not performed by Nu-Metrics authorized service personnel.

PURPOSE OF THIS MANUAL

This manual gives an overview of the equipment installation process and provides guidelines for installing your Groundhog Wireless System hardware. Read the entire manual carefully before you begin any of the installation procedures. You should also first read and be familiar with the Groundhog Wireless System Operation Manual and Groundhog and RFM-915 Programming Guide before proceeding.

WARNING - Radiation Exposure

This equipment complies with FCC RF exposure limits set forth for an uncontrolled environment, when installed as directed. This equipment should be installed and operated with fix-mounted antennas that are installed with a minimum of 2 meters separation distance between the antenna and all persons during normal operation.