


430

OWNER'S GUIDE

Advanced Vehicle Security System

With programmable Car
Jack Mode Feature

WWW.ULTRASTARTERS.COM

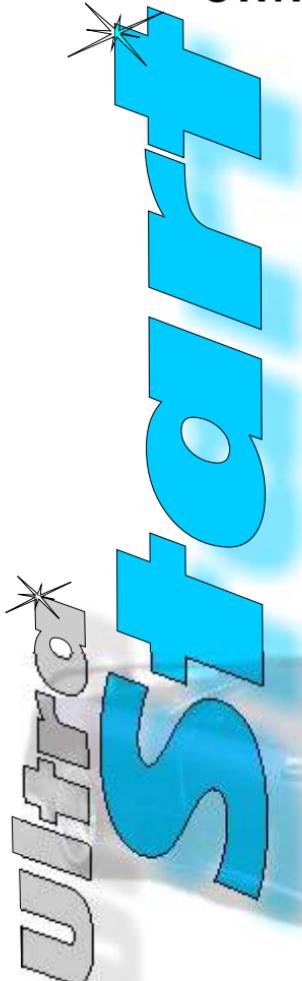

FCC/ID Notice

This device complies with Part 15 of the FCC rules. Operation is subject to the following conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance void the user's authority to operate this device.



Lock Doors & Arm The Alarm

1. Press & release the **LOCK** button on the remote transmitter.
2. The park lights will flash and the siren will chirp once.
3. The doors will lock.
4. The LED will start flashing within five seconds.



Unlock Doors & Disarm The Alarm

1. Press & release the **UNLOCK** button on the remote transmitter.
2. The park lights will flash and the siren will chirp twice.
3. The doors will unlock.
4. The LED will stop flashing.



Silent Arm And Disarm

1. Press & release the button three, then press & release the lock or unlock button.
2. If the doors are locked this will unlock the doors without siren chirps, the park lights will flash two times to confirm the doors have unlocked.
3. If the doors are unlocked this will lock the doors without siren chirps, the park lights will flash one time to confirm they have locked.



Trunk Release

1. Press and hold the **UNLOCK** button for three seconds.
2. The doors will unlock, continue holding the unlock button three seconds. the Trunk release will then activate. The trunk release will be confirmed by one park light flash.
3. For safety reasons, the trunk release output will not activate when ignition key is in the "On" position.



Car Finder Mode

1. Press and hold the ***** button for two seconds.
2. The system will flash the park lights and chirp the siren five times.

**This feature can help find your vehicle in a crowded parking lot.



Panic Mode

1. Press & hold the **LOCK** button for three seconds.
2. The park lights will flash and the siren will activate.

PANIC MODE DISABLE

1. Press **LOCK** button to disable the panic mode and to lock the doors.
2. Press **UNLOCK** button to disable the panic mode and unlock the doors.
3. Panic Mode will stay activated until disabled by the remote transmitter.



Service Mode

1. The system must be disarmed and the ignition is turned OFF.
2. Press and release the lock and unlock buttons at the same time, then press and hold the lock button for five seconds.
3. The system will respond with **five chirps** and park light flashes to confirm that the system is in Valet mode.
4. The LED will stay **ON** steady to confirm Valet Mode.



Exit Service Mode

1. Press and release the lock and unlock buttons at the same time, then press and hold the lock button for five seconds.
2. The system will respond with **two chirps** and park light flashes to confirm that the system has exited Valet mode.
3. The LED will turn **OFF**.

Note: If the LED does not turn off, check that all the door's are closed. The LED stays on solid when a door is left opened.



Emergency Service Mode

Emergency Service Mode temporarily disables the alarm system. This feature can be used if the remote is lost or if the system malfunctions.



ENTERING VALET MODE

1. While the ignition is "On" press and hold the Service button for five seconds. The siren will chirp **five times**.
2. Alarm functions will be disabled and the LED will be **ON** steady. The door-locks and trunk release are still operational.



EXITING VALET MODE

1. While the ignition is "On" press and hold the Service button for five seconds. The siren will chirp **two times**.
2. The system returns to normal operation.



Ignition Controlled Door Locks

Optional Programmable Feature

- This feature will automatically lock the doors two seconds after the ignition key is turned to the "On" position.
- The doors will unlock when the ignition key is turned to the "off" position.

Car Jack Mode

Optional Programmable Feature

If Car Jack Mode is programmed, the alarm will activate if the door is opened while the ignition key is turned to the "Off" position. Car Jack Mode can also be activated by pressing button #3 (The Star Button) on the remote while the key is in the "On" position. When Car Jack Mode is activated the siren will begin a 10 second count down, chirping once every second. After the countdown has expired the alarm will fully activate. Once activated the remote transmitter will no longer disable the Alarm System.

To disable the alarm during the countdown period - Turn the ignition key to the "On" position then press the program button **1 time**.

To disable the alarm after full alarm - Turn the ignition key to the "On" position then press the program button **5 times**.

Passive Arming

This optional feature will arm your system automatically upon leaving vehicle.

1. Turn ignition off and then open and close door.
2. The LED will flash rapidly indicating system will arm in 30 seconds.
- Note:** If the door is opened during this time, the system will wait for the door to close again to start passive arming.
3. After 30 seconds the system will arm. If the optional Passive Locks feature is programmed "On" the doors will lock when the system arms.

*** Use caution when the Passive Locks feature is programmed "On".
DO NOT LEAVE THE KEYS IN THE IGNITION!

Alarm Triggered

1. When the alarm is triggered by the door, hood, shock etc., the siren will activate in 60 second cycles. After 60 seconds the siren will turn off and the system will return to the armed state.
2. To turn off siren before 60 seconds has expired, press button Arm or Disarm Button on the remote one time.

Note: When the alarm is disarmed if the siren chirps three times, this indicates that the alarm has been set off.

Auto Sensor Delete

1. 30 seconds after the system arms the system will automatically disable any defective zones (ie door trigger, shock sensor, hood input)
2. This will be confirmed by four chirps to indicate a zone has been bypassed.
3. If this happens, check doors, hood etc. If this does not fix problem, see dealer.

WARRANTY- Optional Three year & lifetime warranty available. See Dealer For Details.

The manufacturer warrants to the original purchaser of their remote starters and alarms, that the product shall be free from defects in material and workmanship. However, should this product be proven to be defective, within a two year period from the original date of purchase, the manufacturer will, without charge to the purchaser (excluding any charges incurred to have the product delivered to the manufacturer), repair or replace any part of the remote starter and/or alarm which the manufacturer agrees to be defective. All warranties apply on to the original purchaser and the vehicle in which it is originally installed. Repairs or replacement of defective modules shall remain at the discretion of the manufacturer. All other parts, components, accessories and/or optional equipment pertaining to the remote starter and alarm are not included in the manufacturer's warranty. **This warranty is non-transferable.** Request for warranty service from any Factory Authorized Dealer **must be accompanied with the original purchase receipt or have product registered by authorized dealer on manufacturer's website.** Failure to comply with any of these conditions may result in warranty being voided.

This warranty does not cover the following: removal and reinstall labour charges, shipping charges, abuse, misuse, or accidental damages to the remote starter and alarm, automobile, and/or parts thereof. This warranty is void upon modification, repairs, or alterations of any part of the System. The manufacturer does not guarantee or insure against theft of the vehicle or its contents. Alarm models are designed only to act as a deterrent against possible theft. This alarm may qualify for auto insurance discounts, contact your Insurance Agent for further information. The manufacturer shall not be held liable for any consequential damages due to breach of this or any other warranty, expressed, or implied. This warranty gives you specific legal rights. Your specific legal rights may vary for each region.

CERTAIN DAMAGES EXCLUDED - The manufacturer expressly disclaims any liability or responsibility for incidental damages caused by the product, including economic loss, loss of use of the product, car rentals, or any other costs relating to the care and custody of the product. The manufacturer disclaims liability or responsibility for any consequential damages caused by the product or resulting from its use, including the cost of repairing or replacing other property damaged by the product or caused by its use, whether or not the product is working properly. The product is intended to deter unauthorized use of the vehicles in which it is installed. The manufacturer does not warrant that the product is fool-safe against theft and/or vandalism and/or human error or misuse. The manufacturer accepts no liability or responsibility for any damage of any kind whatsoever caused to any vehicle in which the product is installed or any resulting damage from its use. The manufacturer accepts no responsibility or liability for any damage resulting to or theft of the vehicle or its contents, caused or alleged to be caused, directly or indirectly, by failure of the product.