

## E-MESSAGER WALKIE TALKIE

### SETTING THE TIME AND CALENDAR

1. PUSH THE 'POWER' BUTTON TO 'CLOCK/IR' POSITION. (SEE FIG. 1)
2. NORMALLY DISPLAY SHOW NORMAL TIME. TO READ THE CALENDAR, PRESS 'MODE' KEY ONE TIME. TO READ ALARM TIME, PRESS 'MODE' KEY 2 TIMES
3. SETTING THE TIME
  - NORMALLY DISPLAY SHOW NORMAL TIME.
  - PRESS 'SET' KEY ONE TIME TO ENTER THE 'HOUR' MODE, THEN DEPRESS '<' '>' KEY TO SET THE HOUR.
  - PRESS 'SET' KEY 2 TIMES TO ENTER THE 'MINUTE' MODE, THEN DEPRESS '<' '>' KEY TO SET THE MINUTE.
  - PRESS 'SET' KEY 3 TIMES TO ENTER THE 'SECOND' MODE, THEN DEPRESS '<' '>' KEY TO SET THE SECOND.
  - AFTER FINISH SETTING THE TIME, PRESS 'SET' KEY ONE MORE TIME TO CONFIRM THE SETTING.
4. PRESS 'MODE' KEY ONE TIME TO ENTER CALENDAR MODE  
SETTING THE MONTH:
  - PRESS 'SET' KEY ONE TIME TO ENTER 'MONTH' MODE, THEN DEPRESS '<' '>' KEY TO SET THE MONTH.
  - PRESS 'SET' KEY 2 TIMES TO ENTER 'DATE' MODE, THEN DEPRESS '<' '>' KEY TO SET THE DATE.
  - PRESS 'SET' KEY 3 TIMES TO ENTER 'YEAR' MODE, THEN DEPRESS '<' '>' KEY TO SET THE YEAR.
  - AFTER FINISH SETTING THE CALENDAR, PRESS 'SET' KEY ONE MORE TIME TO CONFIRM THE SETTING.
5. PRESS 'MODE' KEY TWO TIMES TO ENTER ALARM MODE
  - PRESS 'SET' KEY ONE TIME TO ENTER 'HOUR' MODE, THEN DEPRESS '<' '>' KEY TO SET THE ALARM HOUR.
  - PRESS 'SET' KEY 2 TIMES TO ENTER 'MINUTE' MODE, THEN DEPRESS '<' '>' KEY TO SET THE ALARM MINUTE.
  - AFTER FINISH SETTING THE ALARM TIME, PRESS 'SET' KEY ONE MORE TIME TO CONFIRM THE SETTING.

### HOW TO SET AND CANCEL THE PRIVATE I.D. CODE

IF YOU WANT TO PLAY THE IR CHAT, SEND AND RECEIVE MESSAGE WITH ONLY ONE OF YOUR FRIEND, YOU HV TO PRESET THE SAME I.D. CODE NUMBER (MAX. FOUR NUMBERS) INTO BOTH OF YOUR MACHINE.

#### 1. TO PRESET I.D. CODE

- PRESS 'IR CHAT' KEY, AND THEN PRESS 'PRIVATE CALL' KEY.  
DISPLAY SHOW:

IR CHAT	((.)))
I.D. ?	

- PRESS 'ENTER' KEY, AND START TO INPUT 4 NUMBERS 'I.D.CODE'
- AFTER PRESET THE I.D. CODE, PRESS 'ENTER' KEY AGAIN TO CONFIRM INPUT  
DISPLAY SHOW:

IR CHAT	((.)))
OK !	

#### 2. TO CANCEL I.D. CODE

- PRESS 'IR CHAT' KEY, AND THEN PRESS 'ICQ' KEY

- PRESS 'ENTER' KEY TO CONFIRM CANCEL
- 'I.D. CODE' WILL BE CANCELLED AUTOMATICALLY.

**POWER LIGHT BUTTON**

PRESS THE LIGHT BUTTON TO VIEW THE CLOCK AND MESSAGE IN THE DARK PLACE.

TO PLAY THE IR CHAT SENDING AND RECEIVING MESSAGE WITH YOUR FRIEND.

1. PUSH THE 'POWER' BUTTON TO 'CLOCK/ IR' POSITION.
2. PRESS THE 'IR CHAT' KEY TO ENTER 'IR CHAT' MODE.

DISPLAY SHOW

IR CHAT (((.)))  
EDIT MESSAGE.

**IMPORTANT :**

BEFORE YOU GO TO THE 'CHAT ROOM', FIRST CONFIRM TO PLAY THE IR CHAT WITH ONE OF YR FRIEND OR A GROUP.

(A) IF YOUR WANT TO SEND AND RECEIVE MESSAGE TO A GROUP,  
 -PRESS 'ICQ' KEY.  
 -PRESS 'ENTER' AND START TO EDIT YOUR MESSAGE.  
 -PRESS 'SEND' KEY TO SEND MESSAGE TO A GROUP.

(B) OR PRESS 'PRIVATE CALL' KEY SENDING AND RECEIVING MESSAGE TO ONLY ONE OF YOUR FRIEND, WHO HAS PRESET THE SAME I.D. CODE NUMBER IN BOTH OF YOUR MACHINE.

IF SENDING PRIVATE CALL TO YOUR FRIEND,

- PRESS 'PRIVATE CALL' KEY
- SENDER DISPLAY SHOW

IR CHAT (((.)))  
I.D. ?

- PRESS 'ENTER' TO INPUT YOUR SECRET "FOUR NUMBERS" CODE.  
 FOR EXAMPLE :

IF SENDER ALREADY PRESET '1111' AS I.D. CODE WITH YOUR PRIVATE FRIEND,

- PRESS 1111

SENDER DISPLAY SHOW

IR CHAT (((.)))  
1111

- PRESS 'ENTER' KEY ONE MORE TIME TO CONFIRM THE CODE SETTING
- DISPLAY SHOW

IR CHAT (((.)))  
OK!

THEN THE MESSAGE IS ONLY TRANSMIT TO THE RECEIVER WHO HV PRESET THE SAME I.D. CODE '1111'

AFTER YOU CONFIRM TO PLAY THE IR CHAT IN 'ICQ' OR 'PRIVATE CALL' FORMAT.  
 NOW GO TO 'CHAT ROOM' STEP

## TO PLAY THE WALKIE TALKIE

1. PUSH THE 'POWER' BUTTON TO 'WALKIE TALKIE' POSITION.
2. PRESS THE 'PUSH TO TALK' BUTTON TO TRANSMIT YOUR VOICE.
3. RELEASE 'PUSH TO TALK' BUTTON FOR RECEIVING VOICE.
4. TURN THE 'POWER' BUTTON TO 'OFF' POSITION AFTER USED.

## TO REPLACE THE BATTERY

1. REMOVE THE SCREW ON THE BATTERY DOOR
2. SNAP IN A 9V BATTERY WITH CORRECT POLARITY, & PLACE INTO THE BATTERY COMPARTMENT . ( SEE FIG. 2)
3. REMOVE THE SMALL SCREW IN THE BATTERY COMPARTMENT FOR THE TWO BUTTON CELL BATTERY, & THEN REMOVE THE SMALL TONGUE.
4. INSERT 2 PCS AG-13 BUTTON CELL BATTERY, AND STACKED ON EACH OTHER WITH CORRECT POLARITY INTO THE BATTERY COMPARTMENT. ( SEE FIG. 2)
5. REPLACE THE SMALL TONGUE AND SMALL SCREW.
6. REPLACE THE BATTERY DOOR AND SCREW.

## IMPORTANT WARNING

1. SUGGEST TO CHANGE THE BATTERY BY ADULT
2. SMALL PARTS NOT FOR CHILDREN UNDER 3 YEARS AGE.
3. DO NOT TOUCH OR MODIFY THE INTERNAL COMPONENTS OTHER THAN REPLACING THE BATTERY.
4.
  - DO NOT MIX OLD AND NEW BATTERIES.
  - DO NOT MIX ALKALINE, STANDARD (CARRON-ZINC) OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES
    - NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED.
    - RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED (IF REMOVABLE).
    - RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION (IF REMOVABLE).
    - DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES ARE NOT TO BE MIXED.
    - ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS RECOMMENDED ARE TO BE USED.
    - BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY.
    - EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY.
    - THE SUPPLY TERMINALS ARE NOT TO BE SHORT CIRCUITED.
    - THE PACKAGING HAS TO BE KEPT SINCE IT CONTAINS IMPORTANT INFORMATION.
    - DO NOT USE RECHARGEABLE BATTERIES

## REMARK

MODIFICATIONS NOT AUTHORIZED BY THE MANUFACTURER MAY VOID USERS AUTHORITY TO OPERATE THIS DEVICE.

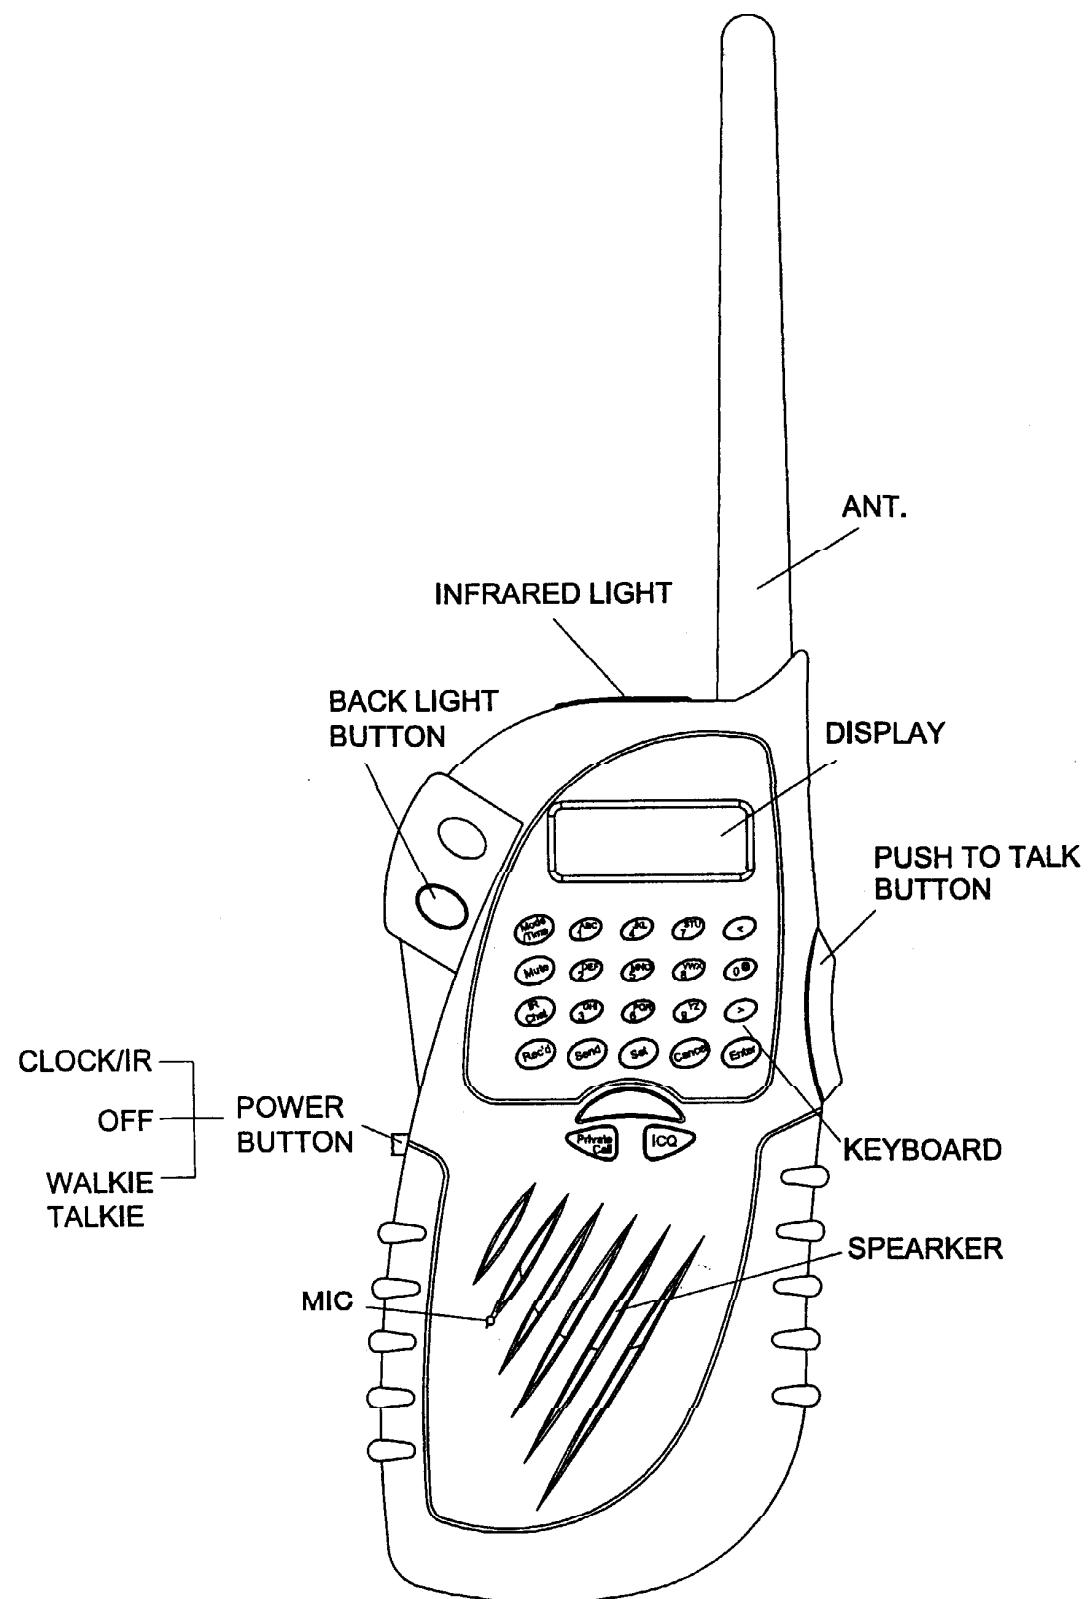


FIG.1

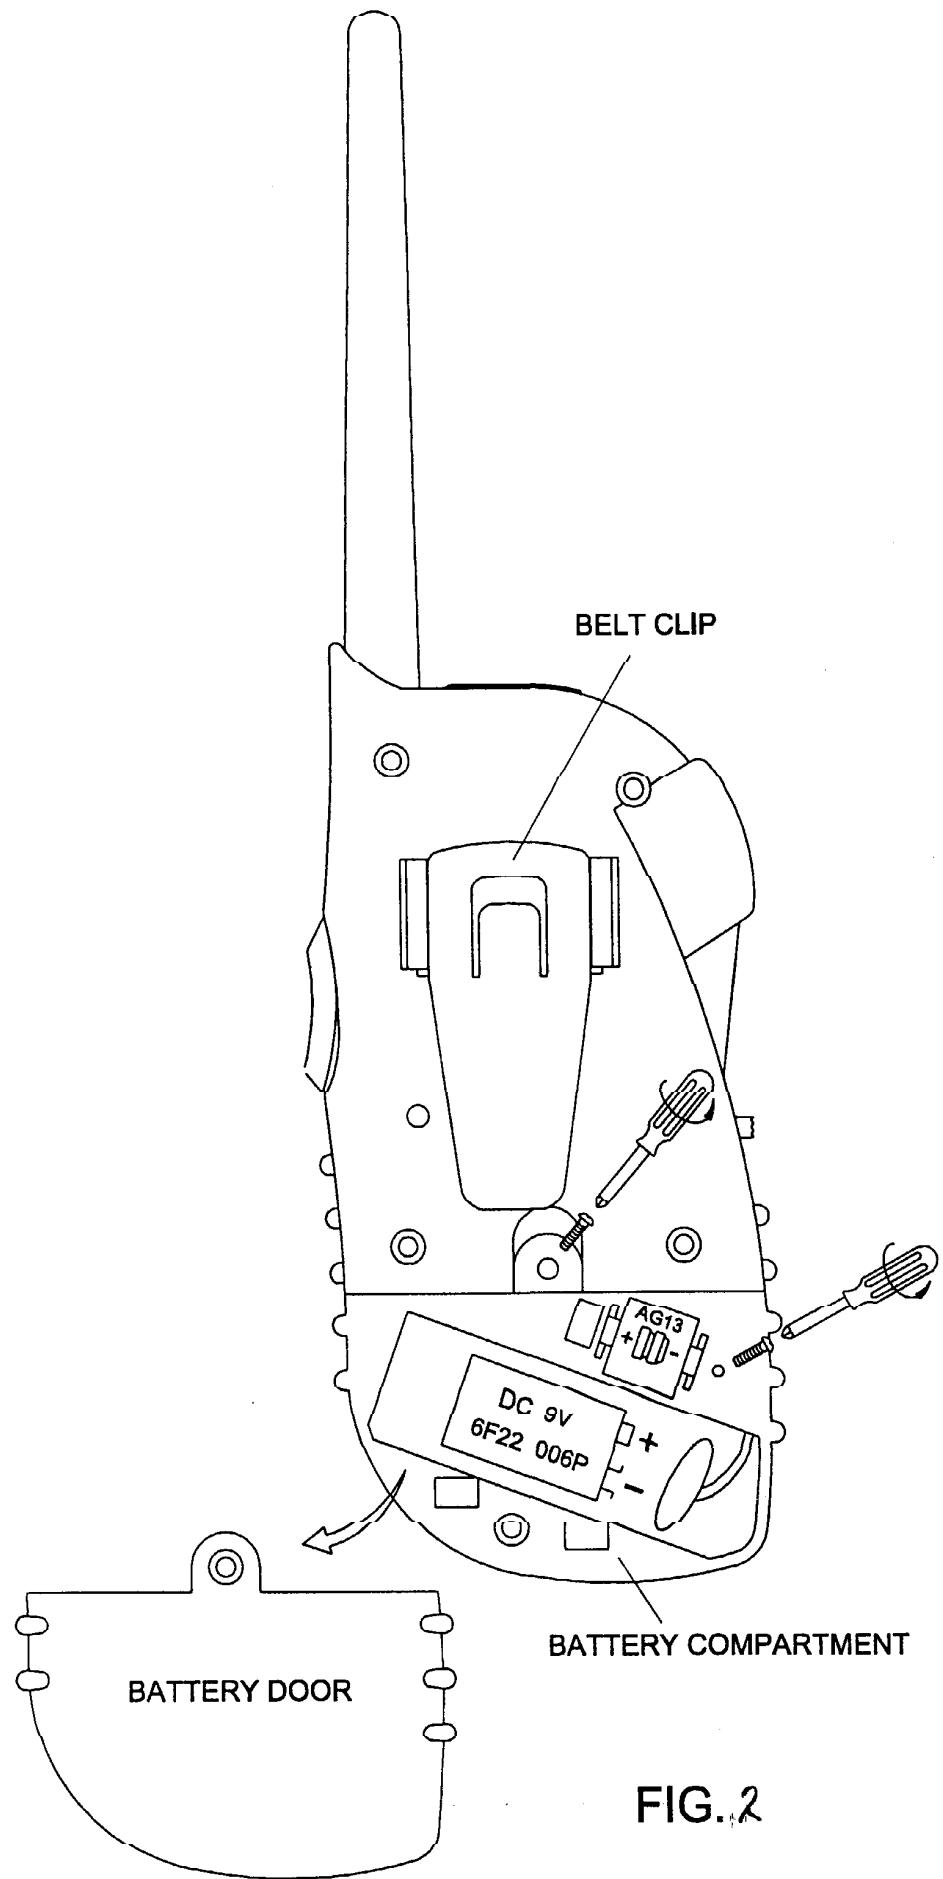


FIG. 2