

TO REPLACE THE BATTERY FOR LCD WATCH AND WALKIE TALKIE:

1. REMOVE THE SCREW ON THE BATTERY DOOR WITH A SCREW DRIVER (SEE FIG. 2)
2. OPEN THE BATTERY DOOR.
3. BATTERY FOR LCD WATCH: INSERT A FRESH NEW ALKALINE BATTERY (1.5V AG-3 BUTTON CELL BAATTERY) WITH THE POSITION (+) SIDE UP INTO THE BATTERY COMPARTMENT. (SEE FIGURE 2)
4. BATTERY FOR WALKIE TALKIE:INSERT A FRESH NEW ALKALINE BATTERY (12V) INTO BATTERY COMPARTMENT ACCORDING TO CORRECT POLARITY. (SEE FIGURE 2)
5. REPLACE THE BATTERY DOOR AND THE SCREW.

READING THE WATCH DISPLAY TIME:

- NORMALLY DISPLAY SHOW THE NORMAL TIME.
- TO READ THE MONTH AND DATE, PRESS THE 'SET' BUTTON ONE TIME AFTER 2 SECOND, DISPLAY GO BACK TO NORMAL TIME.
- TO READ THE SECOND, PRESS THE 'SET' BUTTON 2 TIMES, IF RETURN TO NORMAL TIME, PRESS SET BUTTON ONE TIME AGAIN.

BATTERY POWER OF LCD WATCH:

TO MOVE THE LCD WATCH STABLE OPERATION, WE STRONGLY RECOMMEND THE EXCLUSIVE USE OF ALKALINE BATTERY.
(OPERATED BY ONE PC OF 1.5V AG-3 BUTTON CELL BATTERY)

TIME AND DATE SETTING

MONTH SETTING:

1. PRESS 'MODE' BUTTON ONE TIME, DISPLAY SHOW MONTH AND DATE.
2. PRESS 'MODE' BUTTON TWO TIMES TO ENTER MONTH MODE, THEN DEPRESS 'SET' BUTTON TO SET THE DATE.

DATE SETTING:

3. PRESS 'MODE' BUTTON 3 TIMES TO ENTER DATE MODE, THEN DEPRESS 'SET' BUTTON TO SET THE MONTH.

HOUR SETTING:

4. PRESS 'MODE' BUTTON 4 TIMES TO ENTER HOUR MODE, THEN DEPRESS 'SET' BUTTON TO SET HOUR. ('A' MEANS AM, 'P' MEANS PM)

MINUTE SETTING:

5. PRESS 'MODE' BUTTON 5 TIMES TO ENTER MINUTE MODE, THEN DEPRESS 'SET' BUTTON TO SET MINUTE.

AFTER FINISH SETTING, PRESS 'MODE' BUTTON ONE MODE TIME GO BACK TO NORMAL TIME.

WALKIE TALKIE OPERATION

1. TURN THE 'ON/OFF' VOLUME BUTTON TO 'ON' POSTION.
2. ADJUST THE VOLUME LEVEL AS DESIRED WITH THE CONTROL.
3. PLUG THE EARPHONE SET INTO THE EARPHONE JACK. (SEE FIGURE 1).

4. MOVE THE MIC CLOSE TO YOUR MOUTH, AND PRESS THE 'PUSH TO TALK' BUTTON TO TRANSMIT YOUR VOICE.
5. RELEASE THE 'PUSH TO TALK' BUTTON FOR RECEIVING VOICE FROM THE EARPHONE SET.
6. ROTATE THE ANTENNA AS DESIRED THE BEST RECEIVING FREQUENCY.
7. TURN 'ON/OFF' VOLUME BUTTON TO 'OFF' POSITION AFTER USE.

WARING:

1. SUGGEST TO CHANGE THE BATTERY BY ADULT.
2. SMALL PARTS NOT FOR CHILDREN UNDER 3 YEARS AGE.
3. DO NOT TOUCH OR MODIFY THE INTERNAL COMPONENTS OTHER THEN REPLACE THE BATTERY.
4. DO NOT MIX OLD AND NEW BATTERIES.
5. DO NOT MIX ALKALINE, STANDARD (CARBON ZINC), OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES.

REMARK:

MODIFICATIONS NOT AUTHORIZED BY THE MANUFACTURER MAY VOID USERS AUTHORITY TO OPERATE THIS DEVICE.

NOTE:

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION. THIS EQUIPMENT GENERATES, USES AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. HOWEVER, THESE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION. IF THIS EQUIPMENT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION, WHICH CAN BE DETERMINED BY TURNING THE EQUIPMENT OFF AND ON, THE USER IS ENCOURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OR MORE OF THE FOLLOWING MEASURES:

- REORIENT OR RELOCATE THE RECEIVING ANTENNA.
- INCREASE THE SEPARATION BETWEEN THE EQUIPMENT AND RECEIVER.
- CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT TO WHICH THE RECEIVER IS CONNECTED.
- CONSULT THE DEALER OR AN EXPERIENCED RADIO/TV TECHNICIAN FOR HELP.

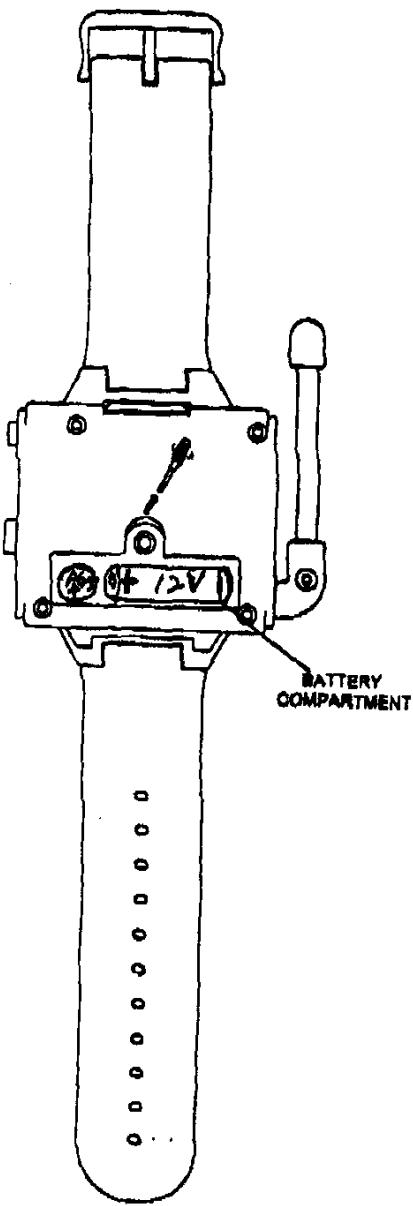


Fig. 2

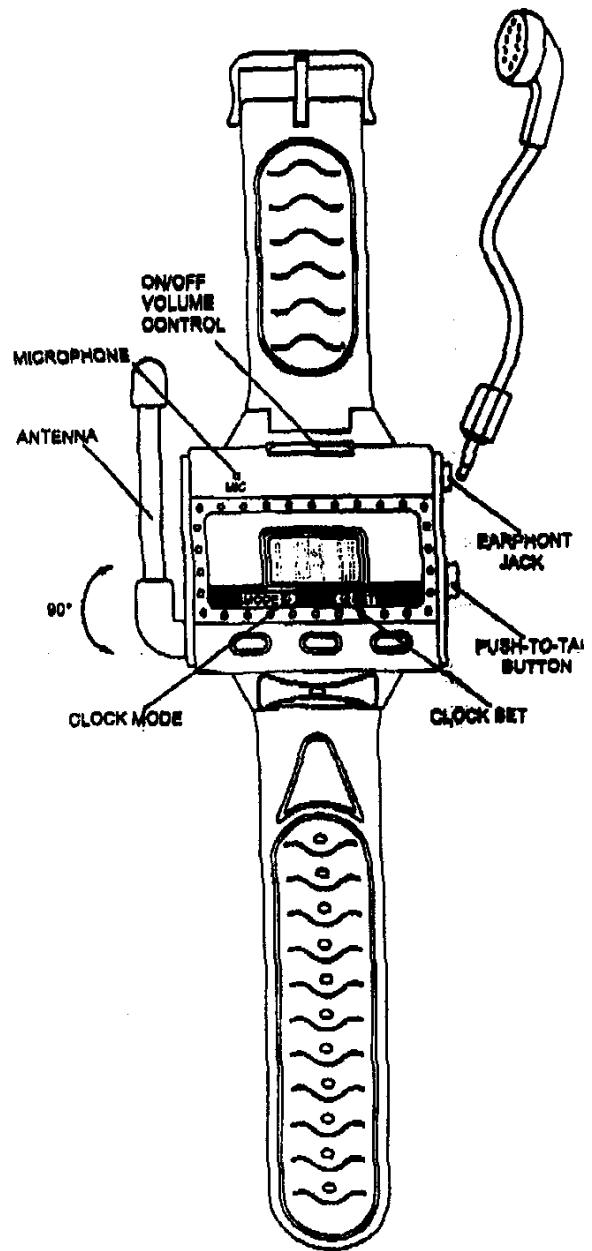


FIG. 1