

WT-352 ONE WAY WALKIE TALKIE INSTRUCTION MANUAL

TO REPLACE THE BATTERY FOR WALKIE-TALKIE:

1. REMOVE THE SCREW ON THE BATTERY DOOR WITH A SCREW DRIVER.
2. OPEN THE BATTERY DOOR AND SNAP IN A 9V BATTERY.
3. REPLACE THE BATTERY DOOR AND THE SCREW ON POSITION.

WALKIE-TALKIE OPERATION

1. PUSH THE "HI/LOW/OFF" SWITCH TO "LOW" POSITION OR "HI" POSITION.
2. PRESS THE "PUSH TO TALK" BUTTON TO TRANSMIT. PRESS THE "MORSE CODE BUTTON" AT THE SAME TIME TO TRANSMIT MORSE CODES.

3. RELEASE "PUSH TO TALK" BUTTON RECEIVING VOICE OR MORSE CODES.

4. UNITS MAY HAVE FEEDBACK (SQUEALING NOISE) PLAYED TOO CLOSE TOGETHER. MOVE FURTHER APART WHEN THIS OCCURS.

5. IF YOU EXPECT TO HAVE A STRONGER VOICE, YOU CAN TURN THE "HI/LOW/OFF" SWITCH TO "HI" POSITION.
6. TURN "HI/LOW/OFF" SWITCH TO "OFF" POSITION AFTER USED.

WARNING:

1. SUGGEST TO CHANGE THE BATTERY BY ADULT.
2. DO NOT TOUCH OR MODIFY THE INTERNAL COMPONENTS OTHER THAN REPLACE THE BATTERY.
3. DO NOT MIX OLD AND NEW BATTERIES.
4. DO NOT MIX ALKALINE STANDARD (CARBON ZINC), OR RECHARGEABLE (NICKLE-CADMIUM) BATTERIES.

" Modifications not authorized by the manufacturer may void users authority to operate this device"

Note:

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.