

WT-357 Sports Watch Walkie Talkie Instruction Manual



TO CHANGE THE BATTERY DOOR FOR LCD AND WALKIE TALKIE:

1. REMOVE THE SCREW ON THE BATTERY DOOR WITH A SCREW DRIVER. (SEE FIG.2)
2. OPEN THE BATTERY DOOR.
3. BATTERY FOR LCD WATCH: INSERT A FRESH NEW ALKALINE BATTERY (1.5V AG-3 BUTTON CELL BATTERY) WITH THE POSITION (+) SIDE UP INTO THE BATTERY COMPARTMENT. (SEE FIG.2)
4. BATTERY FOR WALKIE-TALKIE: INSERT FOR FRESH NEW AG-13/LR44 BUTTON CELL BATTERIES INTO THE BATTERY COMPARTMENT WITH CORRECT POLARITY.
5. REPLACE THE BATTERY DOOR AND THE SCREW ON POSITION.


READING THE WATCH DISPLAY TIME:

- NORMALLY DISPLAY SHOW NORMAL TIME.
- TO READ THE MONTH AND DATE, PRESS THE 'START/STOP'BUTTON AND HOLD IT. RELEASE IT GO BACK TO NORMAL TIME.
- TO READ THE ALARM TIME, PRESS THE'LAP/RESET'BUTTON AND HOLD IT. RELEASE IT GO BACK TO NORMAL TIME.

TIME , DATE AND ALARM SETTING:

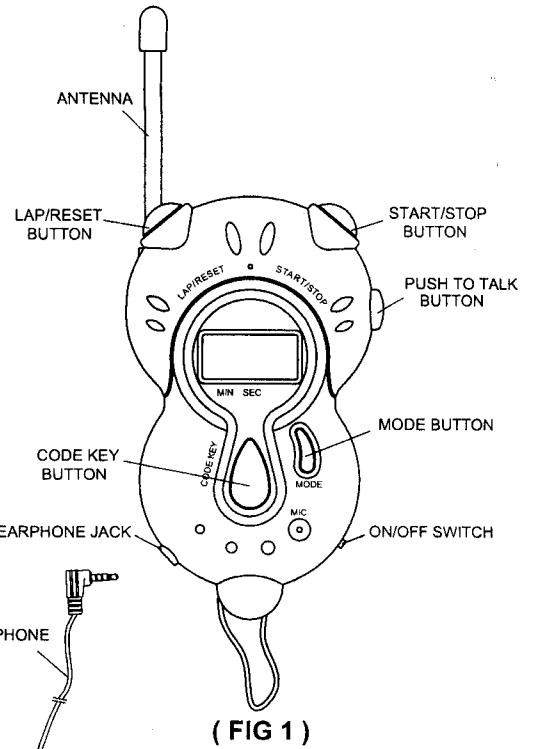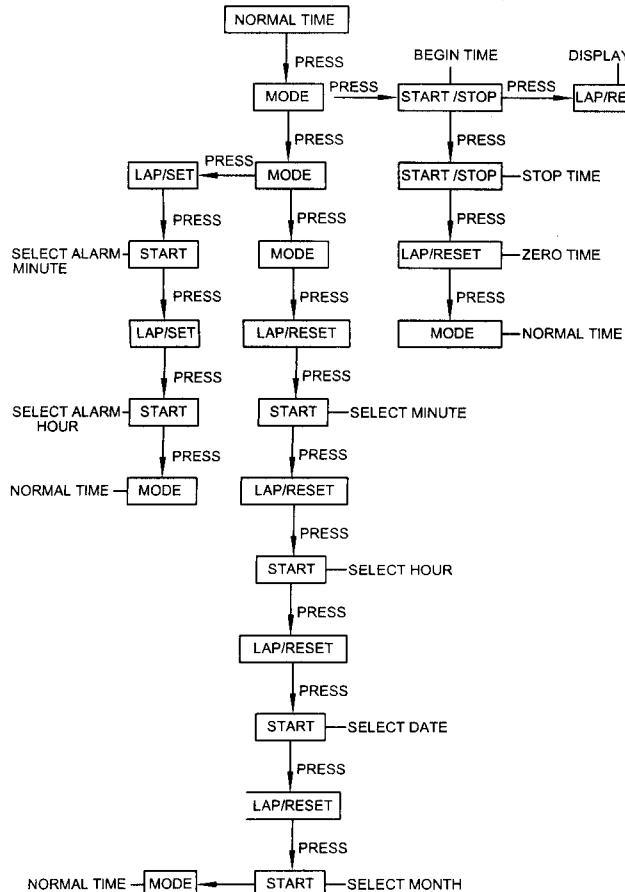

(FIG 1)

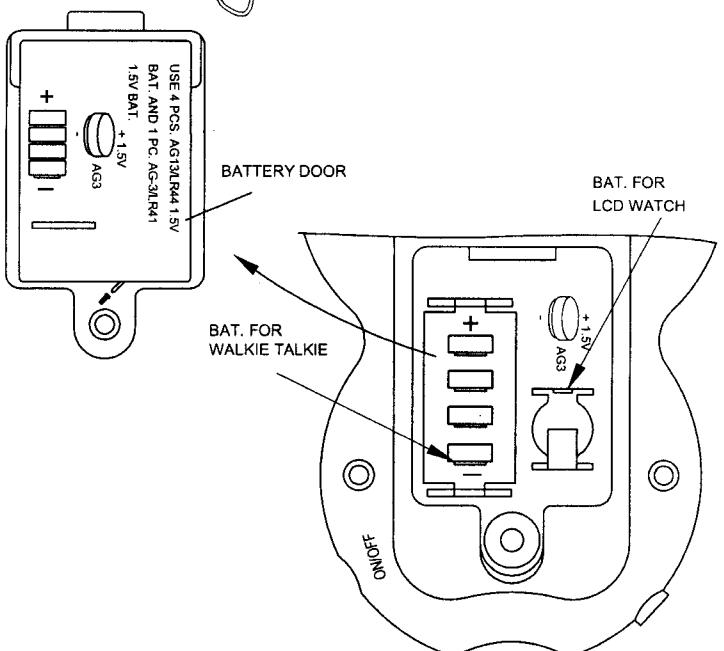

(FIG 2)

WALKIE TALKIE OPERATION:

1. TURN THE 'ON/OFF' SWITCH TO 'ON' POSITION.
2. PLUG THE EAR MIC SET INTO THE EARPHONE JACK. (SEE FIGURE1)
3. MOVE THE MIC ON THE EARSET CLOSE TO YOUR MOUTH, AND PRESS THE 'PUSH TO TALK' BUTTON TO TRANSMIT YOUR VOICE.
4. RELEASE THE 'PUSH TO TALK' BUTTON FOR RECEIVING VOICE FROM THE EARPHONE SET.
5. TURN 'ON/OFF' SWITCH TO 'OFF' POSITION AFTER USE.

"Modifications not authorized by the manufacturer may void users authority to operate this device"

Note:

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING:

1. SUGGEST TO CHANGE THE BATTERY BY ADULT.
2. SMALL PARTS NOT FOR CHILDREN UNDER 3 YEARS AGE.
3. DO NOT TOUCH OR MODIFY THE INTERNAL COMPONENTS OTHER THAN REPLACE THE BATTERY.
4. DO NOT MIX OLD AND NEW BATTERIES.
5. DO NOT MIX ALKALINE, STANDARD(CARBON ZINC), OR RECHARGEABLE (NICKLE-CADMIDIUM) BATTERIES.

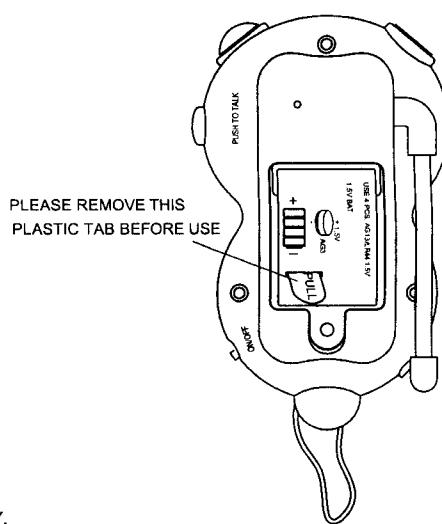

(FIG 3)