

Radiated Test Setup Placement: (EUT Only)



Front View of the Test Configuration of X-axis



Rear View of the Test Configuration of X-axis

Radiated Test Setup Placement: (EUT Only)



Front View of the Test Configuration of Y-axis



Rear View of the Test Configuration of Y-axis

Radiated Test Setup Placement: (EUT only)



Front View of the Test Configuration of Z-axis



Front View of the Test Configuration of Z-axis