

Troubleshooting

Description

The resources (such as I/O, IRQ, DMA ...) of the computer are very limited. This will not allow any more drivers or hardware to be installed, when the resources are not available. The only resolution is to remove one device and insert the new one instead.

Problems solving

1. The LED labeled "PWR" on WL-201/WL-301 card doesn't light, after the computer is switched on..

SOL: There are two possible reasons for this:

- (1) Ascertain that the card is inserted properly.
- (2) The notebook or computer must first be setup properly before inserting WL-201/WL301 card into the PCMCIA slot/ISA slot.

2. If the LED labeled "PWR" light is on, but no "intalk" brand bar running after the computer starts.

SOL: Enter "my computer \ control panel \ system \ device manager \", then double click "network adapters", and check if the driver named " intalk access point client " appears.

- (1) Yes, but "!" appear at left side: that means resources conflict. You should check and change state under "resources".
- (2) No, but find the driver appearing in " other devices". At this time, you should double click "add new hardware" and follow instructions to add a new hardware.(isn't searched by Windows95 itself) Then double click "network adapters" and click "next" ;the procedure to install the driver is the same as that to install the software .