

## INSTALLATION INSTRUCTIONS

Wireless Plug-in On/Off Control  
Model : PM-318-2



Congratulations on your purchase of the Skylink Wireless Plug-in Control model PM-318-2. The Plug-in Control let you control power to your appliances with a remote button. You will find the installation to be simple and be able to get the system up and running with little effort.

## ONE YEAR WARRANTY

This product is guaranteed to be free of defects in materials and workmanship for 1 year from the date of purchase. If this product is defective, call 1-800-304-1187 for repair or replacement parts. Guarantee does not include normal wear and tear or batteries.



If you have any questions, problems or missing parts, please call Skylink Customer Support: 9:00am – 5:00pm EST, Monday-Friday.

**1-800-304-1187**

Or e-mail us at [support@skylinkhome.com](mailto:support@skylinkhome.com)

[www.skylinkhome.com](http://www.skylinkhome.com)

PM-318 Series

## SAFETY INFORMATION

This device complies with Part 15 of the FCC Rules and Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Le présent appareil est conforme aux Partie 15 des règlements de la FCC et CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**CAUTION: RISK OF ELECTRICAL SHOCK. FOR INDOOR USE ONLY.**

## Package Contents



Parts	Description	Quantity
A	Wireless Plug-in Control	1

## Section 1 – Installation of Plug-in Control

**Note:** The Plug-in Control provides maximum rating of 1500W.


1. Plug in the appliance that you would like to remotely operate to the remote controlled outlet on the Plug-in Control. i.e. lamps, fans.
2. Plug your Plug-in Control into a wall outlet.

## Section 2- Setup the Remote



**Note:** If the LED does not flash when the button is pressed. Refer to the Section 6 for instructions on battery replacement.


1. Remove the battery isolator from the back of the remote. The red LED will turn on once.
2. Press the button on the remote. The red LED should flash. The remote is now ready to use.

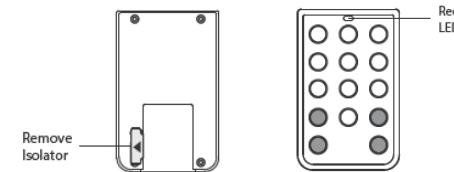


## Section 3- Programming the Remote and Plug-in Control

**Note:** Use a sharp non-conductive object, like a pen, to press the PROG button on the remote.

1. Press and hold the SET button on the Plug-in Control for 5 seconds, until the red LED flashes. Release the 'SET' button.
2. Press the PROG button on the back of the remote with a sharp object.

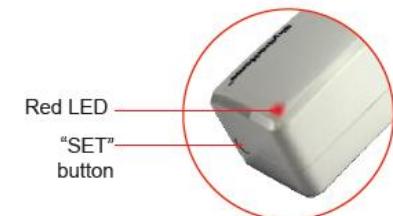

3. Press the button on the remote that you would like to program into the Plug-in Control.

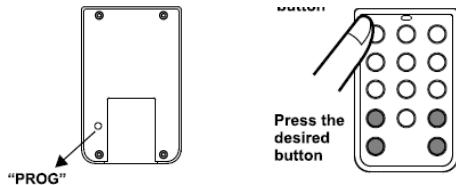

4. Once the remote is programmed, the corresponding outlet red LED flashes quickly and then off. You have successfully to program the remote.

## Section 4 – Operation

**Note:** Use remote or manually toggle on the Plug-in Control.

### A. Use Remote:

1. Press the programmed button on the remote to ON/OFF the controlled outlet.

### B – Use the SET button to toggle manually:

1. Press the SET button once on the Plug-in Control to toggle ON/OFF the controlled outlet.

## Section 5- Programming to the Receiver

1. Open SkylinkNet App and tap on "System Settings".
2. Tap on "Set-up Wizard".
3. Tap on "Add Device".
4. Tap on "2-way Appliances".
5. Name your 2-way appliance and location and tap on "Continue".
6. Refer to section 3 to set PM-318-2 in programming mode; then on the APP, tap on "Learn Now".

## Section 6- Erase remote from the Plug-in Control

**NOTE:** To erase any sensors or remote from the Power Hub, you need reset the Plug-in Control and learn the sensors/remotes you wish to keep.


1. Turn off the Main switch on the Power Hub.
2. Press and hold the SET button on the Power Hub and then turn on the Main switch.
3. Release the SET button when the LED indicators (3-4-5) are flashing on the Power Hub.
4. You have successfully erased all the remotes from the Power Hub.

## Section 7- Replacing the Battery in Remote

**NOTE:** The remote is powered by a CR2032 Lithium battery.

**NOTE:** When the operating range is reduced, or when the LED does not flash during operation, it is time to replace the battery.

1. Slide out the battery door.
2. Take out the old battery.
3. Place the new battery in position
4. Insert the battery door with battery.

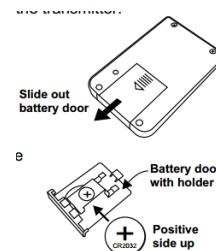

**NOTE:** Dispose of old battery promptly and properly.

## Section 8- FAQ

**Q:** The Plug-in Control does not respond to the remote.

**A:** You must program the remote to the Plug-in Control before they can work together.

**A:** The device(s) must be plugged in the remote controlled outlets.

**Q:** Can I erase just one remote from the Power Hub?

**A:** You must erase all the remotes in the Plug-in Control and then program the remote you want to keep.

## Section 9- Technical Specifications

Input Voltage: 120VAC, 60Hz

Maximum Rating: 12.5 Amps

Maximum Loading: 1500W

Receiver Operating Frequency: 317.5MHz

Transmitter Operating Frequency: 433.9MHz

## CUSTOMER SERVICE

17 Shread Avenue,  
Brampton, Ontario,  
Canada L6Y 1J3  
Email: support@skylinkhome.com  
<http://www.skylinkhome.com>  
©2015 SKYLINK GROUP

## US Office

Securelink Inc.,  
1180-D East Francis Street,  
Ontario, CA 91761, USA  
Tel: (909) 673-1778