

Operation

Deadbolt should extend and retract smoothly. If not, go back to step 2.

Bolt must be in retracted (unlocked) position before installing AA batteries.

Initial Programming


Press O.
Enter new Master PIN
code (4-8 digits).
Press O to complete.

⚠️ Lock will not operate until gear is pressed and Master PIN code is set.

1	2	3
4	5	6
7	8	9
✓	O	

After entering the Master PIN code, press any key to complete handing.

6 Installing Cover



Definitions

Master PIN Code Lockout Mode: This feature is enabled by the Master code. When enabled, all users (except the Master) are required to enter the Master PIN code to enter the unit. If the Master PIN code is entered incorrectly, the unit will enter Lockout. The lock rapidly beeps 5 times.

Master PIN Code: The Master PIN Code is used for programming and for feature settings. The Master PIN Code must be entered prior to programming the lock. The Master code will also operate the lock (unlock/lock) the setting.

Network Setting: This setting is available through the wireless button on the interior of the unit. Press the button and the unit will connect to the network controller.

Touch Lock: When the lock is retracted, activating the touchscreen will extend the (during Automatic Re-Lock duration or when Automatic Re-Lock is disabled).




Shutdown Time: The unit will shutdown (flashing touchscreen) for sixty (60) seconds after all operation after the wrong code entry limit has been met.


Chamber Alarm: Audible alarm sounds if attempting to forcibly remove outside lock from the unit.

User PIN Code: The User code operates the lock. Maximum number of user codes is 10.

Re-Entry Code Entry Limit: After five (5) unsuccessful attempts at entering a valid PIN Code, the unit will shut down and stop operation for sixty (60) seconds.

Feature Programming Through Menu Mode Using Master PIN code*

- Wake the lock by pressing the .
- Enter the 4-digit Master PIN code followed by the  key.
- Enter digit corresponding to the function to be performed followed by the .

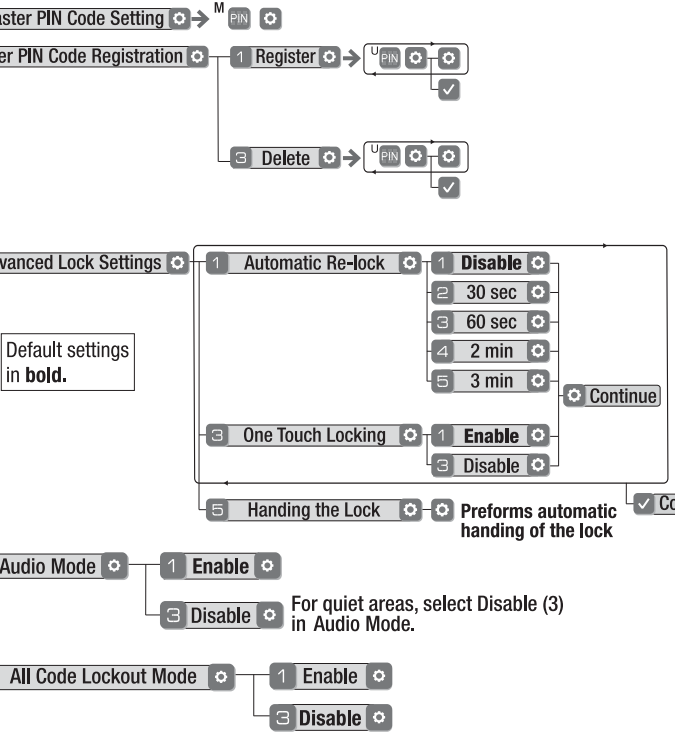

Master PIN Code Settings

- User PIN Code Registration
 - Register
 - Delete
 - Enable
 - Disable

Advanced Lock Settings

- Automatic Re-lock: Disable
 - 30 sec
 - 60 sec
 - 2 min
 - 3 min
 - Continue
- One Touch Locking: Enable
 - Disable
- Handling the Lock: Preforms automatic handling of the lock
 - Continue
- Audio Mode: Enable
 - Disable

For quiet areas, select Disable (3) in Audio Mode.
- All Code Lockout Mode: Enable
 - Disable

Default settings in bold.

Factory Settings

Settings	Factory Setting
Master PIN Code	Registration required*
Automatic Re-lock	Disabled
One Touch Locking	Enabled
Audio	Enabled
Automatic Re-lock Time	30 Seconds
Wrong Code Entry Limit	5 Times
Shutdown Time	60 Seconds

Programming Troubleshooting

Symptom	Suggested Action
Lock does not respond – door is open and accessible.	<ul style="list-style-type: none">• Press each touchscreen key for response when pressed.• Check batteries are installed and oriented correctly (polarity in the battery case).• Check batteries are in good condition: replace batteries * if discharged.• Check to see if cable is fully connected and not pinched.
Lock does not respond – door is locked and inaccessible.	<ul style="list-style-type: none">• Batteries may be completely discharged.• Check the touchscreen for damage to the buttons from the touchscreen back power supply option.
Unit chimes to indicate code acceptance, but no door opening.	<ul style="list-style-type: none">• Check to see if there is another locking device on the door.• Check the door gaps for any foreign objects between door and frame.• Check that the cables to firmly connected to the PC board.
Unit operates to allow access, but will not automatically re-lock.	<ul style="list-style-type: none">• Check to see if Auto Re-lock Mode is enabled.• If the Auto Re-lock indicator is lit (see below), change batteries *.
PIN codes will not register.	<ul style="list-style-type: none">• PIN codes must consist of 4 to 8 digits to register.• The same PIN Code must be used for multiple users.• Registration/management of PIN codes is set by the authority of the Master user.• Contact the Master user.• User codes must be entered within 20 seconds or the process will have to be repeated.• Check mark - or gear - cannot be used as part of the PIN code.
Upon entering a PIN code and pressing the < key, the lock gives a series of beeps, flashes red 7 times, and does not unlock.	<ul style="list-style-type: none">• All Code Lockout Mode is enabled.• Only the Master can enable/disable All Code Lockout Mode.• Contact the Master user.
Upon entering a PIN code and pressing the < key, there are different tones.	<ul style="list-style-type: none">• Check to see if the lock is set to All Code Lockout Mode.• Setting/managing All Code Lockout Mode is done through Master Unit only. Contact the Master user.
The green LEDs, but it makes no sound.	<ul style="list-style-type: none">• Enable Audio Mode.
The unit displays intermittent RED flashes.	<ul style="list-style-type: none">• This is the Low Battery indicator alerting that it is time to replace the batteries. Replace all four (4) batteries * with new AA Alkaline batteries.
Unit enters a PIN code and pressing the < key, the unit beeps with a series of beeps, and the touchscreen flashes three times.	<ul style="list-style-type: none">• The digits entered were incorrect or incomplete. Re-enter the correct code followed by the check mark *

* When batteries are replaced, Network locks have a new lock tick that will set through the User Interface (UI) is recommended to re-verify correct lock time and particularly those locks that will not operate through SmartGate System (SGS).

Warning: Cables or modifications to this device, not expressly approved by **ASSA ABLOY Residential Group** could void the user's authority to operate the equipment.

NOTE TO INSTALLER AND CONSUMER

While Yale® has included several features to prevent lockout (9-Volt battery jumper, low battery warnings), it is still possible for a lockout situation to occur. Because this product does not have a mechanical override (a key), Yale® recommends to use this product in an environment where there are additional entry points into the dwelling.

RF Exposure Statement:
FCC and IC RF Radiation Exposure Statement: This equipment complies with FCC and IC RF Radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.
This equipment should be installed and operated with a maximum distance of 20 cm between the radiator and your body

RF du FCC et IC d'exposition aux radiations: Cet équipement est conforme à l'exposition de FCC et IC et rayonnements RF limites é-tables pour un environnement non contrôlé. L'antenne pour ce transmetteur ne doit pas être mise en contact avec d'autres émetteurs sauf conformément à FCC et IC procédures de produits Multi-émetteur
Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps

Yale Locks & Hardware
Product Support Tel 1-855-213-5841 • www.yalehome.com

Yale® and Yale Real Living® are registered trademarks of ASSA ABLOY Residential Group. All other product brand names or registered trademarks of their respective owners are mentioned for reference purposes only. © Copyright 2018. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Residential Group is prohibited.