

USER'S MANUAL

KEYLESS ENTRY SYSTEM

Defiance MODEL : P-50

This device complies with Part 15 of the FCC rules. Any changes or modifications made to the system without the express approval of Stevens Car Care Products, inc. could void user's authority to operate this equipment.

FCC ID: N2RP-50RX

This device complies with FCC rules Part 15. Operation is subject to the following two conditions. (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

OPERATING INSTRUCTIONS

1. Functions of remote control transmitter

button #1 : Door lock (one flash) / unlock (two flashes)

button #2 : Channel 2 (by pressing for 2 seconds)

button # and #2 simultaneously : Channel 3 (by pressing for 2 seconds)

2. Valet mode

To put the system into the valet mode, press the button #1 for 3 seconds in the ignition

on. To confirm valet mode the system will flash light one time. To turn valet mode off

repeat the process, the system would be off in valet mode and to confirm the system

will flash lights two time. All operation of the system will be OFF in the valet mode.

3. 2 Stage door unlock

A. The driver's door only will unlock by pressing the button #1 in the armed mode.

If you again press the button 1 within 5 seconds, the all passenger's door will unlock.

B. 2 Stage door unlock ON/OFF.

Factory set 2 stage door unlock will be OFF.

Enter the valet mode and turn the ignition OFF. Thereafter press the

button #2 for 3

seconds within 20 seconds.

2 Stage door unlock will be OFF by flashing the lights 2 times.

The system will be returned original by repeating this process.

4. Automatic Locking

After locking the door by passive locking, the door can be unlock if you press the

button #1 by mistake.

In case of that, the system will be automatically locked after 30 seconds (When the

system is selected in passivearming).

5. Ignition controlled door lock/unlock.

Factory set will be OFF.

To be "ON" this feature, press the button #1 for 3 seconds within 20 seconds in the

ignition OFF after putting into the valet mode. The system will flash the light one time

to confirm "ON" and two times to confirm "OFF".

6. Remote coding

If the power is "ON" after completing the installation, the system will be disarmed

mode.

A. Remote Coding

Turn ON/OFF the ignition 6 times and then turn ON.

The system will flash the lights one time.

You are in remote coding mode.

Press the button #1 for remote coding within 10 seconds.

The system will flash the lights one time to confirm new code.

B. Code erasing

Turn ON/OFF the ignition 12 times.

The system will flash lights 2 times to confirm code erasing. The system will be in

the valet mode when the code erases.

After remote coding and code erasing, exit the valet mode.

7. When the system is in the ignition "ON" and "OFF", it will be operated only channel 3 and the

system is in the ignition "OFF" it will be operated channel 1 & channel 2.

8. Interior Light Control

The system may be interfaced to the vehicle's interior lights.

When the system is disarmed, the vehicle's interior lights will turn on for 20 seconds.

The interior lights will turn off after 20 seconds or when the ignition is turned on.