

Disney LEARNING



USER'S MANUAL

blu.boo®
Magic Box

SAFETY PRECAUTIONS


- ⚠ **WARNING!** Operation of this device must always be supervised by an adult. Do not allow children access to the interior of this device and do not permit them to handle any cables.
- Do not use this device in wet or dusty environments, under direct sunlight, or in extremely hot or cold conditions. Keep away from sources of heat.
- To prevent electric shock, keep this device away from water. Do not attempt to disassemble the device. Do not remove the battery.
- Do not place heavy objects on the device. Do not drop the device. Do not apply pressure or excessive force to it.
- For your own safety, do not attempt to open the device case or to make alterations. Do not paint the device or put stickers on it.
- Use only the accessories supplied with your device. Use only with the recommended transformer. Power adapters, transformers and other accessories are not toys!
- When using ports on the device, connect cables and sockets according to the usage information. Never force a connector into a port. If you need to force a connector into a port, that generally means they do not match.
- Connect the device to a power outlet using a mini USB cable and a USB power adapter (not supplied) to charge it. Alternatively, connect the device directly to a USB port on your computer (not an external keyboard) using a mini USB cable.
- The battery may warm up while charging. This is normal. Do not cover the device while charging and allow good ventilation to the charger.
- Before cleaning the device, turn it off and disconnect from the battery charger. Clean the outside of your device with a soft cloth.
- Actual device may differ from the picture(s) in the User's Manual. The properties offered may differ depending on the software version and the contents. Device properties may be subject to constant changes.

BATTERY INSTALLATION

1. Make sure the device is turned off.
2. Locate the battery cover on the back of the device and open it using a phillips screwdriver.
3. Install the lithium battery properly.
4. Replace the cover using a phillips screwdriver.

BATTERY REMOVAL

1. Make sure the device is turned off.
2. Locate the battery cover on the back of the device and open it using a phillips screwdriver.
3. Remove the battery.
4. Replace the cover using a phillips screwdriver.

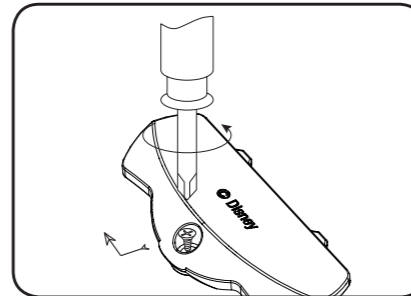


GETTING STARTED

- **To Turn On:** Locate the Power button on the back of your BluBoo Magic Box, and hold it down until you hear the sound of starting up.
- **To Turn Off:** Locate the Power button on the back of your BluBoo Magic Box, and hold it until you hear the sound of shutdown.

BluBoo Magic Box has touch buttons that become active and visible to the eye when touched upon. These buttons are used to carry out the following commands:

 - Ⓢ **Play/Pause Button:** While the device is playing music, touch this button to pause the current playing, touch this button again to play back the paused music. Once Bluetooth connected, then the button as call answer button, and as hang up button once answer finished.
- Ⓢ **Back Touch Button:** Under the Play Audio Mode, select the previous music by touching this button.
- Ⓢ **Forward Touch Button:** Under the Play Audio Mode, select the next music by touching this button.
- Ⓢ **Volume Button:** The volume has total 7 levels. The volume can be adjusted when playing MP3.
- Ⓢ **Reject/Reversal:** When Bluetooth connected, short press to reject an incoming call, and long press for the reversal of the phone last dialed contact.
- Ⓢ **Mode Button:** This button is mode switching button, can switch audio input for playback by TF card, U Disk, Line IN and Bluetooth.

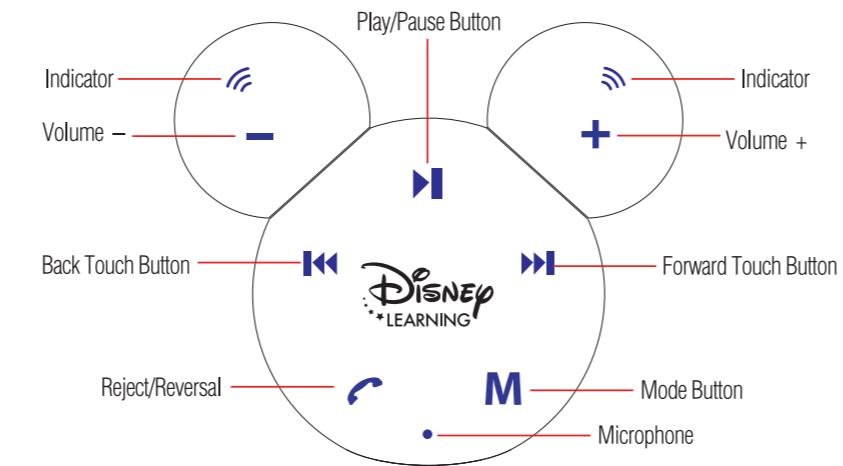

Ⓢ **Indicator:** Turn on paly MP3 with slow flash, flash sonly with Bluetooth playback, long bright in charging.

● **Microphone:** It detects sounds when your device is in Bluetooth Handsfree mode. Do not cover the surface.

TF Slot: "BluBoo Magic Box" maximum support 32.

Ⓢ **Standard USB Slot:** "BluBoo Magic Box" maximum support 32.

Ⓢ **Mini USB Charging Hole:** Simply put the USB cable into the charging hole and plug the other end into a power outlet to start charging.

 
You will not be able to access the internal memory when a MicroSD memory card is connected to the device. To access the contents of the internal memory, first remove the MicroSD memory card.

BLUETOOTH MATCHING

Bluetooth is a standard, wireless and short-distance data exchange technology, with which you can connect your blu. boo Magic Box to your personal computer, tablet computer and MP3 Player and Communicator of your smart cellphone with the opening bluetooth.

Connection Method:

1. According to the operation method of the Bluetooth of your cellphone or tablet PC, you may complete bluetooth connection by the following method (Setup – Bluetooth Menu – Bluetooth Search)
2. Your cellphone or tablet PC will show that the blu.boo Magic Box device is found, and will be asked if you want to connect it with the cellphone. Please select YES OR CONFIRM

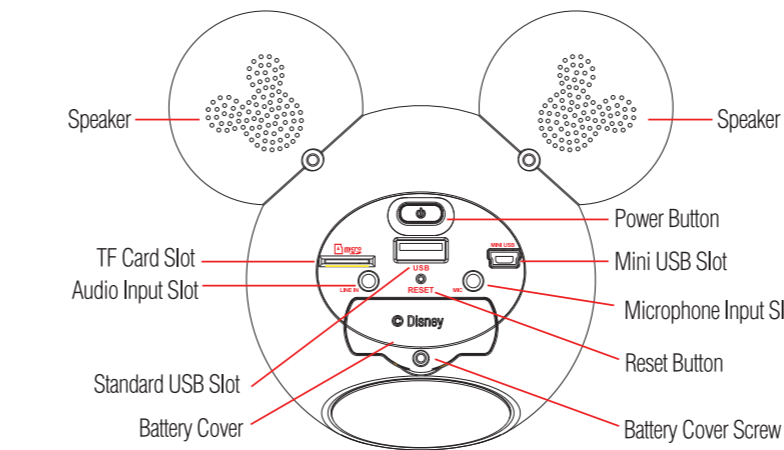

Ⓢ **Audio Input Hole:** Audio signals from computers, cellphones, etc. can be inputted and played by a built-in speaker. And any supporting audio equipment can be connected.

Ⓢ **The Input Opening of Microphone:** When the bluetooth is connected to the cellphone, voice call can be done through external microphones.

Ⓢ **Reset Hole:** When the device has breakdown like being unable to be shut down, crashes, or giving no response when pressing the buttons, etc., please insert a safety needle into the "reset hole" before boot the device again.

Power-Saving Mode: If not being used within 10 minutes, blu.boo Magic Box will turn off automatically.

FCC NOTICE

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter within a host device, except in accordance with FCC multi-transmitter product procedures.

IMPORTANT BATTERY NOTICE

- Install batteries correctly observing the polarity (+,-) signs.
- Rechargeable batteries are only to be charged by adults.
- Always remove exhausted batteries from the device.
- The supply terminals are not to be short-circuited.
- Regularly examine the transformer or the battery charger for any damage to their cord, plug, enclosure and other parts. In case of damage to any part of the device, do not use until the damage has been repaired.

INCLUDED IN THIS PACKAGE

- One BluBoo Magic Box • One mini USB connector cable • One BluBoo Magic Box battery
- One USB charger • One User's Manual

TECHNICAL INFORMATION

Battery Voltage: 3.7V

Capacity: 850 mAh

Charge Voltage: 5V

Product Size: 130x84x104 mm

PLEASE HANDLE IT WITH CARE JUST LIKE ANY OTHER ELECTRONIC DEVICE. TEACH CHILDREN HOW TO USE THIS DEVICE. OPERATION OF THIS DEVICE, OR SIMILAR DEVICES, MUST ALWAYS BE SUPERVISED BY AN ADULT. DO NOT ALLOW CHILDREN ACCESS TO THE INTERIOR OF ANY ELECTRICAL PRODUCT AND DO NOT PERMIT THEM TO HANDLE ANY CABLES. KEEP THE PACKAGING SINCE IT CONTAINS IMPORTANT INFORMATION.



WARNING

Not suitable for children under 6 years old.

Manufacturer and Distributor
A.E. YAYINCILIK, FILM LTD.
Menekseli Sk. 22 Levent, Istanbul, Turkey
info@aeifilm.com
© 2013 Disney
Item No: DE 9989
Made in China

