

 
ITEM NO.	
DESCRIPTION	Interactive Hand Puppet Instruction Sheet
DATE.	4 Jun 2012
REVISION	01
APPROVED BY	



bobbie & friends®

Interactive Hand Puppet Set™ Instructions:

Product Content:

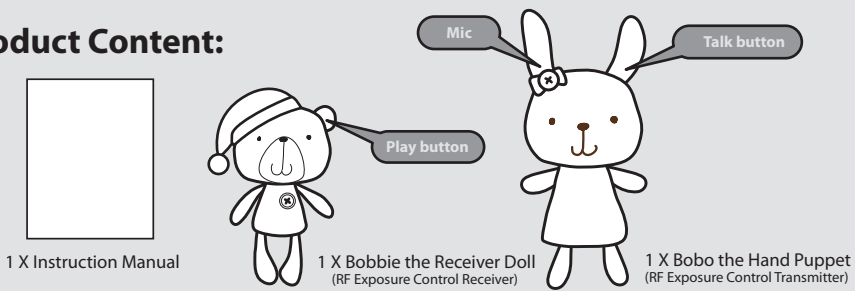

WARNING:

- Never use the Bobbie & Friends® Interactive Hand Puppet Set™ while driving or during any sporting activities as it may lead to accidents causing injuries.
- Turn the Bobbie & Friends® Interactive Hand Puppet Set™ off in an aircraft or any facility where posted notices restrict the use of radios or cellular telephones. Hospitals or health care facilities may be using equipment that is sensitive to RF energy.
- Never Use the Bobbie & Friends® Interactive Hand Puppet Set™ where personal medical devices such as pacemakers or hearing aids are in use. Turn the Interactive Hand Puppet Set™ off immediately if there is any reason to suspect that interference is taking place.
- Never use the Bobbie & Friends® Interactive Hand Puppet Set™ in front of a vehicle's air-bag. If the air-bag deploys, it could propel the walkie-talkie and cause injuries.
- Never use the Bobbie & Friends® Interactive Hand Puppet Set™ or change the batteries in potentially explosive atmosphere as sparks in such areas could result in explosion.
- Never use the Bobbie & Friends® Interactive Hand Puppet Set™ in or near a mining facility, which uses remotely triggered explosives, or in areas labeled "Blasting Area". Premature or accidental detonation may result.
- Never attempt to modify or in any way increase the output power of the Bobbie & Friends® Interactive Hand Puppet Set™ as it may cause a violation of the technical regulation of Part 15 of FCC Rules.
- Avoid exposing the Bobbie & Friends® Interactive Hand Puppet Set™ to water or extreme temperatures.

 
Your Bobbie & Friends® Interactive Hand Puppet Set™ will achieve the maximum operating range when communicating in flat open areas with no walls, trees or buildings to obstruct the signal. Under the ideal conditions, you may achieve range up to a 10-meter radius.

The following conditions tend to reduce the range.

- There are large obstructions such as walls, buildings, trees, vehicles, hills etc. between radios.
- The batteries are running low.

Battery Installation:

- 1.Open the Magic Tape at the back of Bobbie's /Bobo's Head and locate the battery compartment. (See Fig. 1)

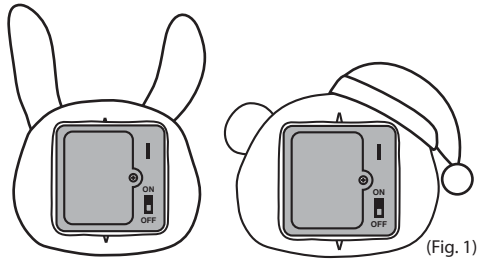


Protect the environment by not disposing of this product with household waste(2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).




bobbie & friends®

 2. Use a Phillips Screwdriver (not included) to unscrew and remove the battery compartment door. (See Fig. 2)

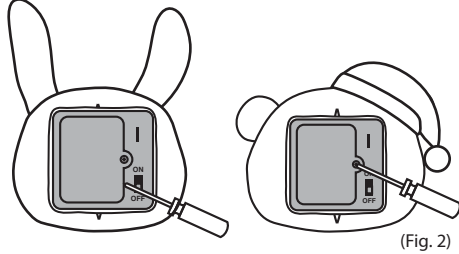

 3. Install 3 X AAA (1.5V) alkaline batteries in the battery compartment of Bobbie/ Bobo. Be careful to align the positive (+) and negative (-) polarities with the corresponding markings inside the battery compartment. (See Fig. 3)

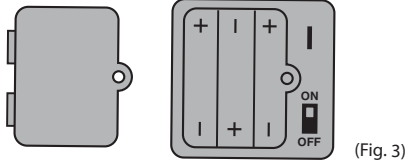

4. Reinstall the battery door and tighten the screw.

5. Place the battery compartment back into Bobbie's/ Bobo's head and seal the magic tape.

Important Battery Information:

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove batteries during long periods of non-use. Always remove exhausted batteries safely. Do not dispose of product in a fire. The battery inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Remove rechargeable batteries from the product before charging.
- If removeable, rechargeable batteries are used, they are only to be charged under adult supervision.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 
THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES AND RSS-210 OF INDUSTRY CANADA. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION. THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.



bobbie & friends®


Getting Started – Initial Setup

1. Turn the Power Switch located on the battery compartment of Bobo & Bobbie to "OFF" position (See Fig. 5)

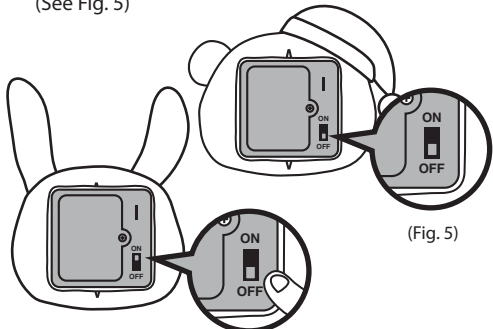

2. Install new batteries in both Bobo the Hand Puppet and Bobbie the Receiver Doll according to the Battery Installation Instruction.

 3. **PAIRING SETUP** – To pair up both devices' connection, turn the Power Switch located on the battery compartment of both devices to "ON" position. Pairing setup of the devices has to be initiated together and within 15 seconds. (See Fig. 6)

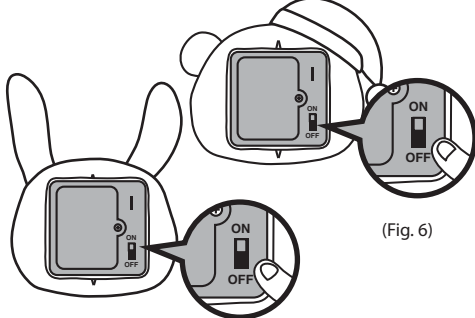

4. Pairing setup is done when you hear a "BLEEP" sound. Repeat the above steps if the devices fail to pair up.

PLEASE NOTE:

All messages stored will be deleted when the batteries are removed from the unit. To avoid damage to any system data, please do not remove the batteries while the unit is switched on.

 
 
AUTOMATIC SHUT-OFF

To preserve battery life, the Interactive Hand Puppet Set™ will automatically turn off after 15 minutes without input.

To record new message/ story, press the button located at Bobo's and Bobbie's (Transmitter & Receiver) left ear together until you hear a "BLEEP" sound.

ACTIVITIES

1. You can start sending messages when your devices are successfully paired up.
2. Press the Talk button located at the bottom of Bobo's left ear. (See Fig. 7) Start talking followed by the "BLEEP" sound.
3. Press the Talk button located at the bottom of Bobo's left ear again when you have finished recording your message/ story.
4. Your message/ story will be automatically saved in Bobbie the Receiver Doll.
5. To listen to the message thru Bobbie, press the Play button located at Bobbie's left ear. (See Fig. 9) Press the Play button to repeat playing message recorded.
6. You can record your message/ story with a maximum length of 2 minutes.

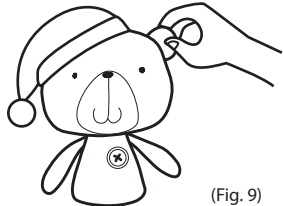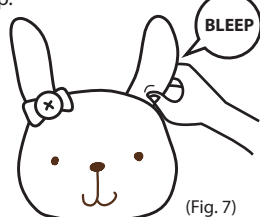

bobbie & friends®

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth. Never use solvent or abrasives.
2. Keep the unit out of direct sunlight and away from direct sources of the heat.
3. Remove the batteries when not using it for an extended period of time.
4. Avoid dropping the unit. NEVER try to dismantle it.
5. Always keep the unit away from water.

TROUBLESHOOTING

Review this section if you experienced difficulty operating the Bobbie & Friends® Interactive Hand Puppet Set™

Problem	Possible Cause	Correction
Your Bobbie & Friends® Interactive Hand Puppet Set™ stop working or do not pair up	Incorrect battery polarities	Ensure that the batteries are installed correctly
	Weak batteries	Replace with new batteries; to ensure optimal performance, we always recommend batteries to be replaced for both devices
	The operating tempature is out of working range	Do not use the unit in extreme temperatures
You cannot send or receive messages	Your devices are not paired up	PairUp the devices according to the initial setup procedures (for first time use) or hold and press the button located on the right ear of Bobo & Bobbie till you hear a "BLEEP" sound
	The receiving signal is weak due to a large obstructing object	Avoid operating the Interactive Hand Puppet Set™ too far apart if there are large objects that will interfere with the signal
	Interference from electronic devices such as a computer or TV	Turn the devices that maybe interfering off or move further away from the devices
	Weak batteries	Replace with new batteries; to ensure optimal performance, we always recommend batteries to be replaced for both devices
Some words of a transmission are cut-off	Incorrect use of the talk button	Press the Talk Button, wait one second following the "BLEEP" sound to begin speaking. After you have finished speaking, wait one second before pressing the Talk Button again
	Your Message/ Story is too long	The duration of your message/ story should be less than 2 minutes
Voice distortion	Speaking too close or too loud	Hold the unit 2-3 inches from your mouth. Speak in a normal voice. Do not whisper or yell into the microphone
Echo or feedback noise	The units are operating too close together	Keep the units at least 2 feet apart

If you have a problem that cannot be solved by using this manual, we encourage you to visit us online or contact our Customer Services Department with any problems and/ or suggestions that you might have. We will be happy to assist you.

Before requesting support, please be ready to provide or include the information below:

- The name of your product or model number.
- The specific problem you are experiencing.
- The actions you took right before the problem occurred

Bobbie & Friends® is a trademark of Fun Horizon Limited
© 2010 Fun Horizon Limited. All Rights Reserved.
Manufactured by Fun Horizon Limited.
Customer Care: 1-877-387-0853

E-mail: support@fun-horizon.com
Website: www.bobbieandfriends.com
Fun Horizon Limited,
Rm 511-4, 5/F, Hungghom Commercial Centre,
Tower A, 39 Ma Tau Wai Road, Hungghom, Kowloon, HK.

Fun Horizon Inc
4195 Chino Hills Pkwy #515
Chino Hills, CA 91709

Hereby, Fun Horizon Limited, declares that this Bobbie & Friends® Interactive Hand Puppet Set™ is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The declaration of conformity may be consulted at <http://www.bobbieandfriends.com/doc.pdf>



Item #.11008

Made in China