

Installation Manual

- 1) Drill 7/16" to 1/2" hole
- 2) Mount the receiver.
- 3) Scew the antenna....
- 4) Connect the cable....
- 5) Ready to be used

RECEIVER INSTRUCTIONS

- THE-REMOTE is designed to plug directly into THE-TIMER but can operate any 6Vor 12V motor.
- Drill 13/32 hole into bottom of the control box. Mount receiver with antenna pointing down. Use the jam nut under antenna to hold the receiver in place.
- For THE-TIMER, simply plug marked connectors into the motor and THE-TIMER
- For other brands of timers, splice only to the motor connector making sure the polarity is correct.
- Connect black/red wires to 6V or 12V power source.
- For a complete set of instructions and tips see www.THE-REMOTE.com

TRANSMITTER INSTRUCTIONS

- hold transmitter with antenna pointing up and depress orange button to activate remote.
- for a complete set of instructions and tips see www.THE-REMOTE.com

Mandatory Sentence in Instruction Manual

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

To comply with the FCC RF exposure compliance requirements, this device and its antenna must not be co-located or operating to conjunction with any other antenna or transmitter.