



RACER II RADIO CONTROL MINI CAR

INSTRUCTION MENU

Thanks for choosing our product-1/32 racing mini car. Before you use this car please read the I/M carefully, so that you can correctly and safely use the car. You have to keep the I/M properly, for the future use.

CAUTION


If you use the batteries improperly, you will see the batteries to become red, broken, and leaking. Please pay attention to the following:

- Don't mix the new and old batteries
- Don't mix the batteries of different brands
- Install the batteries correctly and don't mix the positive and negative pole
- Waste batteries must be taken away from the unit.
- Don't short circuit the battery pack poles;
- Don't charge unchangeable batteries

SPECIFICATION AND FUNCTIONS


- Scale: 1/32;
- All way action;
- forward, backward, turn left, turn right, stop
- To use the frequency bands: 27MHz, 35MHz, 40MHz, 49MHz;
- Power: body and the remote control use
- 2 batteries of 5;
- Speed: 6.5km/h
- Remote control range: not less than 12m

NAMES OF THE PARTS

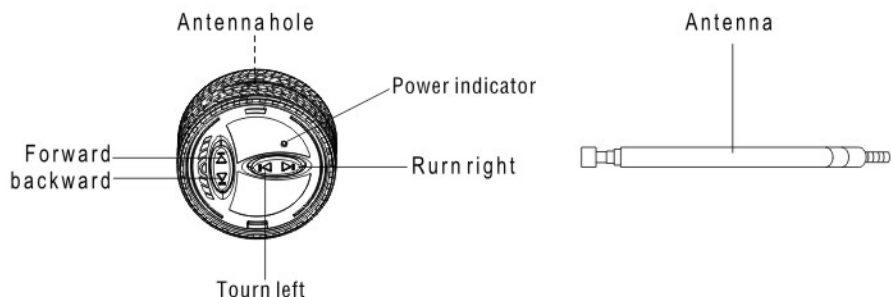

Fore wheel: to apply separate anti-quake device

Back wheel: twist the waist anti-quake device, to better the turning stability and lower the quake from the surface of the road.

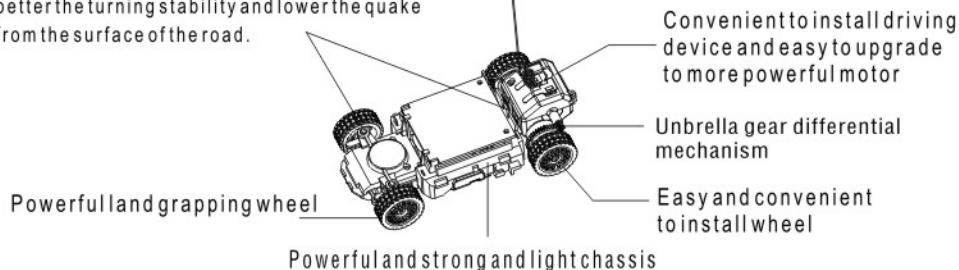

USE OF THE ANTENNA


Take the antenna from the bottom of the board and push it into the hole of the remote control. Screw the antenna clockwise



INSTALLATION AND DISMANTLE OF THE BATTERIES

1. R/C batteries installation

a) Open the door and take out the bell following the arrow direction and open the remote control door.

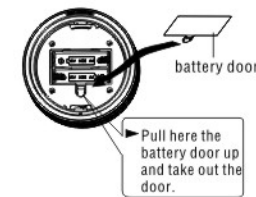

b) Following the positive and negative install the 2# batteries.





c) Push and close the door of the batteries compartment. And put the bell on the door of the batteries compartment and right wise to close the door.




2. BATTERIES INSTALLATION

A) Push out the battery buckle, and insert 2 pcs aa batteries according to "+" & "-" ;

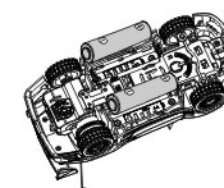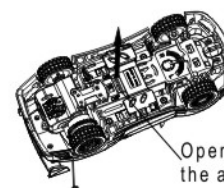

Open the battery lock in the arrow direction


B) Install the battery buckle;

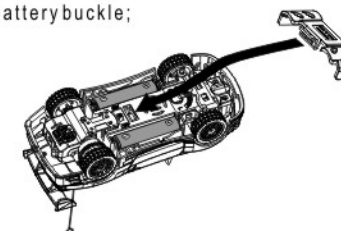


2. CAR SHELL REPLACEMENT

Car shell is changeable for conveniently upgrading


- b) Holding the front wheels, push the chassis up in about 30°, and push it out.

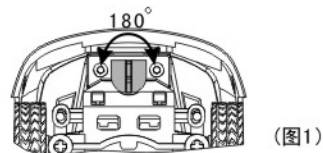


- b) Holding the front wheels, push the chassis up in about 30°, and push it out.

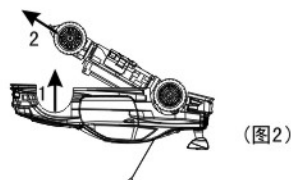

- c) let the antenna go through the hole on rear window, then insert the plastic square pole on the sides of chassis into the square channel on the sides of car shell, and fasten the front chassis on car shell.

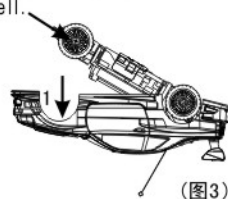


- d) Turn the knob in 180° again for fastening the chassis.


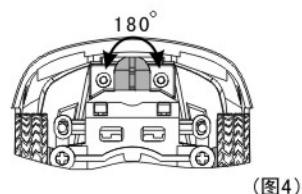


三. OPERATION


1. Push the switch on chassis to "on" and lay the car on floor;

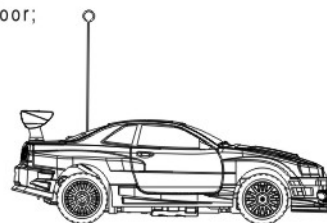

2. The red light on when car is working; press up or down button, the car works forward or backward; keep pressing the up or down button, and press the left or right button, the car turns left or right;

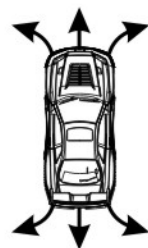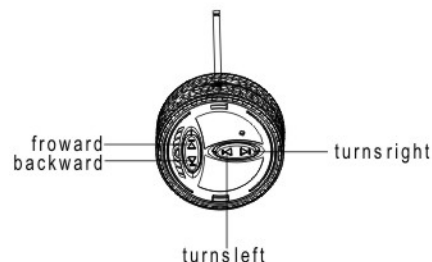

3. Adjust the car working direction by moving the inching knob on chassis.

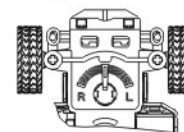


4. Push the switch on chassis to "off" after use.



5. Take out the batteries in the remote control & car reserve alone.

四. SUGGESTION

1. Be careful of the furniture and glass when playing the car at home;
2. It is dangerous to play the car on street or public, pls find safe place outdoor.
3. Don't play in thunder weather;
4. Don't play on seep or sand, in case the electronic circuit is broken down;
5. Don't fold the antenna, in case it is broken; the sharp broken antenna is dangerous;
6. Don't drag the electrical wire on car, in case the wire is broken;
7. Keep hand, hair or clothes away from the revolving wheels;
9. Don't leave the toy car about, and run it about;
10. Keep the toy car far from fire or high-temperated place.
11. Don't disassemble the car at random;
12. When the batteries power is low, the car speed is obviously low down, or out of control; pls replace new batteries.
13. when the working is in malfunction, pls check if the metal sheet in battery compartment is distortion or mis-contacted; you can adjust the metal sheet as per pics. belows;
14. The twister board will be distorted under long pressing, you can turn it back to the normal shape by hand.
15. Don't swing the packing when holding, in case the controller is thrown out;
16. To make the batteries more durable as belows:
 - * take the batteries out when not playing;
 - * don't use new and used batteries in the same time;

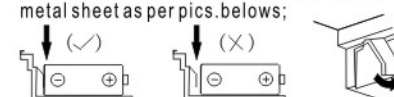

五. OTHERS

1. The car will be out of control when other car with same frequency is playing around;
2. The car will be out of control when other electric wave is disturbing; pls change other place and try again;
3. Don't play the car on slippery floor, as the smaller friction between wheel and floor will cause un-straightly working, spin turning and so on;

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.



CHOCKING WARNING:

**Toys including small accessory,
not suitable for children under 3 years**



XIAN WEI DA ELECTRONICS CO., LTD
Yuelai Industrial Zone, No. 18 Nanan Road Zhongshan
TEL: 0760: 6116189 POST: 528400