

MANUAL

NUMERIC DISPLAY PAGER

MODEL NO. : BF - 150P

BF TECH.

CONTENTS

1. EXTERNAL VIEW

2. DESCRIPTION OF ICON INDICATORS

3. HOW TO OPERATE & FEATURES

3-1. ACTIVATION SELECTION

3-2. SET TIME

3-3. SET ALARM

3-4. MELODY SET

3-5. POWER OFF

3-6. MESSAGE READING

3-7. CONTINUOUS MESSAGE INDICATION

3-8. DUPLICATE MESSAGE

3-9. RECEIVED MESSAGE FULL INDICATION

3-10. UNREAD MESSAGE ALARMING

3-11. MESSAGE LOCK

3-12. ERASE MESSAGE

3-13. POWER AUTO ON/OFF

 
3-14. STOPWATCH

3-15. LOW BATTERY INDICATION

3-16. OUT OF RANGE

4. HOW TO CHANGE THE BATTERY

1. EXTERNAL VIEW

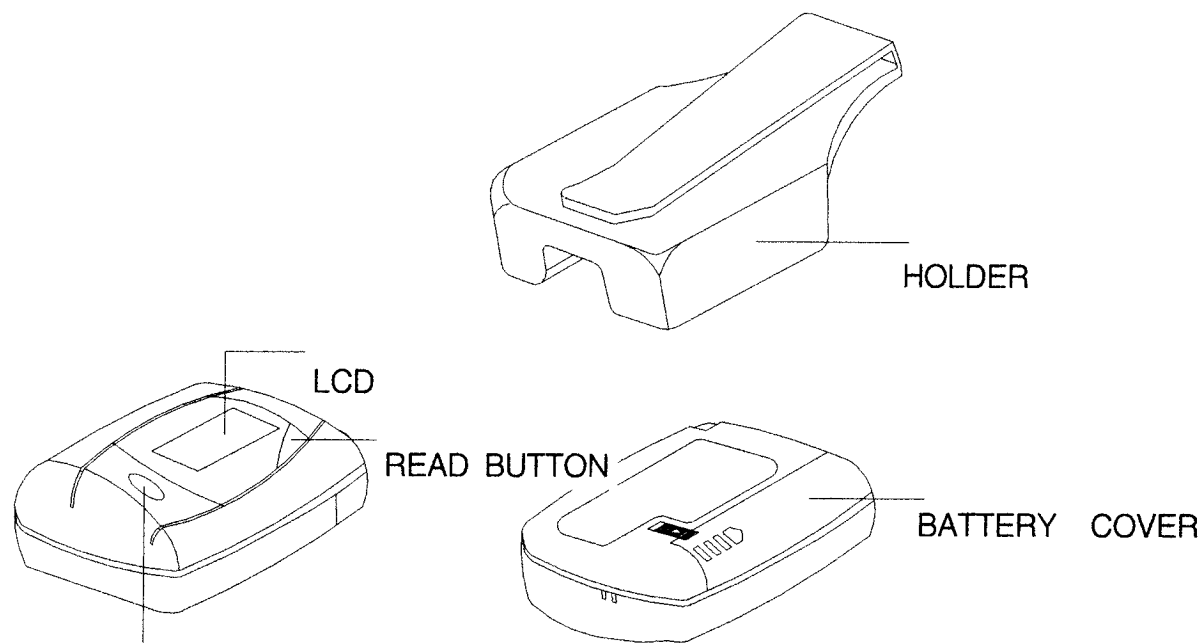



2. DESCRIPTION OF ICON INDICATORS

- 1)  : Buzzer Alert
- 2)  : Melody Alert
- 3)  : Vibration Alert
- 4)  : Time Setting
- 5)  : Alarm
- 6)  : Message Lock
- 7)  : Stopwatch
- 8)  : Auto On/Off
- 9)  : Low Battery
- 10)  : Duplicate Message
- 11)  : In Service Area
- 12)  : Continuous Message

3. HOW TO OPERATE & FEATURES

3-1. ACTIVATION SELECTION

  
- ▷ The lamp will be on when pressing the Function Button.
- ▷ "TONE OFF?" displays when pressing the Function Button one more time.

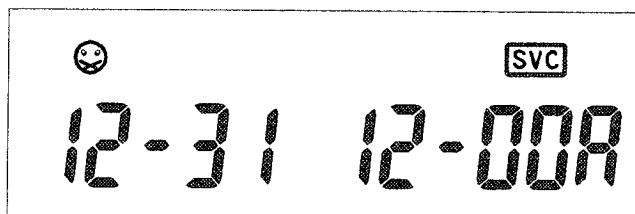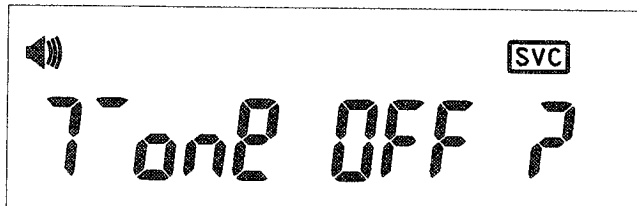


- ▷ Press the Function Button at this time to select the vibration mode, and the symbol of vibration displays.

- ▷ Press the Function Button until "TONE ON?" displays to change the Activation Mode from vibration to buzzer(melody), and then press the Function Button to set the buzzer(melody) mode.
- ▷ Refer to the "3-4. MELODY SET".

 (In the buzzer mode)

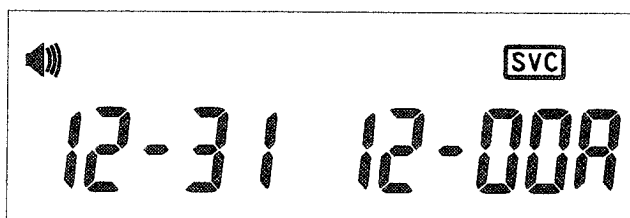


(In the melody mode)

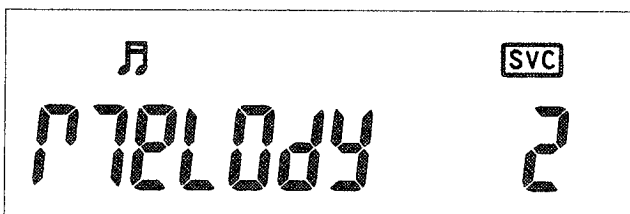 


3-2. SET TIME

 - ▷ Press the Function Button two times to be displayed "TONE ON?" or "TONE OFF?", and then press the Read Button to be displayed "SET TIME" in the Function Selection Mode.

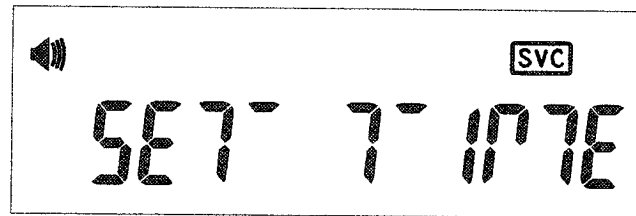

※ NOTE : Please adjust the date in February of leap year because this pager will go to February 29 regardless of leap year.

 
- ▷ Press the Function Button to set Current Time and the digit of Month flashes.

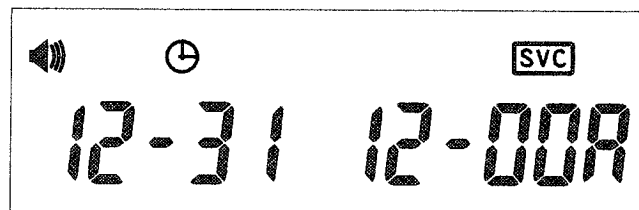



- ▷ Press the Function Button to select Month, Day, Time and AM/PM.
- ▷ Press the Read Button to change them and press the Function Button to fix it.

3-3. SET ALARM

 - ▷ Press the Read Button two times to be displayed "SET ALARM" in the Function Selection Mode.

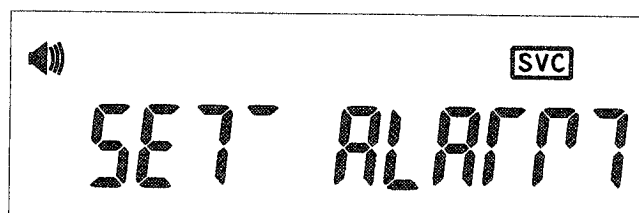


  - ▷ Press the Function Button, and the digit of Time flashes.
- ▷ Press the Read Button to change the time as you want and press the Function Button to fix it.
- ▷ Alarm alerts for 30 seconds at the setting time.
- ▷ Press the Read Button to stop alarming tone.

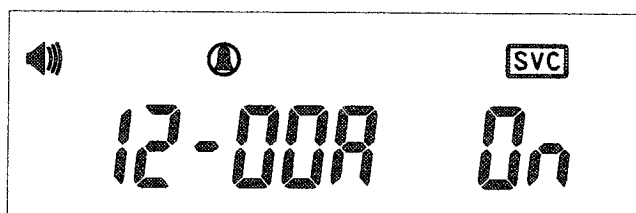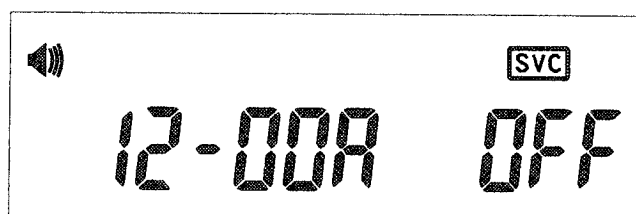


3-4. MELODY SET

 - ▷ Press the Read Button three times to be displayed "MELODY SET" in the Function Selection Mode.

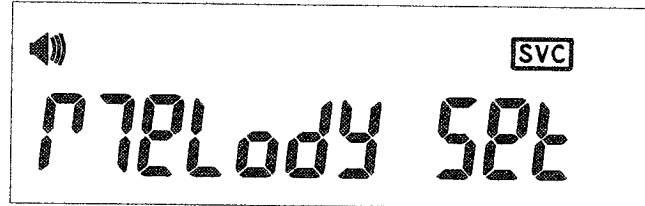

 
- ▷ Press the Function Button, and selected melody will be played with melody No.

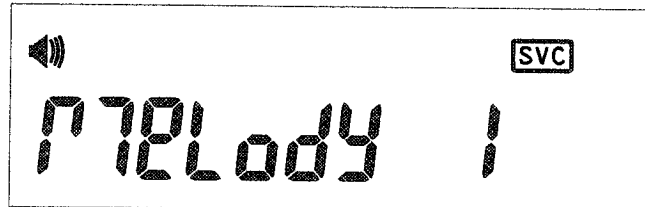

- ▷ Press the Read Button repeatedly to select the appropriate sound and press the Function Button to fix it.

3-5. POWER OFF


 
- ▷ Press the Read Button four times to be displayed "POWER OFF?" in the Function Selection Mode.

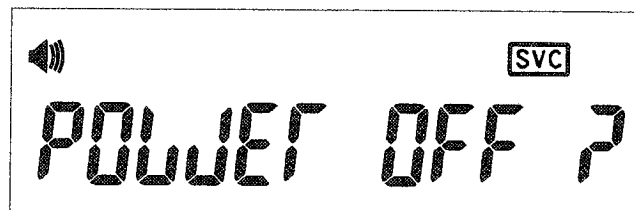

- ▷ Press the Function Button to make power off.
- ▷ Press the Function Button for 2 seconds to turn to standby.



3-6. MESSAGE READING

  - ▷ This pager has 16 message slots and each message slot stores up to 20 digits.
- ▷ In case receiving a message, the pager vibrates for 6 seconds or alerts for 15 seconds. And press any button to stop it.
- ▷ Press the Read Button to read the received message, and the receiving time will be displayed with message sequence number.
- ▷ And in case pressing the Read Button one more time, the received message will be displayed.
- ▷ In case no message has been received, "NO PAGE" will be displayed when pressing the Read Button in standby.

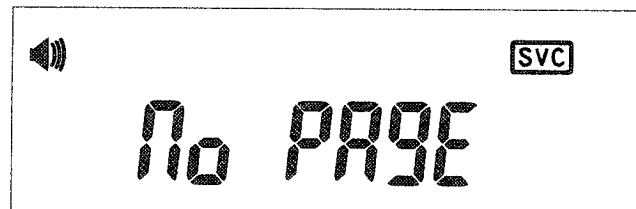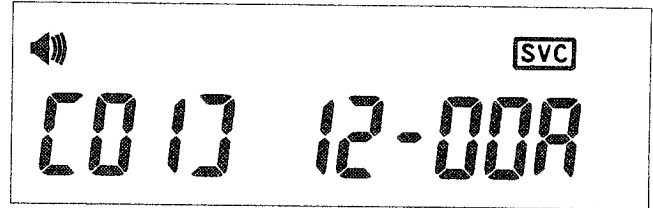


3-7. CONTINUOUS MESSAGE INDICATION

  - ▷ In case a received message is more than 13 digits, "▶" symbol displays on the screen.

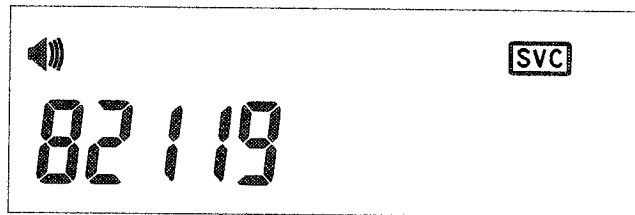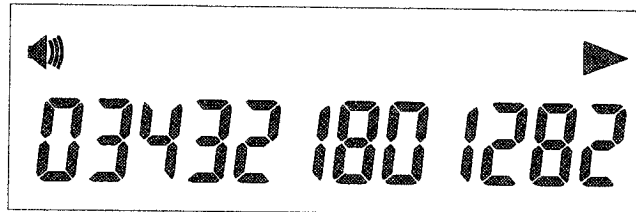


3-8. DUPLICATE MESSAGE

 - ▷ When the pager receives the same message, the repeated message is memorized and memorized message is automatically deleted. And the duplicate message symbol displays on the screen.

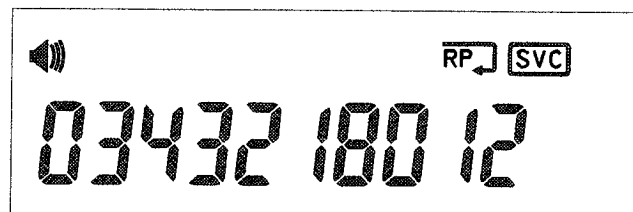

3-9. RECEIVED MESSAGE FULL INDICATION

 - ▷ "PAGE FULL" displays on the screen when the pager stores max 16 messages.

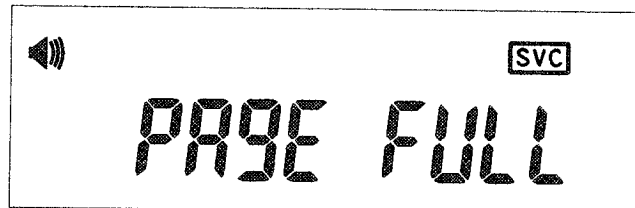


- ▷ When the pager receives more than 16 messages, newly received message is memorized and first message is automatically deleted. However, the locked message can not be deleted.

3-10. UNREAD MESSAGE ALARMING

- ▷ In case a received message is not read, alarming tone alerts every 30 seconds.

3-11. MESSAGE LOCK

 - ▷ Press the Function Button to lock the message when a message displays on the screen, and the message lock symbol will be displayed with signal tone.

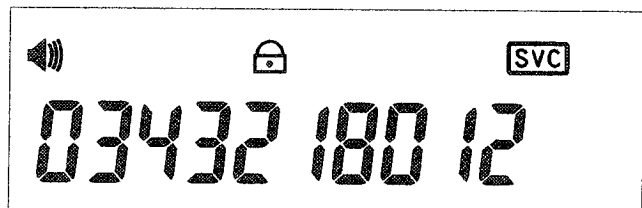


- ▷ Press the Function Button to unlock the message when the message lock symbol displays on the screen.

3-12. ERASE MESSAGE

1) ERASE ALL

 
- ▷ Press the Function Button and then lamp is on.
- ▷ Press the Function Button one more time for 3 seconds to be displayed "ERASE ALL".

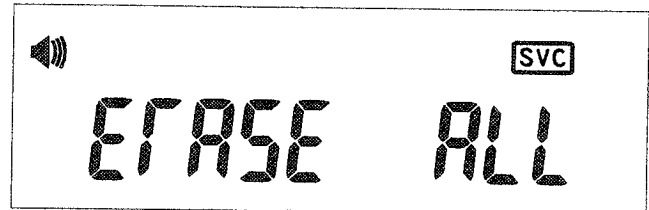

- ▷ Press the Function Button to delete all messages. At this time locked messages can not be deleted.

2) ERASE ONE

 
- ▷ To select the message you want to delete, Press the Read Button to be displayed "ERASE?" after reading the target message.

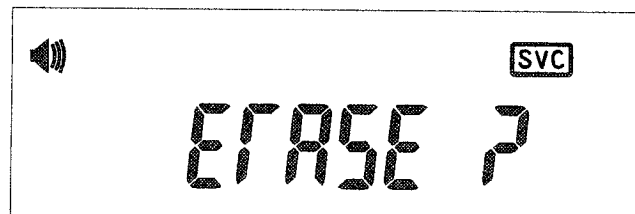



- ▷ Press the Function Button to delete the selected message.

3-13. POWER AUTO ON/OFF

 - ▷ Press the Read Button after "ERASE ALL" displays. and "SET AUTO" will be displayed.

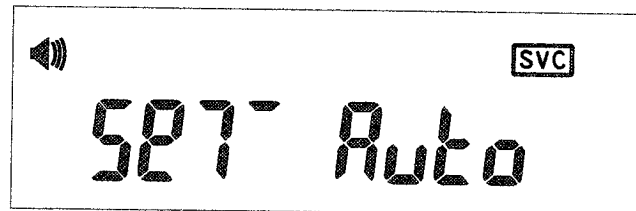

  
- ▷ Press the Function Button to be displayed "AUTO OFF" or "AUTO ON".
- ▷ Press the Read Button to select "OFF" or "ON" and Press the Function Button to fix it.

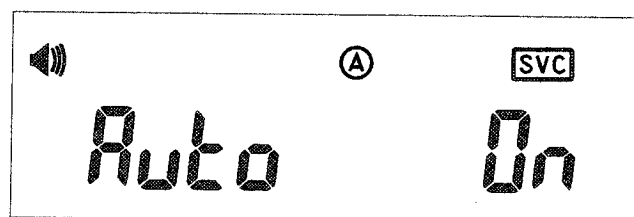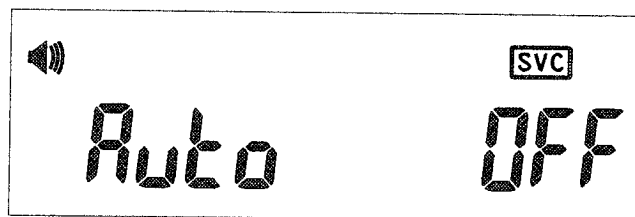


- ▷ In case you select "AUTO ON", the pager will be power off at AM 1:00 and power on at AM 5:00 automatically.

3-14. STOPWATCH

 
- ▷ Press the Read Button two times after "ERASE ALL" displays, and "STOP WATCH" will be displayed.

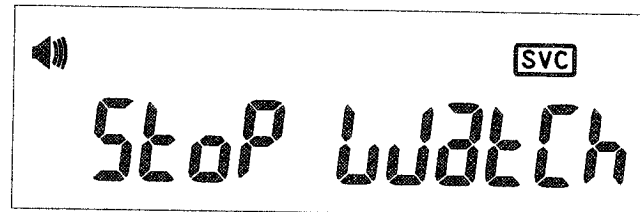

 - ▷ Press the Function Button, and it will go to the standby mode.

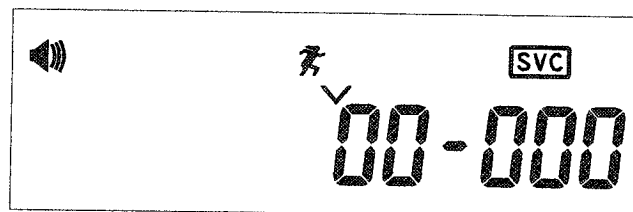

 
- ▷ Press the Function Button one more time to count time, and counting time will be displayed on the right side of LCD.

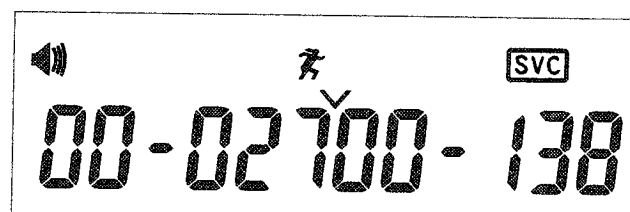

- ▷ Press the Read Button to stop counting time.
- ▷ Press the Function Button to count time once and again.
- ▷ Press the Function Button for three seconds to turn to standby mode.

3-15. LOW BATTERY INDICATION

 - ▷ "LO BATT" displays when it has to be changed.

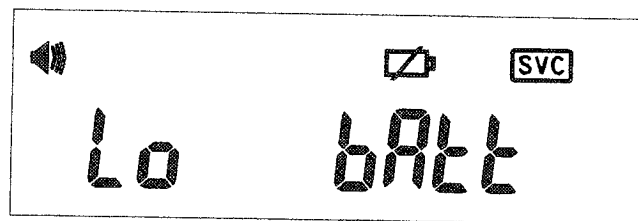


3-16. OUT OF RANGE

- ▷ If the pager is out of range area or no service area, its symbol disappears and then the page can not receive the message.


4. HOW TO CHANGE THE BATTERY

- ▷ This pager is designed to operate with one AAA alkaline battery.
- ▷ First turn off your pager.
 - ① Slide the locking tab to unlocked position.
 - ② Remove the battery cover from the pager.
 - ③ Remove the old battery and install the new battery by aligning to the inside positive and negative mark the pager.
 - ④ Replace the battery cover.
 - ⑤ Slide the locking tab to the locked position

 
1

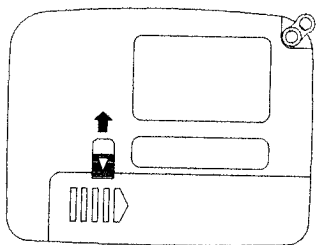


2

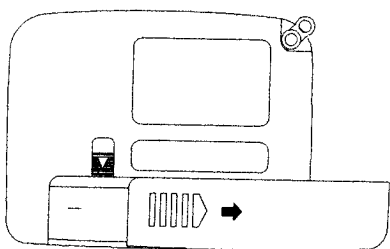 

4

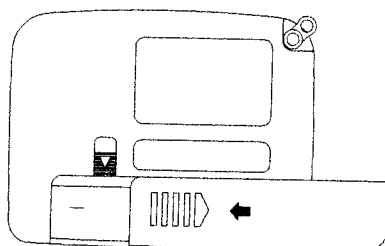 

3

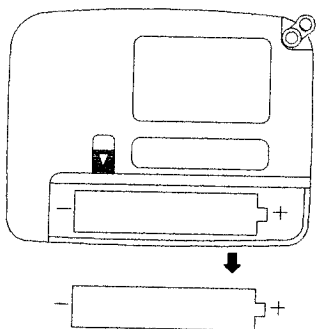 

5

