


WALKIE TALKIES

6 TRANSISTOR TECHNOLOGY!

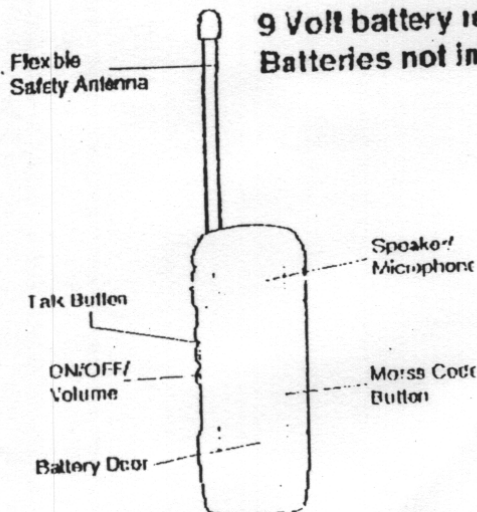

**9 Volt battery required.
Batteries not included**

Licensed by Rusty Wallace Inc., Penske Racing South Inc.

Rusty-WT2



Operation Instructions:

1) Open the battery door at the base of the unit by pressing down on the tab at the top of the door. Using the battery connector inside the compartment, snap in a 9 volt battery. Put the battery in the compartment, and replace the battery door.

2) Turn the walkie-talkie on by rotating the ON/OFF/Volume dial on the side of the unit. You will hear a low hissing background noise, which indicates the unit is working properly.

3) To transmit to any compatible walkie-talkie, push the talk button on the side of the unit, next to the ON/OFF/Volume dial. Hold it down while you speak into the speaker/microphone located at the top of the unit, between the front wheels.

4) To listen to another person talking on another unit, release the TALK Button and wait to hear their voice. You must release the talk button to hear any other transmission.

5) To use the morse code feature, you must hold down the TALK Button while you press the Morse Code Key. You can press the Morse Code Key in the sequences shown on the battery cover label.

6) Make sure you turn the ON/OFF/Volume button until it clicks to turn off the unit, and maintain battery life.

COLUMBIA TELECOMMUNICATIONS
174 KILBURN BLVD.
FARMINGDALE
NY 11735

Made in China