

Immobilizer system user guide

Type designation : A04IAA

Trade Mark : Valeo

Car Manufacturer : Honda

Operation

Immobilizer function :

When the user insert the key, the immobilizer checks the key and, if it is valid, allows the Engine Control Unit to start of the engine. If someone attempts to start the engine with an unrecognised key, the immobilizer will not allow to start the engine. In any case the immobilizer can stop the engine

Receiver function:

The receiver recognize a button press on a remote control, checks if it is valid and transmit the command of door lock/unlock, trunk, windows and sliding doors controls

Note

The keys carry a unique electronic code. For this reason and to ensure your safety, replacement keys are only possible through an authorised Honda dealer. Always keep a replacement key in case one is lost. If a key is lost contact an authorised Honda dealer as soon as possible

Maintenance

Honda cannot guarantee the system's operation if the system has been modified or if any added on equipment has been installed to it. In case of a problem with the immobilizer system or the key, consult an authorised Honda dealer.

Compliance statement (part 15.19)

This device complies with part 15 of the FCC Rules and to RSS210 of Industry Canada.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and**
- (2) this device must accept any interference received, including interference that may cause undesired operation.**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Warning (part 15.21)

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.