

Immobilizer system user guide

Type designation : S0044-A

Trade Mark : Valeo

Car Manufacturer : Honda

Operation

Immobilizer function:

When you start the engine with a key that the system recognises, the system will allow the engine to continue running. However, if someone attempts to start the engine with an unrecognised key, the system won't start the engine.

Receiver function:

Its function consists in allowing the remote control of the door lock and unlock of a car by operating on the controls of a central unit.

The transmitter electronic circuit is introduced in a key which is attached to the ignition key.

Note

The keys carry a unique electronic code. For this reason and to assure your safety, replacement keys are only possible through an authorised Honda dealer.

Always keep a replacement key in case one is lost. If a key is lost contact an authorised Honda dealer as soon as possible

Maintenance

Honda cannot guarantee the system's operation if the system has been modified or if any added on equipment has been installed to it. If you have a problem with the immobilizer system or the key, consult an authorised Honda dealer.