

User Manual



Congratulations for buying Sablet!

Thank you very much for your trust and your decision to buy our product!

As we constantly update and improve our sablet there may be small differences between the printed manual and your sablet in some cases. You have the option of downloading the current version of the manual and firmware updates .

Service: 400-0738889

Fax: 86-512-58798177

www.sooyar.com

Table of Contents

Safety instructions.....	3
Device overview.....	4
Description of the buttons.....	5
Language settings.....	6
Power monitoring and charging the batteries.....	6
Screen lock.....	7
Connecting with computer and data transfer.....	7
Functions of the buttons on the user interface.....	8
Programme menu.....	9
System settings.....	11
1. Wireless & Networks.....	11
2. Bluetooth.....	12
3. Sound.....	12
4. Display.....	12
5. Storage.....	12
6. Apps.....	12
7. Location service.....	13
8. Security.....	13
9 Language & input.....	13
10. Back & reset.....	13
11. Date & time.....	13
12. About tablet.....	13
Internet	14

Safety instructions

This user manual contains important safety instructions and information for proper use of the device. Please follow the instructions in this manual carefully.

- ◆ Please keep the device away from places with high temperatures, high humidity or dust.
- ◆ In particular please avoid leaving the device in the car during summer if the doors are closed.
- ◆ Avoid shocks and do not let the device fall, as otherwise it may cause damage to the device.
- ◆ The Standby Time of the batteries may vary due to different environmental influences.
- ◆ We are not responsible for data losses that are caused by damage to the product, repairs or any other reasons.
- ◆ Do not open the housing of the device. Doing this will void your warranty claims.
- ◆ Do not use alcohol, thinners or petrol to clean the display
– use only a dry cloth.

Device overview



- | | |
|---|------------------|
| 1. Manu button | 10. Speakers |
| 2. Volume+ Button | 11. Earphone |
| 3. Volume- Button | 12. Power button |
| 4. Home button | |
| 5. Micro SD/SDHC Card Slot | |
| 6. Mic | |
| 7. USB Port | |
| 8. OTG Port: USB from your external HDD | |
| 9. DC-in | |

Description of the buttons

Volume Buttons:

Here you can increase or reduce the volume.

Power Button:

Press the button for two seconds to switch on or switch off the device. Press the button briefly to activate or end the Standby-Mode. Reset: Press the button for seven seconds to restart the device.

ESC Button:

To go back to the previous menu

Menu Button:

To open the context menu

Home Button:

To go back to the user interface

Language setting

ST10 is delivered with English as a default language.

To change the language setting, please do the following:

- Press on the programme menu symbol  on the right side of the screen.
- Select 'Settings' .
- Scroll to the end of the list.
- Select 'Language & keyboard'.
- Select 'Select language'.
- Type your preferred language.
- Press the 'Home' button to return to the home screen.

Power monitoring and charging the batteries

The battery charge symbol  in on the status bar indicates the charging status of the batteries.

If the power goes down , the device shuts itself off automatically.

If less power is shown , use the power adapter or a computer via USB to charge the device. .

The charging time for the battery is approximately four hours.

Screen lock

If the device is not used for specified time or the 'Power' button is pressed briefly, the screen is switched off and display lock is activated.

By pressing the 'Power' button briefly the screen will be reactivated. For locking the screen press the 'Lock' button in the specified direction.

Connecting to the computer and data transfer

Sablet is equipped with a High-Speed USB2.0 Interface.

After you connect the device to a computer, it appears in the status display .

Pull the status bar down and press 'USB Connection' to activate the USB Memory. When using the device for data transfer, you cannot access the Micro SD/TF Card from Sablet!

Functions of the buttons on the user interface:**Home Button:**

To go back to the start screen.

**Recent Button:**

Opens a list of thumbnail images of apps you've worked with recently.

**Back Button:**

To go back to the previous menu / previous page.

**Program Menu Button:**

To display the programs and applications.

**Change Window Button:**

The device has five desktops. You can press this button or push your finger on the touchscreen to the side to navigate between different desktops.

**WIFI / WLAN Signal Icon****System instructions:**

Pull the status bar down to view messages about new e-mails, downloaded documents, USB Connection Status or other information.

Program menu



ApkInstaller:

Program for installing and uninstalling Apps that were not downloaded from the Android Market.



Market:

Load Apps (programs) from the Android Market. You can download and install apps, games and other applications. Many are free.



Explorer:

Open the Explorer to access Micro SD TF Cards, USB sticks and other storage media. The Explorer is a practical manager for documents and all types of data.



Internet browser



Front& back 2.0MP Camera



E-mail



G-mail:

Program for retrieving, processing and sending e-mails through Google account.



Google Maps:

Program for the display of maps or satellite images – Route planner.



Calendar



Pocket Calculator



Time



Settings



Sound Recorder:



Video Player



Gallery:

Manage and display images and videos – also enables synchronisation with Picasa web albums.



Shelves:

A program for reading and managing e-books.



RacingMoto: Car racing game



Angry Birds Rio: Game of skill



Fruit Ninja: Game of skill

System settings

Touch the icon for the settings  to open the system settings menu:

 
1. Wireless & Networks

Touch 'Wireless & Networks'.



Wi-Fi: Move OFF to ON to switch on the WLAN function.
The device automatically searches for available WLAN networks.

Wi-Fi settings: Select the network you want.
If needed you will be requested to enter your WLAN password:

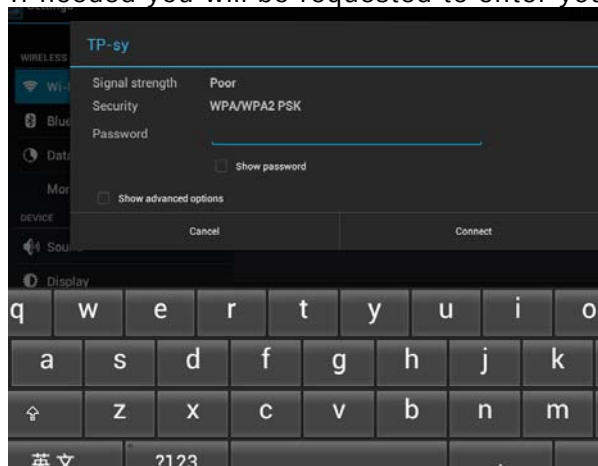

Advanced WLAN / Wi-Fi settings:

Touch the right side of the status bar for WLAN / Wi-Fi Settings, the menu for advanced settings will open up automatically. In the menu for the advanced settings you can view the current status, the IP address and other device information.

2. Bluetooth

If you move OFF to ON, and match the other bluetooth device, you can send and receive data.

3. Sound

The 'Sound' settings contain the volume control, and selection of notification sounds, system sounds, signal tones for Micro SD/TF Cards and USB signal tone.

4. Display

Includes brightness, automatic screen rotation (G-sensor), animations and display timeout time, Switch off display after: 15 seconds, 30 seconds, 1 minute, 2 minutes, 10 minutes or 30 minutes are available. For example, if you select 30 seconds, the display will be switched after 30 seconds of inactivity and screen lock is activated. Press the 'Power' button to reactivate the Display. Push the 'Lock' button up to lift the screen lock.

5. Storage

Here the current memory use is displayed.

Touch 'Unmount storage' to remove the Micro SD/TF Card during use.

6. Apps

Here you can manage your apps.

7. Location services

Here you can activate the automatic recognition of the location. You can also set security passwords which will prevent unauthorised access to your Sablet.

8. Security

Here you can define if apps from sources other than the Android Market are allowed to be installed. And other security settings.

9. Language & input

Set the system language and input method.

10. Back & reset

Back up my data: Here you can define if different settings should be stored on Google servers.

Touch 'Factory data reset' to reset the device to factory settings. All settings, self-installed apps and data stored on internal memory can be deleted.

11. Date & time

 
If your network does not support automatic setting of time, you can set the time, time zone and date manually after deactivating automatic settings.

12. About tablet

Here you can view device internal values such as operating system version, battery status, signal strength of the mobile network etc.

Internet

Touch  Icon to surf the net.
Google is the default start page.
Touch the input field to display the keyboard:




Touch  after entering a website address to open the website.

Note: The Android keyboard has few options for settings such as: keyboard language, numbers and icons etc.

The Internet browser can open four websites simultaneously;

 Touch  and the menu will be displayed as follows:

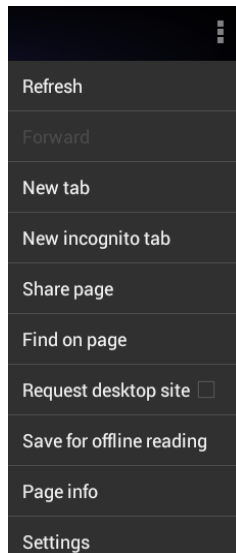

Touch 'New Tab' and a new website will be displayed.



'Most visited' and 'History' can be found under 'Bookmarks'.



Click 'Search' than turn to the URL you entering.



Touch 'Refresh' to refresh the current web page.



A step forward, opposite of Back Icon.

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.