

ELECTRONIC BALLAST INSTALLATION INSTRUCTION

Model : 120-3/32IS MPF

CAUTIONARY NOTES: Do not use this equipment for other than intended use.

1. Verify that the line voltage matches the ballast voltage.
2. Installation to be made by a qualified person in accordance with applicable codes.

Warning

This product may cause interference to radio equipment and should not be installed near maritime safety communications equipment or other critical navigation or communication equipment operating between 0.45-30 MHz.

Features

- 120V AC input
- Mid Power Factor
- Class P
- Sound rating A
- UL, cUL recognized. File E177888
- Indoor / outdoor use.

Lamp type & power consumption :

Lamp	Input Power
T8 32W x 3	85W
T8 25W x 3	65W
T8 18W x 3	48W
T8 17W x 3	46W
T8 15W x 3	38W
T12 40W x 3	72W
T12 34W x 3	60W
T12 25W x 3	67W

Before installation

1. Disconnect line voltage before installing or replacing lamp.
2. Ballast case must be grounded.
3. Place the ballast to a stable support and fix it.

Installation

1. Connect the lamps to the ballast according to the label . Ballast supports only the type of lamps specified on the product label.
2. Connect the AC power line. Connect the black wire to **L** terminal and white wire to **N** terminal of the AC source.
3. Connections of power wires must be fully insulated.