

EUT : Mouse

FCC ID : N9Q99NS22U

XNTC NEW TECH CORP.

USER'S MANUAL

Table of Contents

I. Introduction	
1. FCC Notice	
2. Package Contents	
3. System Requirements	
II. Hardware Installation	
1. PS/2 Mouse – Mini Din 6 Pin Connector	
2. Serial Mouse – D-Sub 9 Pin Connector	
III. Software Installation	
1. For Win 95/98	
2. For Win 31, DOS	
IV. Using Software	
V. Software Installation	
VI. How to use the Amouse Driver for DOS	
1. Loading the Amouse Driver for DOS	
2. Parameters of the Amouse Driver for DOS	
VII. Operation Guide for the Amouse Driver for Windows 3.1	
1. About the Amouse Driver for Windows 3.1	
IX. Operation Guide for the Amouse Control Panel for Windows 3.1 or Windows 95	

☒ Enable Pointing ☒ Always on screen ☒ Save position ☐ Left/Right swap		 Mouse Panel Version 6.21 (95) Copyright (C) 1997 Amouse. All rights reserved			
☐ Button assignment Middle (Unassigned) Right (Unassigned)		Double-Click Speed Slow Fast		Acceleration ☐ off ☐ low ☒ medium ☐ high	
☐ Color ☐ Size ☐ Hand		Sensitivity Low High		OK	
		☐ Pointer growth Slow Fast Short Long		CANCEL	

Hardware Installation

Before you begin installation of this device please note there may be software conflicts generated with some other installed drivers. To prevent the occurrence of conflicts, disable or remove existing mouse drivers and change to standard serial or PS/2 mouse drivers as supplied with your operating system.

As with all electronic devices, your computer should be powered down before the installation proceeds. Should any problems be encountered during installation or operation, check the contents of this manual. If the problem still can not be resolved contact your dealer for technical support.

USB Mouse

Play and Play with win98 system.



USB

Software Installation

This software driver only design for the XN Tech mouse. So if you use other mouse it may not work by installing this driver.

1. Connect the mouse cable into the connector of your computer.
2. Start Windows 95 or windows 98, If this is your first mouse for your new system, the Windows will try to find the default driver for you new mouse (Plug and Play). Please let the Windows do the Plug and Play action, don't cancel it.
3. Insert the XN 3D diskette into floppy A or B.
4. Click the Win95/98 Start button and select Run.
5. Type A:\Setup or B:\Setup from the Dialog box
6. This is one click installation, after installation is completed. Please restart the Windows, then you can start to enjoy the feature of XN mouse.

Backward

Return to previous page.

My Application Menu

Popup an user defined Application menu.

Stop

Stop down load.

Start

Activate Windows start button.

Vertical Scroll

Move pointer to vertical scroll bar.

Horizontal Scroll

Move pointer to Horizontal scroll bar.

Resize

Move pointer to size grip.

Installation of the Amouse Driver for DOS, Windows 3.1.***Under the DOS environment**

- a. Insert the diskette in the floppy drive (A: or B:)
- b. Change the directory "Dir" to the floppy drive at the prompt.
A: or B:
- c. Run INSTALL.EXE.
- d. Remove the diskette.
- e. Restart the system.

***Under the Windows 3.1 environment**

- a. Insert the diskette in the floppy drive (A: or B:).
- b. Change the directory "Dir" to the floppy drive at the prompt.
A: or B:
- c. Run WSETUP.EXE.
- d. Remove the diskette.
- e. Restart the system.

Software features

Step Saver Page

Visibility Page

Productivity page

Wheel page

This software utility adds much more features than the standard mouse. We categorize these features into 4 groups within the pages of mouse properties. You can configure these features by choosing the mouse properties from the control panel.

 
Please read the following description of the software features.

Step Saver Page

Step Saver | Visibility | Productivity | Wheel |


This page contains four properties for you to configure, which will save the distance of mouse movement, or the times of mouse click while you are using the mouse.

1. Snap to

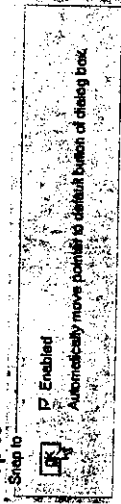

Enable this feature, the mouse cursor will automatically move to the default button of the dialog box which you just invoke.

 2. Click saver



Enable this feature, you only single click the mouse left button where you normally Double-click.

3. Focus



Enable this feature, you select a window just by pointing at the title bar of that window.

4. Smart speed




Enable this feature, it will slow down the speed of the mouse movement when mouse Pointer on the button or other controls.

Visibility Page

Step Saver | Visibility | Productivity | Wheel |


This page contains 2 properties for you to configure, which will change the feature of mouse visibility.

 Wheel button

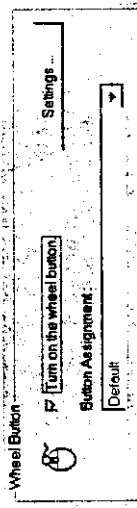


Turn on the Wheel button, you can assign one of eight optional features for this button.

 1. Default



 The default feature for Wheel button is Auto scroll. By single click this button, an Auto-scroll indicator will appear. Click the Wheel button again to release the Auto-scroll feature.

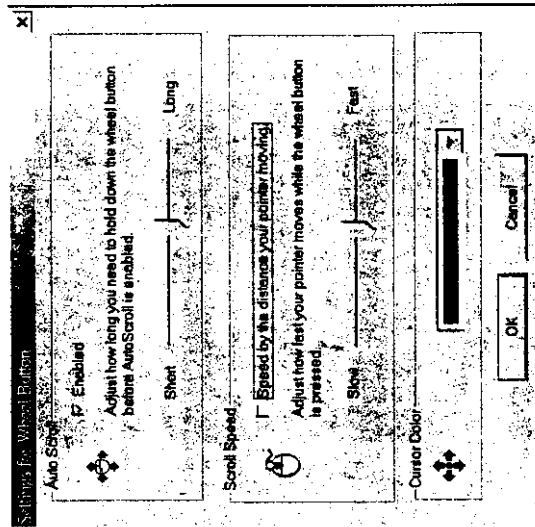


You can also adjust the scrolling speed or change the cursor color by Pressing the 'settings' button.

2. Double-Click




This feature will replace single click the wheel button as double click the primary button.

 Wheel button

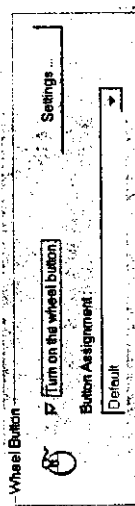

Turn on the Wheel button, you can assign one of eight optional features for this button.

 
1. Default



The default feature for Wheel button is Auto scroll.

By single click this button, an Auto-scroll indicator will appear.

 Click the Wheel button again to release the Auto-scroll feature.

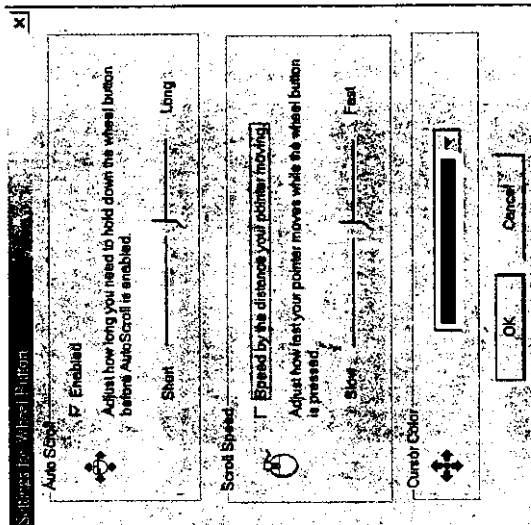

You can also adjust the scrolling speed or change the cursor color by Pressing the 'settings' button.

2. Double-Click



This feature will replace single click the wheel button

as double click the primary button.

Software features

Step Saver Page

Visibility Page

Productivity page

Wheel page

This software utility adds much more features than the standard mouse. We categorize these features into 4 groups within the pages of mouse properties. You can configure these features by choosing the mouse properties from the control panel.


Please read the following description of the software features.

Step Saver Page

Step Saver | Visibility | Productivity | Wheel |

This page contains four properties for you to configure, which will save the distance of mouse movement, or the times of mouse click while you are using the mouse.

 1. Snap to



Enable this feature, the mouse cursor will automatically move to the default button of the dialog box which you just invoke.

2. Click saver

Click Saver



Enable this feature, you only single click the mouse left button where you normally Double-click.

3. Focus



Enable this feature, you select a window just by pointing at the title bar of that window.

4. Smart speed



Enable this feature, it will slow down the speed of the mouse movement when mouse pointer on the button or other controls.

Visibility Page

Step Saver | Visibility | Productivity | Wheel |

This page contains 2 properties for you to configure, which will change the feature of mouse visibility.

Backward

Return to previous page.

My Application Menu

Popup an user defined Application menu.

Stop

Stop down load.

Start

Activate Windows start button.

Vertical Scroll

Move pointer to vertical scroll bar.

Horizontal Scroll

Move pointer to Horizontal scroll bar.

Resize

Move pointer to size grip.

Installation of the Amouse Driver for DOS, Windows 3.1.***Under the DOS environment**

- a. Insert the diskette in the floppy drive (A: or B:)
- b. Change the directory "Dir" to the floppy drive at the prompt.
A: or B:
- c. Run INSTALL.EXE.
- d. Remove the diskette.
- e. Restart the system.

***Under the Windows 3.1 environment**

- a. Insert the diskette in the floppy drive (A: or B:).
- b. Change the directory "Dir" to the floppy drive at the prompt.
A: or B:
- c. Run WSETUP.EXE.
- d. Remove the diskette.
- e. Restart the system.

Hardware Installation

Before you begin installation of this device please note there may be software conflicts generated with some other installed drivers. To prevent the occurrence of conflicts, disable or remove existing mouse drivers and change to standard serial or PS/2 mouse drivers as supplied with your operating system.

As with all electronic devices, your computer should be powered down before the installation proceeds. Should any problems be encountered during installation or operation, check the contents of this manual. If the problem still can not be resolved contact your dealer for technical support.

USB Mouse

Play and Play with win98 system.



USB

Software Installation

This software driver only design for the XN Tech mouse. So if you use other mouse it may not work by installing this driver.

1. Connect the mouse cable into the connector of your computer.
2. Start Windows 95 or windows 98, If this is your first mouse for your new system, the Windows will try to find the default driver for you new mouse (Plug and Play). Please let the Windows do the Plug and Play action, don't cancel it.
3. Insert the XN 3D diskette into floppy A or B.
4. Click the Win95/98 Start button and select Run.
5. Type A:\Setup or B:\Setup from the Dialog box
6. This is one click installation, after installation is completed. Please restart the Windows, then you can start to enjoy the feature of XN mouse.

Mouse Panel ☒ Enable Pointing ☒ Always on screen ☒ Save position ☐ Left/Right swap		Mouse Panel Version 5.21 (95) Copyright (C) 1997 Anouse. All rights reserved			
Button assignment Middle: (Unassigned) Right: (Unassigned)		Double-Click Speed Slow Fast		Acceleration ☐ off ☐ low ☐ medium ☐ high	
Color   Size   Hand  		Sensitivity Low High		Pointer growth Slow Short Fast Long	
				OK CANCEL	

EUT : Mouse

FCC ID : N9Q99NS22U

XNTC NEW TECH CORP.

USER'S MANUAL

Table of Contents

I.	Introduction	
1.	FCC Notice	
2.	Package Contents	
3.	System Requirements	
II.	Hardware Installation	
1.	PS/2 Mouse – Mini Din 6 Pin Connector	
2.	Serial Mouse – D-Sub 9 Pin Connector	
III.	Software Installation	
1.	For Win 95/98	
2.	For Win 31, DOS	
IV.	Using Software	
V.	Software Installation	
VI.	How to use the Amouse Driver for DOS	
1.	Loading the Amouse Driver for DOS	
2.	Parameters of the Amouse Driver for DOS	
VII.	Operation Guide for the Amouse Driver for Windows3.1	
1.	About the Amouse Driver for Windows 3.1	
IX.	Operation Guide for the Amouse Control Panel for Windows 3.1 or Windows 95	

The patent of the mouse is as follow
Pending no of USA: 09/027316
08/736684

Nissei Sangyo Co., Ltd.
-Subsidiary of Hitachi, Ltd.
Shin Kang Chung Shan Bldg 10Fl.,
44, Sec.2, Chung Shan N. Rd.,
Taipei, 104 Taiwan, R.O.C.
TEL:886-2-25226962
FAX:886-2-25365475

Service Center:
XNTC Technology Corp.
21700 E. Copley Driver, Suite 155,
Diamond Bar, CA., U.S.A. 91765
TEL:909-598-2992
Email:XNTC@msn.com

Introduction

Thank you for your purchase of the most technologically advanced computer input device in the world. With almost double the input resolution of currently available devices in the marketplace, its speed and ease of use will make your computer experience more productive and enjoyable.

Give the device an ample period of time for evaluation. The increased speed and sensitivity will require different handling and usage techniques than those for devices from other suppliers.

Specifically you will note that there is no longer a requirement for a large mouse pad. A smaller pad is enclosed with this package. If you travel with a notebook you will be surprised at the ease of use of this device, even in the tight confines of an airline seat.

It is suggested that the users' wrist and forearm rest on the computer desk and the device controlled with only the use of the thumb and fourth finger. This greatly reduces fatigue associated with the use of a computer mouse and may also reduce the tendency for other Stress Related Injuries.

And finally, the speed and sensitivity can be reduced/increased for specific applications or individual preferences. This is accomplished through the Control Panel "Mouse" settings for Win 31, or "mouse" settings for Win 95/98.

Please read the Users Manual completely to fully understand the capability of the input device and minimize any chance of errors or problems with installation or usage.

1. Federal Communications Commission (FCC) Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded interface cables must be used in order to comply with emission limits.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

2. Package Contents

1. Mouse
2. Users Manual
3. Mouse pad
4. Software Installation Disk

3. System requirements

- a. Personal computer: IBM PC, XT, AT, PS/2, other compatible Desktop Computer, Notebook or Laptop computer.
- b. Driver Installation: Two Floppy Disk Drives; one Hard Disk Drive, and at least one Floppy Disk Drive; or Network capability.
- c. Display Mode: Hercules, CGA, EGA, VGA or Super VGA with VESA format.
- d. Communication ports: COM1/COM2 serial port or a PS/2 communication port.
- e. Operating system: PC-DOS or MS-DOS 3.0 or higher, Windows 3.1, Windows 95/98 or Later.

How to use the Amouse Driver for DOS

1. Loading the Amouse Driver for DOS

- The Amouse Driver for DOS will install in the directory "C:\AMOUSE" in your Hard Disk Drive after INSTALL.EXE on the Driver Disk has been run.
- The Driver files can be copied or moved to any directory desired.
- To load the driver into memory, change the directory to the path of the Amouse Driver. Enter the command "AMOUSE" at the DOS prompt. The Amouse Driver will be loaded into memory.

2. Parameters of the Amouse Driver for DOS

Amouse Driver command format is shown below:

Usage: AMOUSE [option]

- 1,2,3,4 : Search serial mouse on specified Com Port.
P : Search PS/2 mouse on PS/2 port.
Q : Release AMOUSE.COM from memory.
? : Show this help message.

V. Operation Guide for the Amouse Driver for Windows 3.1

1. About the Amouse Driver for Windows 3.1

- The Amouse Driver can be found in the Windows 3.1 directory tree in C:\Amouse after "INSTALL.EXE" on the Driver Disk has been executed, or after "WSETUP" within the windows environment has been executed.
- The Driver files can not be moved to another directory.
- Windows 3.1 will load the Mouse Driver automatically with system boot.

VI. Operation Guide for the Amouse Control Panel for

Windows 3.1

- The Mouse Driver parameters can be setup by double-clicking the Amouse Icon in the Control Panel of the Main Group, which starts the Amouse Panel program.
- The parameters can be adjusted by clicking the appropriate icons in the Amouse Control Panel.
 - Enable Pointing: If this choice is enabled and "OK" selected to leave the Amouse Panel, the Amouse Icon will stay on the screen and the Amouse Icon will indicate the direction from the Mouse Cursor to the Amouse Icons.
 - Always on screen: When this choice is enabled and "OK" selected to leave the Amouse Panel, the Amouse Icon will be always on top of the screen.
 - Save position: This choice forces the system record the position of the Amouse Icon.
 - Left/Right swap: Selection of this choice allows the Left Button Function and Right Button Function to be switched.
 - Button assignment: This Selection allows the assignment of the functions of the secondary Button and Middle Button to specialized commands.
 - Color: Click on one of the three Icons to choose the Cursor color of choice.
 - Size: Click on one of the three Icons to choose the Cursor size of choice.
 - Hand: Click on one of the two Icons to choose the display direction of the Cursor.
 - Sensitivity: This scroll Bar allows the user to adjust the Cursor Sensitivity by varying the dynamic resolution of the mouse. Sliding the bar to the right increases the dynamic resolution and speed of the mouse to the left will decrease the dynamic resolution and speed of the mouse.
 - Pointer growth: The two Scroll Bars allow adjustment of Pointer growth when the Mouse is moved. Clicking on the Pointer growth check box enables this function.
 - Acceleration: Acceleration of the mouse is a function of the dynamic resolution. Choice of one of the four selections determines the acceleration curve of the mouse. The user can determine the best acceleration rate for a specific application.
 - OK: Leaves the Amouse Panel program and makes the changes the user has made effective.
 - CANCEL: Leaves the Amouse Panel program and ignores all changes made.

 
Using Software




Once you have installed the software driver and restart the Windows, an activator icon will appear at Windows 95 Taskbar.

Double-click the activator icon to activate the Mouse properties software which contains several Pages for you to configure.

Or you can right single-click the activator icon to popup a menu with Which you can select the following options;



 
1. **AP Link Config...**
Configure the application list of My Application within the Configure the Easyjump.

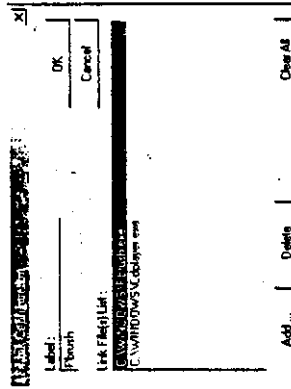

2. **XN Tech Mouse Config...**
Activate the Mouse properties software.
3. **Close XN Tech Mouse**
Close the mouse software, and disable the extra functions within the mouse properties.
Select the XN Tech Mouse icon in the Start Menu to restart the Mouse activator software.
The Mouse properties software can also be activated from the 'MouseControl' of control panel.

[<Go Back>](#) [<Continue>](#)

 3. Help[F1]



Set Wheel button as F1 key.

4. Windows Explorer



Click Wheel button to launch Windows Explorer AP.

5. Start Menu

 


Set Wheel button as Windows95 Start Key.

6. EasyJump



Click Wheel button, an Tool Pad contains twelve commonly used tasks under Windows 95 or Internet browser. Select one of enabled button to activate the corresponding function.

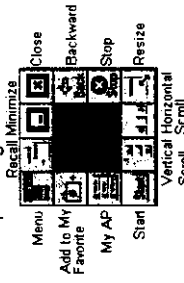

Menu

Activate the Menu.

Recall

Recall the previous active window.

Minimize

Minimize the active window.

Close

Close the active window.

Add to My Favorite

Activate Add to My favorite window.

1. Vanish



Enable this feature, the Typing shape pointer will automatically vanish on typing.

2. Pointer Warp



Enable this feature, the pointer will move onto the opposite of the screen automatically.

Productivity page

[Step Seven] [Visibility] [Productivity] [Wheel]

This page contains 2 properties for you to configure, which are ClickLock and Orientation.

1. ClickLock

 


Enable this feature, you only single click the left button and move the pointer in stead of hold down the button. Click again to release ClickLock

2. Orientation



Click the Settings button, you can adjust the way of pointer movement.

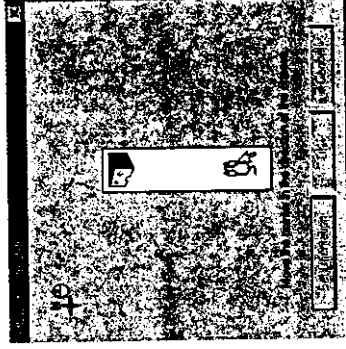

Wheel page

[Step Seven] [Visibility] [Productivity] [Wheel]

This page contains 2 properties for you to configure the Wheel and Wheel button.

Wheel



Turn on the Wheel, you can scroll vertically or horizontally (if vertical scroll not exist). You can also adjust the scroll speed or reverse the scroll direction by pressing the 'settings' button.

1. Direction - Enable this feature to reverse the direction of scroll.



2. Scrolling - Select scroll several lines or one screen at a time.

