

 
INSTRUCTIONS TO THE RECEIVER

receiver



Model 838R Receiver

To learn the Keypad Transmitter (Model 838K)
1. With the receiver plugged in, press and hold the SET button on the receiver (its red light will flash), while simultaneously activating the keypad transmitter by pressing [0, 0, 0, #] (the 4-digit PIN number is currently set at 0000), until the receiver light stops flashing indicating it has learned the code.

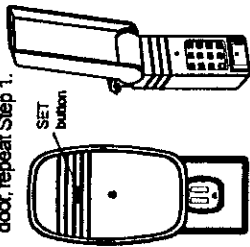


Model 838K Keypad

2. Test the new keypad transmitter by entering the 4-digit PIN number (0, 0, 0, #). If it does not operate your garage door, repeat Step 1.

CAUTION:

 If you unplug the receiver, then re-plug it while pressing its SET button, this will erase all of the transmitters "learned" in its memory. Repeat the "learning" process with each transmitter.

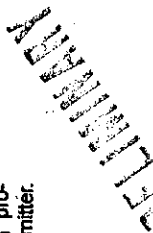

KEY PAD OPERATION

To change your PIN:

Enter the current PIN, factory set at [0000]
Press [*]
Enter the new 4 digit PIN
Press [*]
Enter the new 4 digit PIN again
Press [*]

To operate the garage door:
Press [PIN], [#] to open or close garage door.
If confirmed, the keypad transmitter will emit 3 beeps.

If the keypad transmitter does not emit 3 beeps when you enter the [PIN], [#], you may have entered an incorrect PIN number or taken too long entering the PIN number.

For example, if you are changing the PIN number from 0000 to 1234, enter the following sequence: [0000], [*], [1234], [*], [1234], [*]
If confirmed, the backlit LED flashes and the unit emits a long beep.

ADDITIONAL TRANSMITTERS (838T, 838K)

If you purchase additional new transmitters, follow steps 1 to 3 of the "Program the Transmitters to the Receivers" portion of this manual.
Each receiver (838R) can learn as many as fourteen transmitters (any combination of keypad transmitter (838T) and keypad transmitters (838K)).

WARRANTY

If, within one year from date of purchase, this product should become defective (except battery), due to faulty workmanship or materials, it will be repaired or replaced, without charge. Proof of purchase is required.

FCC

The Universal Garage Door Remote Control is approved by the FCC and it complies with Part 15 of the FCC Rules. Its operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference that may cause undesired operation.

CAUTION:

 
Do not adjust the trimmer "⊕" which is located inside the Transmitters.

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible of compliance could void the user's authority to operate the equipment.

SKYLINK®

**THE CODE SCRAMBLER
ANTI-THEFT GARAGE DOOR
REMOTE SERIES
USER'S INSTRUCTIONS**
(Model 838T/838K/838R/838T)

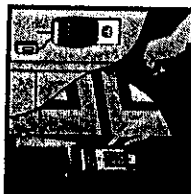

Skylink will not be held liable or responsible for any misuse or application of this product other than for its intended use.


**SKYLINK
TECHNOLOGIES INC.**

P.O. Box 35002
3355 The Collegeway,
Mississauga, Ontario
L5L 5V8, CANADA
(905) 568-2095
(905) 568-3923 FAX
Customer Service: (800) 304-1187
PIN 101A102 Rev D
Patent No. 5980734
Patents Pending
©1995 SKYLINK TECHNOLOGIES INC.

Fee 20: NB2838K

INSTALLATION

 
1. Unplug the power cord from your existing garage door opener to avoid ingressing the door accidentally during installation.
2. Open your existing wall-mounted garage door opener button.
3. Connect the wires to the terminals and tighten as shown. If your opener has more than two terminals, attach the wire to the same two terminals that the wire from the garage door opener is connected to.
4. Plug in the wires to the receiver as shown. Then, plug in the receiver to an electrical outlet.
5. Re-plug the power cord in your garage door opener.
6. Press the wall button to test and check wiring for proper operation.

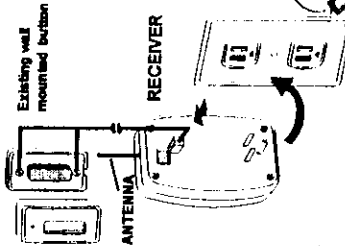

PROGRAMMING THE TRANSMITTERS TO

press and hold the SET button on the receiver (its red light will flash), while simultaneously pressing and holding Button A on the transmitter, until the receiver light stops flashing indicating it has learned the code.

 3. If you use the transmitter to operate only one door, with either Button A or B, repeat Steps 1 & 2, using the other button.

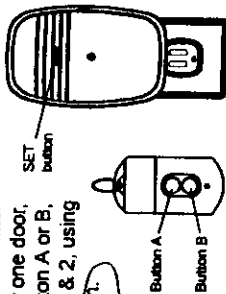

Model 838T
Transmitter

Model 838R
Receiver

1. Test the new transmitter. If it does not operate your garage door, repeat Step 1.
2. To program Button B to operate another garage door, repeat Steps 1 & 2 with a second receiver (sold separately).

To learn the Keychain Transmitter (Model 838T) use the receiver plugged in.

KEYPAD OPERATION

NOTE:

The backlight comes on when any key is pressed. Once a key is pressed, the next key must be pressed within 4 seconds or the backlight turns off and the sequence is canceled. You must begin again.

 
If the keypad does not emit a beep when pressed,

wait a few seconds and press the key again. If you hear a beep, the keypad has accepted that key.

The backlight of the keypad may not be visible when it is too bright outside.

INSTALLATION OF THE KEYPAD


1. Position the keypad on the garage door frame.
2. Lift up the cover and insert the long screw above the keypad in the slot provided (a).
3. Remove the battery cover and insert the second screw in the lower slot (b).
4. Replace the battery cover and insert screw (c).

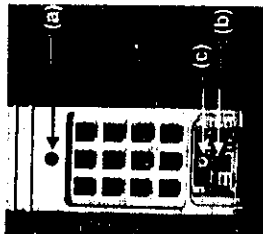

BATTERY

Two 3 volt Lithium type (CR2032) batteries (included).

 WARNING
If the battery is completely drained or if it is disconnected longer than 1 week, the PIN you have set WILL revert to the factory preset of 0000. To preserve your PIN and reduce the chance of someone using PIN#0000 for unauthorized entry, be sure to check and replace the battery regularly. When replacing the battery, check your PIN and reset it if needed.



It is time to change the batteries when the backlight no longer appears.

WARNING

DO NOT let children use any garage door transmitter without adult supervision. Children can injure themselves or others by the garage door.

Pin ID: NB2838K