

EXHIBIT C

User Manual


CONTENTS

1. Operating your pager	1
2. Indicator symbols	2
3. Battery information	2
4. Turning your pager on and off	3
5. Receiving messages	3
6. Reading messages	3
7. Turning the light on and off	4
8. Erasing messages, Telephone directory, Protecting and Unprotecting your messages	4
9. Operation Features	4-6
10. Music Call	6

AP-301 Crab

AP-301 Crab is Apollo's newest, smallest pager. This pager has easy operational functions. It contains manual roaming function, 8 sets of personal records/yearly, the features of displaying the day of the week, the date of the month, and the month, the features of erasing individual messages or erasing all messages, the five sets of alarms, the telephone direction, the music call, the ten sets of music, four types of alerts, sleep and silent function. The **AP-301** is your best choice. Read on for further instruction of the operation of the pager.

OPERATING YOUR PAGER

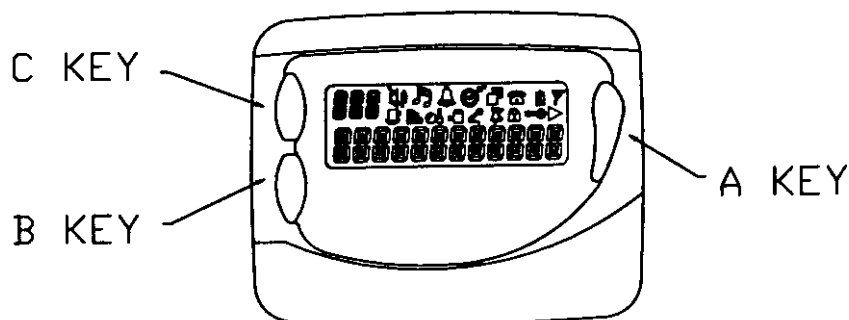

A button (read/select button)-used to turn the pager on, display/scroll messages and confirm selected pager functions.

B button (mode button)-used to scan pager modes, and time setting.

C button (light/reset button)-used to turn on the pager's LCD back light, and select pager function, numbering position selection.

INDICATOR SYMBOLS

SUN	The display of the day of the week (Mo,Tu,We,Th,Fr,Sa,Su).
1-4	The numbering message & A, B, C, D Tone display indicator
5-8	Vibrate (silent) or no alert (sleep) mode display indicator
9-12	Audible tone alert activated mode
13-16	Music alert activated mode
17-20	Auto sleep mode
21-24	Pager alarm activated
25-28	Time setting display indicator
29-32	Duplicate message
33-36	Telephone directory activated
37-40	Low-battery indicator
41-44	Out of range indicator
45-48	Message continuation
49-52	Erasing message
53-56	Protected message
57-60	Personal memo alarm indicator
61-64	Tea time display indicator
65-68	Pub display indicator
69-72	Bowling display indicator
73-76	See movie display indicator
77-80	KTV display indicator
81-84	Disco display indicator

BATTERY INFORMATION

The Apollo AP-301 pager operate with one AAA Alkaline Battery. To remove or insert the battery, slide the battery door open in the direction of the arrow. When battery is low, the word "**LOW BATTERY**" will display on the screen, at the same time, the Low-Battery indicator  will also display.

TURNING YOUR PAGER ON AND OFF

After inserting the battery, press the **A** button to turn on the pager. To turn off the pager, press **B** button until the screen display **"OFF?"** then press **C** button to confirm the selection. When the pager is off, the screen will display the word **"OFF"** and the time.

RECEIVING MESSAGES

When a message is received, the pager will notify you with the alert function you have chosen with the screen display the word **"1 PAGE"**. If the messages are left unread, the pager gives a reminder notification with the chosen function alert every two minutes. If the pager receives more than 16 messages, the screen will display the word **"MEMORY FULL"**. The next incoming message will delete the first message. If the unread messages are over 16 messages, the next incoming message will display the word **"PAGE OVER"** on the screen. After **"PAGER OVER"** display, the next incoming message will delete the first unread message.

READING MESSAGES

Press **A** button allows you to read the message. If there is a continue message on the next screen the  indicator will display. By pressing **A** button again will allow you to read the continuous message. If the incoming message is duplicated, the duplicate message indicator will  display on the screen. Allow the pager to automatically return to the standby screen, or press **C** button twice to return to the standby screen. If in the area of bad reception is the Out of Range  indicator will display on the screen. Sometimes, there might be error in receiving the messages. The pager will add an **"E"** after the messages to indicate the message might have error.

TURNING THE LIGHT ON AND OFF

Press **C** button once will turn the light on. If left alone, the light will shut itself off or press one more time will turn the light off.

ERASING MESSAGES, TELEPHONE DIRECTORY, PROTECTING AND UNPROTECTING YOUR MESSAGE

When reading the messages, press **B** button once to select Individual Erasing  or press once more to put the message in the telephone directory , or press once more to protect the message  or to unprotect the message. When you see the feature you want, simply press the **C** button to choose the feature. The most messages the pager can protect is 8 messages. When the protect message storage is full, the word "**HOLD FULL**" will display on the screen to restrict any more protect messages. In the telephone directory, the most messages the pager can stored is 10. If the message is full, the word "**HOLD FULL**" will display to indicate the storage is full.

OPERATION FEATURES

Press **B** button will scroll the feature selections: "**SET ALERT?**", "**CLEAR ALL?**", "**OFF?**", "**SET TIME?**", "**SET ALARM?**", "**SET MEMO?**", "**DIRECTORY?**", and back to standby screen. Press **C** button to select the feature. If no message is in storage, the feature "**CLEAR ALL?**" will not display as one of the selection.

“SET ALERT?”- after pressing **C** button to select this feature, press **B** button again to choose further feature: **“AUDIO?”**, **“SILENT?”**(vibration), **“SLEEP?”**(mute). When see the feature you wanted, press **A** or **C** button to confirm the selection. However, if choose **Audio**, must press **C** button to go into selection the music or tone alert, and press **B** button to select the type of music or tone, then press **A** or **C** button to confirm the selection. When choose **Sleep**, must press **C** button to go into selection the sleep mode, then press **B** button to select **“SLEEP ALL ? ”** or **“SLEEP AUTO ? ”**. If choose **“SLEEP ALL ? ”**, press **A** or **C** button to confirm the selection. If choose **“SLEEP AUTO ? ”**, press **C** button to go into setting time with no alert, **12:00A 12:00A** (forward is starting, afterward is ending), next press **B** or/ and **C** button to adjust time, then press **A** button to confirm the selection. When choose the selection of music, the music indicator will display  ; when choose the audible tone, the audible tone indicator will display  ; when choose the vibration, the vibration indicator will display .

“CLEAR ALL?”-press **C** button to confirm the feature selection. Press **A** button to go back to standby screen without erase any messages.

“OFF?”-press **C** button to turn the pager off, or press **A** button to go back to screen standby.

“SET TIME”-press **C** button to set the month, date, and time. Press **B** button to select the correct number for month, date or time. Press **C** button to go to the next selection, or press **A** button to confirm the setting and to go back to standby screen.

“SET ALARM?”-this pager has three sets of alarm. You may choose any one of the sets. Press **C** button select the feature: the set, **ON/OFF**, time, and minute. Press **B** button to select the correct numbering, and press **A** button to confirm the setting and go back to the standby screen. If the alarm is being turn on, the alarm indicator will display on the screen.

"SET MEMO?"-this pager has eight sets of personal memo alarm, and 60 sets of English phrases for choosing (ex. **appointment, have a guest** and). Press **C** button to select the feature: the **set, ON/OFF, month, date, time**. Press **B** button to select the correct number for the **set, ON/OFF, month, date, time**. Press **A** button to confirm the setting and to go back to standby screen.

"DIRECTORY?"-the directory only hold ten sets of numbers. When reading the messages, you can select the feature to store the message into the telephone directory. In the telephone directory, you can also individual erase, protect or unprotect. Press **A** button can scroll the messages in the directory, and press **B** button to select the feature function (individual erase, protect, or unprotect), and press **A** button again to confirm the selection.

MUSIC CALL

This pager contains ten sets of music and ten sets of message. When your friend pages you, they can add *0--*9(any choice) after the message to indicate ten different types of music. When you receive the message, you will be notify by the music your friend has chosen (if you have your alert on silent or sleep, then music will notify you even though your friends add the music call.

EXAMPLE: 1 Dial the number (818)212-8888(your pager number) and wait for the greeting.
2. Then press "*012345678#"
3. The screen will display "-012345678" while playing the first music in the selection.