

PRELIMINARY MANUAL


Backgrounds Unlimited, Incorporated.
Old Town Hall, Rt. 11 South
P.O. Box 327
Mt. Sidney, VA 24467

MODEL: TXBD-11A
FCC ID: NH5FWVTXBD11A

Setting Up Units

Using absolutely no wires, Backgrounds Unlimited TXBD11A can send audio or video signals from virtually any sound or picture source to any TV, video monitor or powered speakers using the same connectors as your other electronics.

To enjoy wireless video and audio, just connect the transmitter to whatever picture or sound source you want to view or hear at another location, and then connect the receiver to the TV, computer, or powered speakers in that other location. Then turn on the power switch on both the transmitter and receiver and you are ready to go wireless.

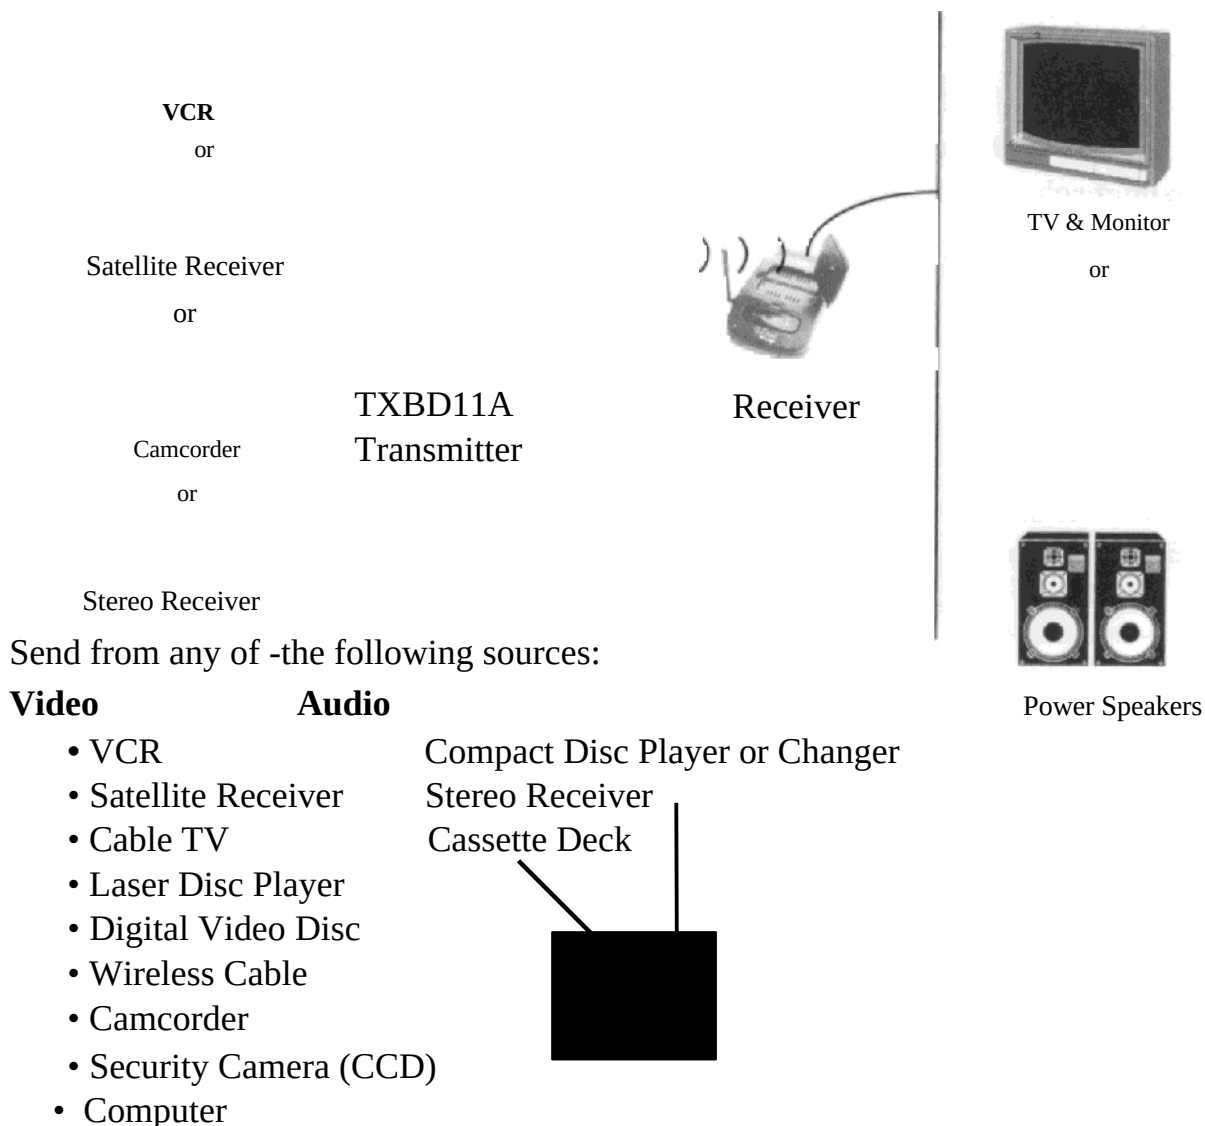

The following pages first show you how to connect the Backgrounds Unlimited TXBD11A transmitter to any of these source components and then demonstrate how and where to connect and position the receiver.

Connecting the Transmitter

How To Transmit Audio/Video from Your VCR

- 1 Make sure the Backgrounds Unlimited TXBD11A Transmitter *ON/OFF* switch is in the *OFF* position. Connect one set of audio/video (A/V) cables to the A/V jacks of the transmitter and to the A/V jacks on the back of your VCR labeled *LINE OUT*. Be sure the yellow, red and white plugs match the yellow, red and white jacks on both the VCR and the transmitter. If the VCR has only one output for audio (mono sound only), connect the white plug to that single audio output and to transmitter's *AUDIO LEFT* jack.
- 2 Plug one end of the provided power adapter into the back of the Backgrounds Unlimited TXBD11A transmitter and the other end into any 120-volt wall outlet. Turn the *ON/OFF* switch to *ON* position and channel 1 indicator light should be lit.
- 3 If your VCR has only one set of A/V output jacks and you want to use it with a nearby TV, connect coaxial cable from the single *OUT* port on your VCR to the *VHF/UHF IN* port on your TV. (Note: In order to also view cable transmission on that TV, connect your incoming cable TV source to the single *IN* port of the VCR.)
- 4 Locate and orient the transmitter according to the section of this manual titled "Orienting Units for Optimal Performance."

BACKGROUNDS UNLIMITED, TXBD11A TRANSMITTER

