

**IMPORTANT: Install by Qualified Electrician.** Please read instructions before proceeding with installation. Keep these instructions for future reference.

## **WARNING**

### **RISK OF ELECTRIC SHOCK**

- Turn off power prior to inspection, installation or removal of fixture.
- Ensure electrical enclosure is properly grounded in accordance with National Electrical Code (NEC).

### **RISK OF FIRE**

- Product must be installed in accordance with NEC and/or applicable local codes by a qualified licensed electrician.
- Wiring connections should be made with UL approved wire connectors.

**THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED**

### **ATTENTION**

- Use care when handling the luminaire. Do not drop, press, or bend the light panel to avoid damage during installation.
- Prior to installation, carefully unpack and properly inspect luminaire for any damage or loose connections that may have occurred during shipping.

### **ELECTRICAL CONNECTION**

**Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

## LUMINAIRE INSTALLATION

NOTE: For connection to dimming controls, consult control manufacturer's wiring instructions.

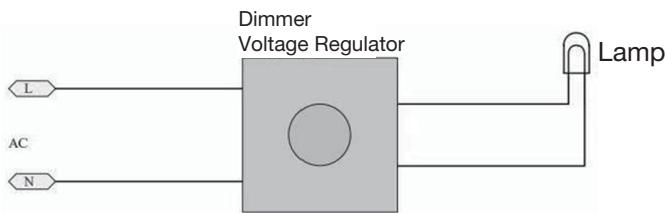


**USE ONLY UL LISTED WIRING CONNECTORS AND UL LISTED WIRING HAVING A MINIMUM TEMPERATURE RATING AS SHOWN ON THE FIXTURE LABEL.**

The internal circuit of the lamp can detect the voltage of the Voltage Regulator or Dimmer to control the output current change to achieve continuous dimming.

### Chain Mounting with V Hook


- Attach customer supplied V-Hooks to each end of the luminaire base using designated key hole slots. **(See Figure B)**
- Attach customer supplied chain to the V-Hooks and mounting surface per applicable codes.

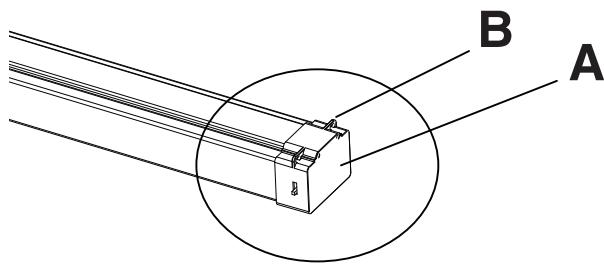

**A: End Cap**

**B: Chain Mounting with V Hook**

### CCT-PRODUCT

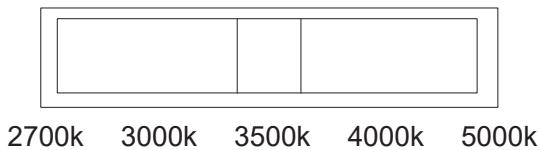

These instructions are not intended to cover all details or variations in your equipment or your particular requirements for installation, operation or maintenance. Should further information on this product be needed that is not covered by these general installation instructions, please contact the TCP Customer Service Department at phone number 800-324-1496 for further assistance.


**SAVE THESE INSTRUCTIONS**

**TCP®**

325 Campus Dr. | Aurora, Ohio 44202 | P: 800-324-1496 | [tcpi.com](http://tcpi.com)

©TCP OCT 2017/WF96556

## Field-Adjustable Wattage & CCT

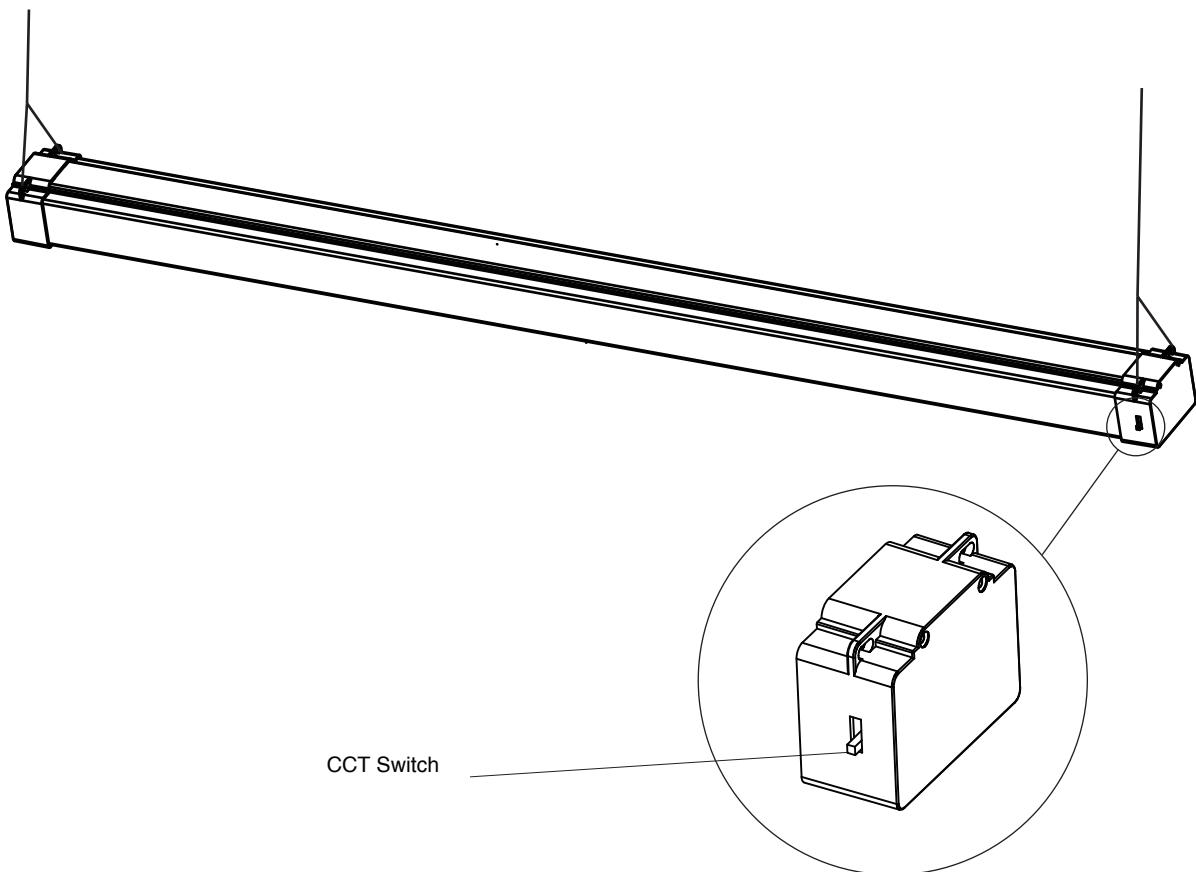

CCT Switch

The end users may adjust the color temperature by the one DIP switch buttons integrated into the driver. Each DIP switch is accommodated with 5 options (left, middle and right), corresponding to 5 color temperatures, which can perform the desired color temperature.

- 1.DIP switches are located on the top of driver.
- 2.Select color temperature by sliding switch left or right respectively to the desired value.