


# Your PM35110

## User guide

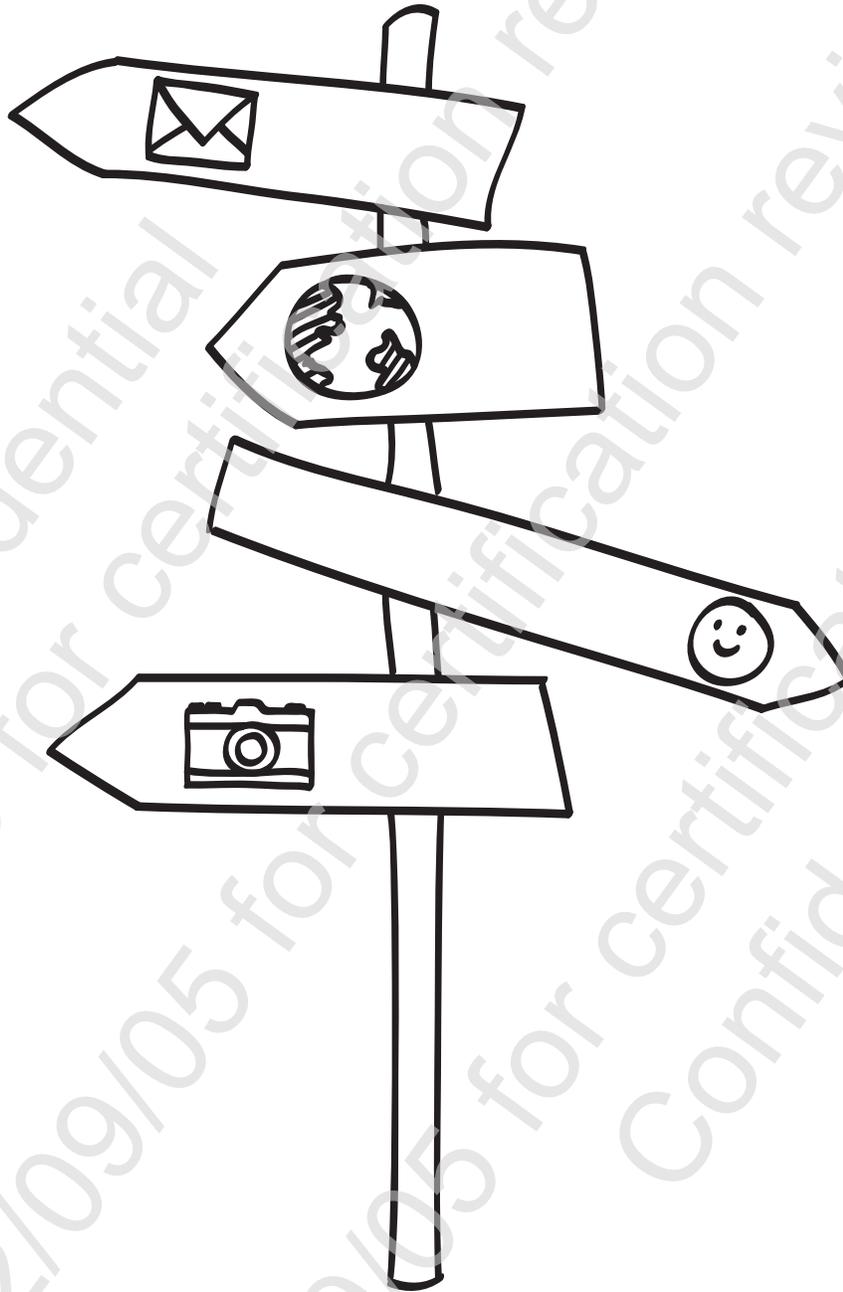

## Conventions used in this guide

In this user guide, we use the following symbols to indicate useful and important information:



This is a note. A note often gives additional information, such as what happens when you choose to do or not to do a certain action. A note also provides information that may only be applicable to some situations.



This is a tip. A tip gives you an alternative way to do a particular step or procedure, or lets you know of an option that you may find helpful.




This indicates important information that you need in order to accomplish a certain task or to get a feature to work properly.



This provides safety precaution information, that is, information that you need to be careful about to prevent potential problems.

Confidential  
2012/09/05 for certification review only  
Confidential

# Unboxing

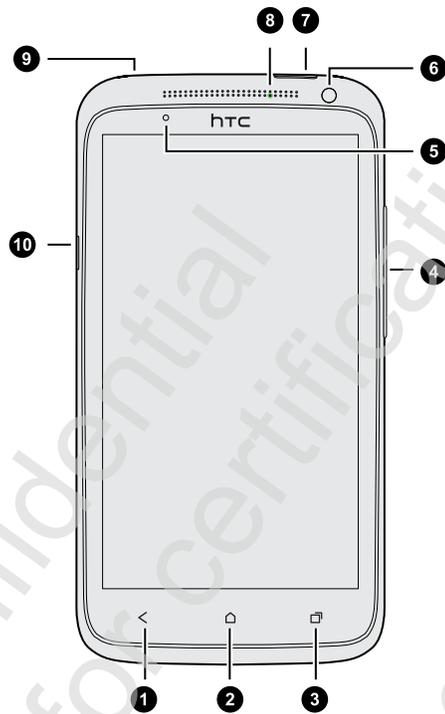

1. BACK
2. HOME
3. RECENT APPS (can be configured in Settings to open the Menu)
4. VOLUME
5. Proximity sensor
6. Front camera
7. POWER
8. Notification LED
9. 3.5mm headset jack
10. USB connector




If you want to use a screen protector, please don't cover and block the proximity sensor. You can purchase the dedicated screen protector for PM35110 that already has a small opening for the sensor.

## SIM card


PM35110 uses a microSIM card. The microSIM card contains your phone number, service details, and memory for storing phonebook contacts and/or text messages.

### Inserting the SIM card

1. To eject the SIM card tray, insert the SIM eject tool (or a small bent paperclip) into the small hole next to the tray. You should insert it at an angle.

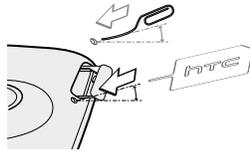

2. Pull the SIM card tray out, and place the SIM card into the tray.

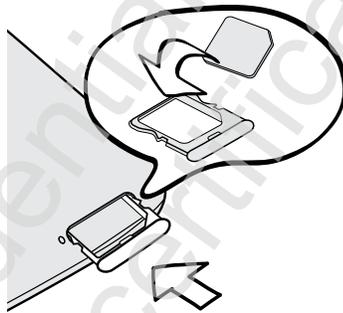


3. Insert the SIM card tray into its slot.

### Removing the SIM card



Make sure to switch off PM35110 before removing your SIM card.

1. To eject the SIM card tray, insert the SIM eject tool (or a small bent paperclip) into the small hole next to the tray. You should insert it at an angle.

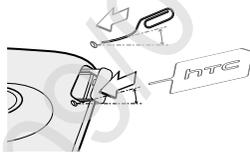

2. Pull the SIM card tray out.
3. Take the SIM card from the SIM card tray.

## Charging the battery

Before you turn on and start using PM35110, it is recommended that you charge the battery.



Only the power adapter and USB cable provided in the box must be used to charge the battery.

1. Insert the small end of the USB cable into the USB connector.



2. Insert the other end of the USB cable into the power adapter.
3. Plug in the power adapter to an electrical outlet to start charging the battery.



As a safety precaution, the battery stops charging if it overheats.

## Switching the power on or off

### Switching the power on

Press the POWER button.



When you turn on PM35110 for the first time, you'll need to set it up.

---

## Switching the power off

---

1. If the display is off, press the POWER button to turn it back on, then unlock the screen.
2. Press and hold the POWER button for a few seconds.
3. Tap **Power off** on the options menu.

## Want some quick guidance on your phone?

---

### Learning the basics with Quick Tips

---

After your phone starts, you'll see a transparent overlay of Quick Tips on some screens (such as the Home screen) that will guide you in using PM35110. The tips for a screen won't display again after you've closed them.

To view the Quick Tips again, slide the Notifications panel open, and then tap  > **About** > **Help** > **Show all quick tips**.

---

### Exploring PM35110

---

Tips & Help lets you get the most out of PM35110 in seconds.

- Need to know how to do something right away? Just type in some keywords and get clear, up-to-date answers right on PM35110.
- Ever have the feeling that you're not getting the most out of your phone? Browse through the friendly walkthroughs on Tips & Help to learn how. The topics range from intro to advanced and the Tips & Help widget even recommends topics that you might like.

To open Tips & Help from the Home screen, tap  > **Tips & Help**.

If you haven't downloaded Tips & Help content yet, or if there's updated content available, just tap the download link to get it.



To change the sync settings of Tips & Help, tap  > **Update settings**.

---

### Searching Tips & Help

---

1. In Tips & Help, tap , and then enter the words you want to search for.
2. Tap a search result to jump straight to that item.

# Setting up your phone

## Setting up ! † for the first time

When you switch on PM35110 for the first time, you'll be asked to set it up.

Walk through the on-device setup to choose your Internet connection, add your accounts, and more.



Some features that need to connect to the Internet such as location-based services and auto-sync of your online accounts may incur extra data fees. Don't worry. You can enable or disable them in Settings later on.

## Home screen

Your Home screen is where you make PM35110 your own. You can add your favorite applications, shortcuts, folders and widgets so they're always just a tap away. To find out how, see [Personalizing](#) on page 36.

---

### Extended Home screen

---

As you start to do more things with PM35110, you might find that one Home screen is not enough. No problem.

Slide your finger horizontally to the left or right on the screen and you'll discover more space for adding icons, widgets, and more.

Press  to return to the main Home screen.

## Using Leap view

- To jump straight to the screen that you want, press  or pinch the screen to show the Leap view. It reveals all Home screens as thumbnails. Just tap the one you want and you'll leap right there.
- In Leap view, if there's space to add a new screen, you can tap **Add Panel** to do so. An empty Home screen appears and you can start customizing from there.



## Getting contacts into ! !

There are several ways you can add contacts to PM35110.

Sync with your computer	Sync the contacts from your old phone to your computer, and then use HTC Sync or HTC Sync Manager to sync PM35110 with your computer's Microsoft® Outlook®, Outlook Express or Windows® Contacts.
Gmail™	Google® contacts are imported to PM35110 after you sign in to your Google Account. You can also create more Google contacts right from PM35110.
Social network accounts	Log in to your favorite social networks to import contact information from them.
Phone contacts	You can create and store contacts directly in PM35110.
SIM card	Copy all your SIM contacts to PM35110.
Microsoft Exchange ActiveSync®	PM35110 syncs your work contacts from the Microsoft Exchange ActiveSync Server in your workplace.
Transfer	Use the Transfer app to transfer contacts and other data from your old phone to PM35110 through Bluetooth®.

## Getting photos, videos, and music on or off

### ! †

There are two ways you can transfer your media.

- Connect PM35110 to your computer. Your computer will recognize it just like any removable USB drive, and you can copy your media between them.
- Download and use our HTC Sync Manager software. You can easily set it up to sync folders containing media and playlists on your computer with PM35110. HTC Sync Manager can also automatically get photos and videos off PM35110 to your computer.



Download and install HTC Sync Manager, when available, from our website. Or in the meantime, download and use the latest version of HTC Sync to sync your media and data.

Tired of transferring music, videos, and other media every time you change to a new phone? Use online storage services to put your media in one place so you can access them anywhere — on your computer, PM35110, and other mobile devices.

Check first what online storage accounts are available on PM35110 and sign in to the one you want to use. To sign in to an account, slide open the Notifications panel, and then tap  > Accounts & sync > . Use the Gallery app to access media in your online storage.

## Getting to know your settings

Want to change the ringtone, set up a Wi-Fi® connection or make the screen brighter? Do this and more in Settings.

Slide the Notifications panel open, and then tap . Here are some of the basic settings you can change:

- Tap the **On/Off** switch next to an item such as Wi-Fi to turn it on or off. Tap the item itself to configure its settings.
- Tap **Sound** to set a ringtone, choose a sound profile, and configure incoming call sound settings.
- Tap **Display, gestures & buttons** (or **Display & buttons**) to change the screen brightness or set how long the screen is idle before going to sleep.
- Tap **Security** to secure PM35110, for example with a screen lock.

## Updating the ! † software

PM35110 can check and notify you if there's a new update available. You can also manually check if there's an available update.



You might want to use Wi-Fi or your computer's Internet connection to download software updates to save on data usage. You can set this option in **Settings > About > Software updates > **.

### Installing a software update

When the Internet connection is on and there's a new software update available, the update notification icon  appears in the status bar.

1. Slide the Notifications panel open, and then tap the system update notification.
2. If you want to avoid additional data charges, select **Use Wi-Fi or cable only**.
3. Tap **OK**.
4. When download is complete, select **Install now**, and then tap **OK**.

Wait for the update to finish. PM35110 restarts automatically.

### Installing an application update

When the Internet connection is on and there's an available update for one of your apps, the update notification icon  appears in the status bar.

1. Slide the Notifications panel open, and then tap the update notification.  
The Updates screen opens with the list of application updates to be installed.
2. Tap an item to view its details, and then tap .
3. When you're done reviewing the updates, tap **Install**. You'll be asked to restart PM35110 if needed.

### Checking for updates manually

1. Slide the Notifications panel open, and then tap .
2. Tap **About > Software updates > Check now**.