



1181 South Rogers Circle

Suite 18

Boca Raton, Florida 33487

e-mail [info@jti-innovation.com](mailto:info@jti-innovation.com)

[www.jti-innovation.com](http://www.jti-innovation.com)



## OPERATION INSTRUCTIONS

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

**NOTE:** THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.



**Congratulations on your purchase of a Nobody Messes with..IT JT200 vehicle security/convenience system. This system represents the most advanced and reliable technology in vehicle protection.**

### THIS SYSTEM INCLUDES

- Computerized control module
- A pair of four-button, Elusive Code™ icon labeled remote controls
- JTI Programmable six-tone siren
- JTI True Dual™ impact sensor
- Super bright red LED indicator
- Push button valet switch
- Wallet instruction card
- Manuals
- Window decals
- Warranty registration card

### VERY IMPORTANT

JTI will warrant the control module to the original purchaser for as long as you own your vehicle. This warranty is effective only if your system has been installed by an authorized JTI dealer. You must fill out your warranty registration card and send it along with an original copy of your sales receipt to JTI within 10 days of purchase to activate your warranty.

By purchasing this system and sending in your warranty card and original sales receipt, you are automatically eligible for the JTI Protection Plus Program™. The Protection Plus Program™ can, under certain conditions, provide a refund of the comprehensive insurance deductible if your vehicle is stolen while equipped with this security system. For detailed information, please visit our website at [www.jit-innovation.com](http://www.jit-innovation.com).

## USING YOUR SECURITY SYSTEM

### Arming

1. To arm the system manually, press  on the remote control once. The siren (horn) will chirp once and the parking lights will flash one time. If installed, the vehicle's doors will lock.
2. Automatic passive arming: After the doors have been closed, the LED indicator will flash rapidly for thirty seconds. At the end of thirty seconds, the system will arm, chirp the siren (horn) once and flash the parking lights once. If installed, the vehicle's doors will lock. NOTE: Passive arming is a selectable feature that may be turned ON or OFF by your authorized dealer/installer.

After the security system is armed, the LED indicator will flash approximately once every second to indicate that the system is actively protecting your vehicle.

#### With the security system armed, your vehicle is protected in the following ways:

- Light impacts will result in the parking lights activating and a three chirp pre-warn siren blast.
- Heavy impacts will result in the siren and parking lights activating for the programmed alarm duration. The alarm comes set at the thirty-second alarm duration, but can be programmed for sixty seconds.
- If a door is opened, the system will activate immediately resulting in the siren and parking lights activating for the programmed alarm duration.
- Turning on the ignition will trigger the security system.
- If the optional start disable system is installed, the vehicle's starter will be prevented from cranking.


If you inadvertently trigger the security system, you can at any time disarm the security system by pressing  on the remote control.

**NOTE:** If any entry points (doors, hood, trunk) are not closed when arming, the siren will chirp three times to indicate an open zone.

### Disarming

1. To disarm the system, press  on the remote control. The siren (horn) will chirp twice and the parking lights will flash twice. If installed, the vehicle's doors will unlock. Also, if installed, the interior lights will turn on and stay on for twenty-five seconds or until you turn on the ignition.

NOTE: If the siren chirps four times, this is an indication that a zone has been violated. See **Security Zone Intrusion Memory**.

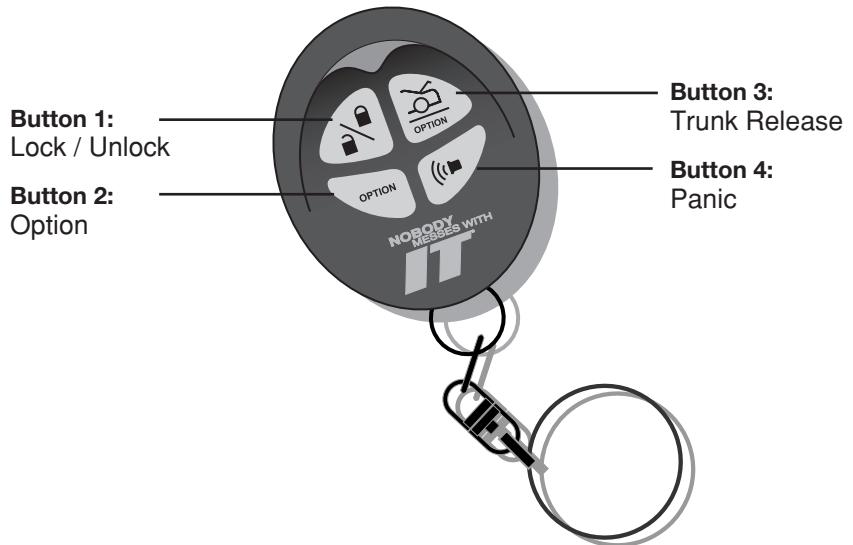

2. If the remote is lost or damaged, the system can also be disarmed by using the valet switch. Turn the ignition to the ON position and press the valet switch for five seconds or five times depending on the valet switch setting that has been programmed. The systems default setting is five seconds.

### User Selectable Quiet Mode

Your security system has the ability to be armed and disarmed silently (no siren chirps / horn honks). To place the security system into quiet mode, press  and  simultaneously on the remote control for three seconds. The parking lights will flash once to indicate you have placed the system into quiet mode. You may then arm and disarm the system silently by pressing  on the remote control. **Quiet Mode does not effect the Panic feature.**

To take the security system out of quiet mode, press  and  simultaneously on the remote control for three seconds. The parking lights will flash twice to indicate that you have placed the system into normal operating mode. You may then arm and disarm the system by pressing  on the remote control.

### Valet Mode

Valet mode is used to prevent the security system from arming. The security system should be placed into valet mode when the vehicle is being serviced. It may also be used as a manual disarm, in the event of loss or damage to the remote control. It should be noted that convenience features such as keyless entry and trunk release will continue to function via the remote control even if

the security system is in valet mode. At the time of installation, the system will be programmed to enter valet mode with the valet switch in one of the following ways:

**Factory Default Method:** To place the security system in valet mode, turn the ignition key to the ON position and press and hold the push-button valet switch for five seconds. The red LED indicator will turn on solid. The ignition may be turned off and the security system will stay in valet mode. To turn the valet mode off, repeat the process and the LED indicator will turn off.

**High Security Method:** To place the security system in valet mode, turn the ignition key to the ON position and press the push-button valet switch five times. The red LED indicator will turn on solid. The ignition may be turned off and the security system will stay in valet mode. To turn the valet mode off, repeat the process and the LED indicator will turn off.

## Valet Mode Via Remote

You can also place the security system into valet mode via the remote control by pressing  and  simultaneously for three seconds. The parking lights will flash once and the red LED indicator will turn on solid. To turn the valet mode off, simply repeat the process. The parking lights will flash two times and LED indicator will turn off.

## Panic Feature

You may also trigger the security system via the remote control by pressing  for three seconds. This is done to attract attention to your vehicle. The siren (horn) will sound for thirty seconds. This feature will also work when the security system is in valet mode. Pressing  on the remote control will turn the panic feature off.

## Car Finder

Car finder can be used to locate your vehicle in a crowded parking lot. Simply press  on the remote control two consecutive times to activate car finder. The siren will sound three short blasts and flash the parking lights. To re-activate car finder, simply repeat the process.

## Multi-Car Remote Operation

Your remote control transmitter is also able to operate a second vehicle if that vehicle is equipped with a Nobody Messes With..It security system with Elusive Code™. Your authorized JTI dealer can program this feature.

Vehicle #1 will be the primary vehicle (all functions will operate).

Vehicle #2 will be the secondary vehicle ( on the remote control will arm/disarm the security system, no other functions will be available from the primary remote on the secondary vehicle).

## LED Indicator

The security system's status is reported to you via the LED indicator located inside the vehicle. The following is a menu of different indications:

Flashing	Armed
Off	Disarmed
On Constant	Valet mode
Rapid Flashing	30-second Passive Arming Countdown

## Security System Zone Intrusion Memory

If the security system is triggered during your absence, the siren (horn) will chirp 4 times upon disarming. The LED indicator will flash two to six times to indicate which zone has triggered the security system.

2 Flashes	Door Zone
3 Flashes	JTI true dual™ impact sensor full impact triggered
4 Flashes	JTI true dual™ impact sensor pre-warn impact triggered
5 Flashes	Trunk/hood zone triggered
6 Flashes	Ignition zone

## OPTIONAL FEATURES

### Remote keyless entry

The security system can be interfaced with your vehicle's power door locks. This feature will lock the vehicle's doors when the system is armed. It will also unlock the doors when the system is disarmed. The remote keyless entry feature will operate even when the system is in the valet mode to always provide the owner with convenience.

**NOTE:** Some vehicles may require additional parts to utilize the keyless entry feature.

### Ignition controlled power door locks

When the ignition controlled power door lock feature is installed, the vehicles doors can lock automatically when the vehicle's ignition is turned on and unlock automatically when the ignition is turned off. The lock and unlock function can be programmed independently by your authorized JTI installer/dealer.

## Interior illumination

The security system may be interfaced to the vehicle's interior lights. When the security system is disarmed/unlocked, the vehicle's interior lights will turn on. The interior lights will turn off after twenty-five seconds, if the security system is armed/locked, or if the ignition is turned on.

## Trunk release

The security system may be interfaced to the vehicle's electric trunk release. By pressing and holding  for three seconds, the vehicle's trunk will open. If the trunk release feature is not used, this button may be used to control other options (remote car starter, window roll up, etc.).

## Option button

This button may be used to control another optional accessory. Pressing  momentarily will activate the option.

## Starter disable

The security system can be connected to a starter disable mechanism providing additional security by disabling the ability to start the engine during an attempted break-in.

## REMOTE BATTERY REPLACEMENT

The remote control is powered by a 12-volt battery that lasts approximately six months to one year depending on the frequency of use. A weak remote battery will be indicated by the following symptoms:

- A) Remote control range decreases.
- B) The LED on the remote goes dim.

If the battery needs to be replaced, please see your authorized JTI dealer.

## OPTIONAL ACCESSORIES

### Remote engine start

The JTI add-on remote car starter allows you to start your vehicle via the remote control. This module will allow you to keep the interior of your car warm in the winter and cool in the summer.

### Power trunk release

If your vehicle is not equipped with power trunk release, the JTI A-73 trunk release kit can be added to provide remote controlled trunk release.

### Field disturbance sensor

A field disturbance sensor covers the interior and perimeter of the vehicle with an invisible field. The A-35 (dual zone) field disturbance sensor reacts to any intrusion in and around the perimeter of the vehicle. The field disturbance sensor can be added to any JTI alarm system and is a must for vehicles with convertible tops.

### Door lock motor

The A-22 power door lock motor kit is for those vehicles not equipped with power door locks. With the addition of the A-22 motor, the vehicle may be locked and unlocked by remote control. One A-22 motor will be required for each door that will be controlled by remote control.

### Power window control

The A-71 (two-way) power window controller kits can be used to allow the security system to operate the vehicle's power windows by remote control.

## TROUBLESHOOTING

**Siren doesn't chirp when arming or disarming** – The security system may have been placed into quiet mode. See **User Selectable Quiet Mode**.

**Red LED is always on** – The security system may have been placed into valet mode. See **Valet Mode**.

**Siren chirps four times when disarming the system** – The security system has been triggered in your absence. See **Security System Zone Intrusion Memory**.

**Siren chirps 3 times when arming the system** – The door or trunk has been left open. See Arming and Disarming the Security System.