

Appendix C – USER MANUAL

USER'S MANUAL

HPP-150A,HPP-450A,HPP-930A

HANSCOM CO.,LTD

TABLE OF CONTENTS

- Features.
- External View.
- Display Symbols.
- Operation of Hanscom Pager
 - PowerON
 - Power OFF
 - Default Settings
- Setting the Time & Date
- Receiving and Reading a message.
 - Erasing a Single Message
 - Erasing all Messages
 - Locking the Messages
 - Unlocking the Messages
 - Setting the Alarm
 - Setting the Auto Power ON/OFF
 - Changing the Alert Mode
 - BATTERY INFORMATION.
 - Replacing the battery
 - Low battery indication

 
===== 1 =====

FEATURES


- | | |
|--------------------------------------|-------------------------------|
| 1. Date & Time Stamping | 8. LCD displays 16 Characters |
| 2. 4 melodies and 2Beep Tone | in 2 Line |
| 3. 20 Messages and 16 digit Memory | 9. Low Battery Indication |
| 4. Automatic Power ON/OFF | 10. Alarm Function |
| 5. Message Full Indication | 11. Memory Back-Up |
| 6. Selective Vibration or Beep Alert | |
| 7. Selective message delete | |

===== 2 =====

EXTERNAL VIEW

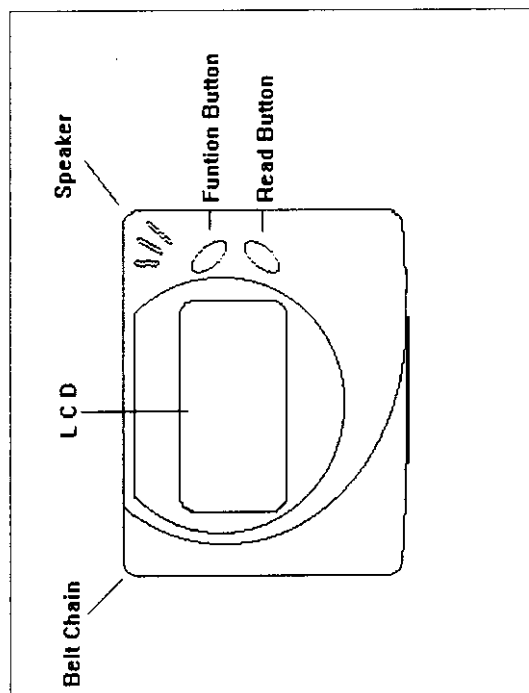

DISPLAY SYMBOLS

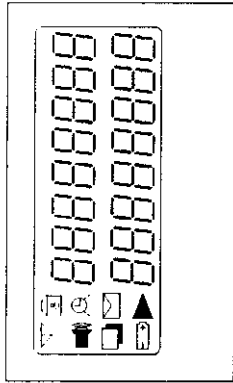 

No Page : No message is received

Page full : Message full indicator

Low battery : Low battery indicator


	수신 가능지역 표시
	메시지 보호표시
	메시지 수신시 신호용 알람표시
	알람 설정표시
	동일정보 수신표시
	확인안한 메시지 표시
	건전지 교체 표시
	메시지 계속 표시
a b c d	사용하지 않음
• • • •	시간 및 메시지
	

OPERATION OF HANSCOM PAGER

● . Power ON

Press Function Button(■) for 2 seconds.

 Your pager gives an alert by either a sound or vibration, indicating it is on, after return to the standby screen.

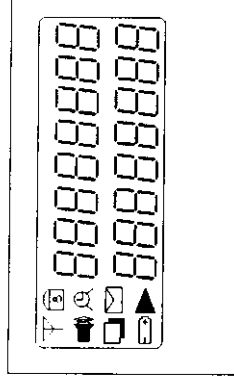


● . Power OFF

Press Function Button(■) The back light comes on.


Then Press Function Button(■) again for 2 seconds.

 The prompt "PAGE MODE" displayed.

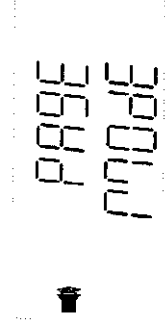

Press read Button(▲) for menu select until you reach "POWER OFF"

 Then Function Button(■) to turn your pager off.

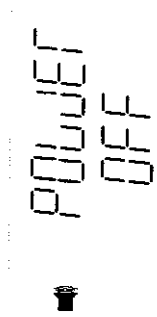


● . Default Settings


- * Alert mode : sound
- * Alarm : Off
- * Melody : Beep tone
- * Auto ON/OFF : Off
- * Auto ON Default value : Only am01:00 to am04:00

SETTING THE TIME & DATE

 Press Function Button(■) The back light comes on.
Then Press Function Button(■) again for 2 seconds.
The prompt "PAGE MODE" displayed. Press Read Button(▲) for menu select
until you reach "SET TIME"

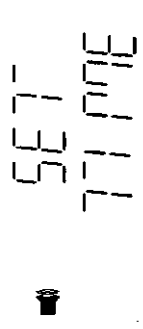


 Press Function Button(■), First digit will be blinking.
Press Read Button(▲) to select hour, minute, AM/PM, month, day, year.
Press Function Button(■) to setting the data.
Press Function Button(■) return to the standby screen.

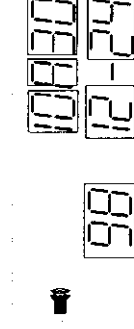

Receiving and Reading a message

 When a message is received, the pager alert for 8 seconds, and "PAGE[01]" will be displayed. Press any button to stop the alert.

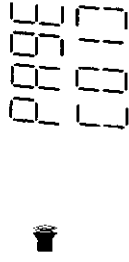


PAGE
[01]

Press Read Button(▲) to read the message. If the pager has over 30 messages, it will erase the oldest one to make room for the newest one.

To read a message in memory, do the following:

Press Read Button(▲). The first display will be date and time stamp.

 
-01- is sequence of the message in memory

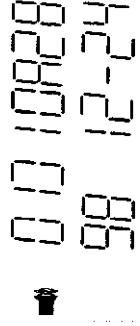

01 10928
98 12-24

Press Read Button(▲) to display the message.

 
Then press read button(▲) again to read the next ones.

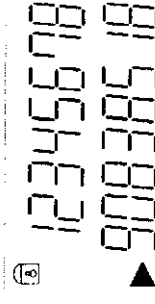

12345678
90838518

ERASING OF MESSAGES

 While reading the messages, you can erase an message from memory. When will be displayed "ERASE". Press Function Button(■) it will be erase. If not, press read button(▲) to cancel and to read the next messages.

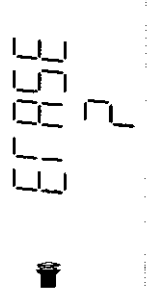

ERASING OF ALL MESSAGES

NOTICE : Read all stored messages before you enter this mode.

 
This procedure will erase all stored message.

Press function button(■) The back light come on.

"PAGE MODE" will be displayed. Then Press function button(■) again for 2 sec.


Press read button((▲)to select until you reach "ERASE ALL".

Press function button(■) It will be erase all stored message. and return to the standby screen.

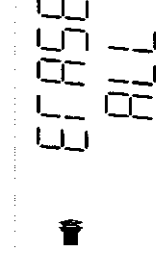


LOCKING THE MESSAGE.

 If you want to protect the messages, while reading the messages.
Press Function button(■). it will be Lock with symbol.


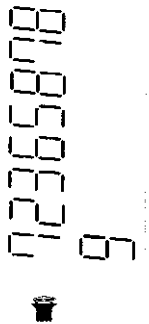


 The *symbol indicates that your message is saved.
If not, press Read Button(▲) to cancel.
and to read the next messages.

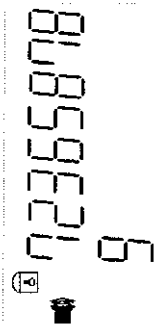

UNLOCKING THE MESSAGE.

  
If you want to unlocking the messages.
While reading the messages, When will be displayed "UNLOCK"
Press Function button(■). it will be unlock the message.
and The symbol** will be disappeared.
If not, press Read Button(▲) to cancel.

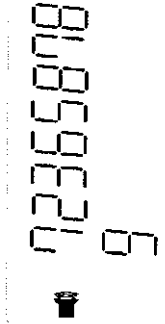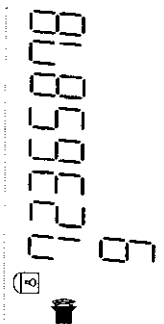


SETTING THE ALARM

Press Function Button(■) The back light comes on.
Then Press Function Button(■) again for 2 seconds.
The prompt "PAGE MODE" displayed.
Press Read Button(▲) to select until you reach "SET ALARM"

 Press Function Button(■), First digit will be blinking.
Press Read Button(▲) to select hour,AM/PM,month,day,year.
Press Function Button(■) to setting the data.
Press Function Button(■) return to the standby screen.

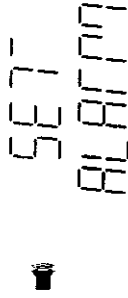


SET
ALARM

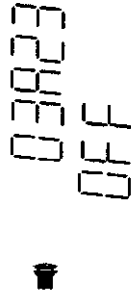 

03823
OFF


SETTING THE AUTO POWER ON/OFF

 Press function button(■) for 2 sec. The back light come on.
"PAGE MODE" will be displayed.. Press read button((▲)menu select
until you reach "SET AUTO". Press function button(■)

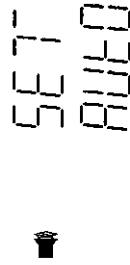

SET
AUTO

 It will be blinking "Auto OFF".
Press read button(▲) to change from OFF to ON.
Press function button(■) to confirm.(Default setting)

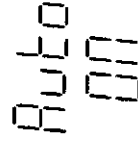

Auto
ON

Auto on
05:00

Auto off
12:00

SILENT
?

Will be
?

7:00
?

CHANGING THE ALERT MODE

- **Setup silent (from sound or vibration to silent)**

Press Function Button(■) The back light comes on.
Then Press Function Button(■) for 2 seconds.
The prompt "PAGE MODE" displayed. Then press Function button(■) again.
"Silent ?" will be displayed.

Press function button(■) again.

Then return to the standby screen, and The pager mode will be silent mode.

- **Setup vibration (from sound or silent to vibration)**

Press Function Button(■) The back light comes on.
Then Press Function Button(■) for 2 seconds.
The prompt "PAGE MODE" displayed. press Function button(■).
Press read button(▲) menu select until you reach "Vibrate ?"

Press function button(■) again.

Then return to the standby screen, and the pager mode will be vibrate mode.

- **Setup melody (from vibration or silent to sound)**

Press Function Button(■) The back light comes on.

Then Press Function Button(■) for 2 seconds.

The prompt "PAGE MODE" displayed. Then press Function button(■).

Press read button(▲) menu select until you reach "Tone ?"

Press function button(■) again, it will selectable the 2 beep tone and 2 melody.

 
Press read button(▲), to choose a tone(No.1~2) or a melody(No.3~4).

Then press function button(■) to confirm and return to the standby screen.

BATTERY INFORMATION

- **Low Battery indication**

When the battery power reaches low levels, it displays "LOW BATTERY" with sound alert.

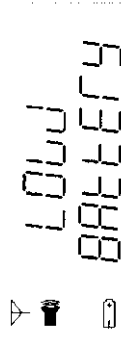

- **Replacing the battery**

 
Hanscom pager is designed to operate with AAA size alkaline battery.

To replace the battery, do the following:

- ① Slide locking switch to the unlock position.

- ② Slide the battery cover off the pager.
- ③ Remove the old battery and insert a new AAA battery in the direction shown the battery compartment.
- ④ Slide the battery cover back on the pager and slide the battery lock switch to the locked position.

NOTICE : Do not place the battery in backward. If you insert the battery in backward, all the message, time and setting mode will be deleted.



Appendix D – AGENCY AUTHORIZATION LETTER



HANSCOM CO., LTD.

TEL : (02) 866 - 7740

(02) 839 - 1472

FAX : (02) ~~866 - 3957~~ 858-8887

(SEOUL OFFICE)

7F., DO JIN BLDG., 82 GURO-DONG,
GURO-GU, SEOUL, KOREA.

July 27, 1988

FEDERAL COMMUNICATIONS COMMISSIONS
Authorization and Evaluation Division
7435 Oakland Mills Road
Columbia, MD21046

Subject: Agent Authorization

To whom it may concern:

Hanscom Co., LTD., hereby authorizes Bay Area Compliance Laboratory Corporation to act on its behalf in all matters relating to application for equipment authorization, including the signing of all documents relating to these matters. All acts carried out by Bay Area Compliance Laboratory Corporation on our behalf shall have the same effect as our own action.

Sincerely,

OH SUNG YOON 
General Manager.