

 
THE USER'S GUIDE MANUAL.

USER'S GUIDE MANUAL.

* FEATURES

- ▶ User selectable alphanumeric display (character zooming)
 - 4 line : 20 characters per line(5x7 dots font)
 - 2 line : 13 characters per line(7x9 dots font)
- ▶ Memory Capacity (total 30,000 characters)
 - Private character : 20 slot
 - Maildrop character : 13 slot
 - Dairy character : 20 slot
- ▶ Shows Time of Day and Date
- ▶ Message Time and Date Stamping
- ▶ Message Lock up to 15 Messages
- ▶ Reminder Alert for Message(s) Unread (selectable the unread alert time)
- ▶ Duplicate Message Indication
- ▶ Message Slot Scrolling and Page Scrolling
- ▶ Individual Message Delete and Erase All
- ▶ Memory Full Indication
- ▶ 10 Selectable Alerts (8 Tones/melody, Vibration and Silent)
- ▶ Selectable Auto Reset Time (from 4sec to 24sec)
- ▶ Built in Audible Alarm Clock
- ▶ LCD brightness controllable and LCD Back Lighting
- ▶ Automatic power On/Off (On/Off time programmable)
- ▶ Backup battery for memory Retention during battery replacement
- ▶ Battery Level display
- ▶ Low Battery Warning for Battery Replacement

Control Buttons

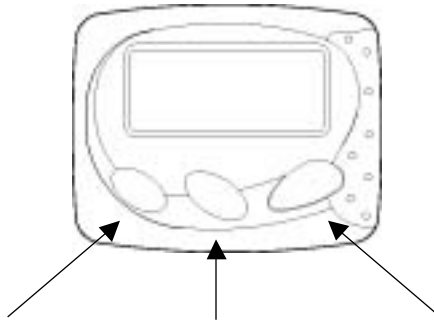

Mode

Cursor

Read

Left button Escape/Backlight - Used to Escape current state and to turn the backlight on, and to display message manipulates screen.

Cursor button Right Directional - Used to navigate through the Main/Function Menu, to preview your messages, to Adjust hour/minute/date.

Right button Read/Select Button - Used to select a pager function, to read message, to navigate through time/alarm/auto-power-on/off setting function.

4. Operation

Turning Your Pager On

Press and hold **READ** for three seconds. A start-up screen is displayed and your pager activates the initial alert.

Turning Your Pager Off

Press **CURSOR** to move the cursor to , and press **READ** to display the Function menu.

Press **CURSOR** to move the cursor to .

Press **READ** to turn Pager off.

Your pager is now off and the screen is blank.

Backlight

Press **MODE** to move within the Main menu or

From the Message Manipulate Screen, select '  '.

The Backlight is on at ST/BY mode by pressing MODE.



Using the Main Menu

- 1 Press **CURSOR** to move within the Main menu.
- 2 (Private, Maildrop, Diary and Function Mode)
- 3 Press **READ** to read message or enter the Function Menu.

 
Receiving/Reading/Manipulating Personal Messages

Your pager can receive up to 20 personal messages. When a message is received, your pager alerts according to the current alert setting (audible, vibrate, or silent).

-Reading an Incoming Message

- 1 When a Private message received,  is changed to .
- 2 Press **READ** to display your message.
Press **READ** again to read the next screen.
- 3 Press **CURSOR** to go back to first screen of the message.



note:  on the st/by screen indicate a Full Memory.

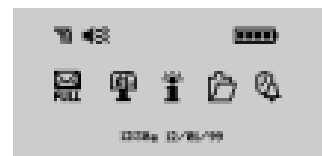

-Preview/Reading/Backlighting/Locking/Unlocking/Deleting/Storing to Diary a Message

- 1 Press **CURSOR** to move the cursor to .
- 2 Press **READ** to the display message preview screen, Press **CURSOR** to preview the message you want to read.
- 3 Press **READ** to read the detailed message. Press **READ** again to read the next screen.
- 4 If you want to backlight/lock/unlock/delete or store-to-Diary the message while reading it, press **MODE** to display Message Manipulate Screen.
- 5 Press **CURSOR** to move the cursor to the desired function, and press **READ** to activate it.

  - 6 If you want to go back to the preview screen, press **MODE**.

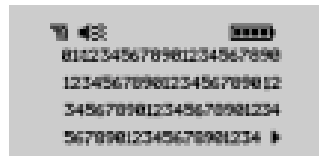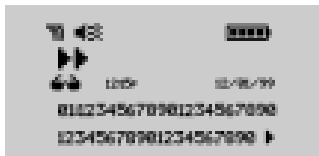

Note: When an unread message exists, your pager gives a periodic reminder alert until all unread messages are read. A  on the pager status line indicates that you have unread messages.

Deleting Messages

-To Delete Single Message while Reading It

- 1 From the Message Manipulate Screen, press **CURSOR** to move the  cursor to .
- 2 Press **READ** to delete the message.

-To Delete All Unlocked Messages

- 1 From the Function Menu, Press **CURSOR** to move the  cursor to .
- 2 Press **READ**. "Delete All?" screen is displayed.
Press **CURSOR** to make the cursor to .
- 3 Press **READ**. All unlocked message are deleted.



Note: Diary messages are not deleted with this feature.

Locking and Unlocking Messages

Up to 15 messages can be locked to prevent them from being deleted or from being replaced when memory is full. When a message is locked, the  symbol displayed on the Time Stamp line.

-To Lock or Unlock a Message while Reading it

- 1 From the Message Manipulate Screen, press **CURSOR** to move the  cursor to .
- 2 Press **READ** to lock the message.
- 3 Repeat steps ① and ② to unlock the message.

Maildrop/Information Service Messages

Your pager has thirteen Maildrop areas (Each area has five rooms for storing maildrop messages).

-Reading Messages in Your Maildrop

- 1 When a maildrop messages received,  is changed to .
- 2 From the Main Menu Screen, press **CURSOR** to move the  cursor to .
- 3 Maildrop messages are read the same way as personal messages.



Diary Message

Your pager has twenty Diary areas for storing personal/maildrop messages.

-Storing Personal Message/Maildrop in your Diary

- 1 From the Message Manipulate Screen, press **CURSOR** to move the  cursor to .
- 2 Press **READ**. The message is now in the Diary.

-Reading/Backlighting/Deleting Messages in your Diary

 
- 1 From the Main Menu Screen, press **CURSOR** to move the cursor to .
- 2 Diary messages are read and deleted the same way as personal messages.

Note: Diary messages are deleted one at a time.

Using the Function Menu

The Function Menu provides access to the many features of your pager through the use of symbols.

- 1 From the Main Menu, press **CURSOR** to move the cursor to .
Press **READ** to display the function menu.
the location of the cursor is indicated by blinking symbol.
- 2 Press **CURSOR** to move the cursor within the function menu.
As you move through the Function Menu, the function symbols blinking to indicate the present location of the cursor.
- 3 Press **READ** to activate function.
To exit from the Function Menu without making any changes or go back to the Message Menu, press **MODE**.

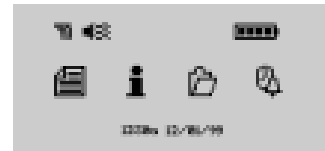


Display Zoom

When this feature is activated, the standard 1-line (20 characters per line) display is converted to a 2-line (13 characters per line) display.

-To select Display Zoom

 - 1 From the Function Menu, Press **CURSOR** to move the cursor to .
- 2 Press **READ**. "ZOOMING" screen is displayed.
- 3 Press **CURSOR** to move the cursor 1) o 2)
- 4 Press **READ** to select desired zooming s1)p2) ,).

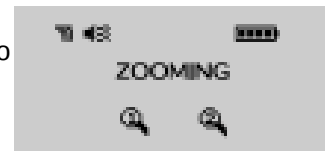

Pager Off

- 1 From the Function Menu, press **CURSOR** to move the cursor to .
- 2 Press **READ**. "PAGER OFF" screen is displayed.
- 3 Press **CURSOR** to move to cursor 1) .
- 4 Press **READ** to turn the pager off.



Setting the Incoming Message Alert

- 1 From the Function Menu, press **CURSOR** to move the cursor to .
- 2 Press **READ**. "SET ALERT" screen is displayed.
- 3 Press **CURSOR** to move the cursor desired number.
- 4 Press **READ** to listen the melody or tone.
- 5 Repeat steps ③ and ④ to select another pattern.



Setting the Alarm

- 1 From the Function Menu, press **CURSOR** to move the cursor to .
- 2 Press **READ**. "SET ALARM" screen is displayed.
- 3 Press **CURSOR** to enable O or disable X alarm.
- 4 Press **READ** to move the cursor to alarm hour.



- 5 Press **CURSOR** to adjust the hour.
- 6 Repeat for minutes.
- 7 Press **READ** to move the cursor to .
- 8 Press **CURSOR** to select Alarm Melody.
- 9 Press **MODE** to activate the alarm setting.

Note: If alarm is on, the  symbol is displayed on the pager status line.

Setting the Auto Power On/Off

- 1 From the Function Menu, Press **CURSOR** to move the cursor to .
- 2 Press **READ**. "AUTO ON/OFF" screen is displayed.
- 3 Press **CURSOR** to enable **O** or disable **X** auto-power-on/off.
- 4 Press **READ** to move the cursor to auto-power-on/off digits.
- 5 Press **CURSOR** to adjust the hour of auto-power-on/off time.
- 6 Repeat steps ④ and ⑤ to adjust the minutes of auto-power-on/off time.
- 7 Press **MODE** to activate the auto-power-on/off setting.



Setting the Clock

- 1 From the Function Menu, press **CURSOR** to move the cursor to .
- 2 Press **READ**. "SET CLOCK" screen is displayed.
- 3 Press **CURSOR** to adjust the hour.
- 4 Press **READ** to move the cursor to next set of digits.
- 5 Repeat steps ③ and ④ to adjust minutes, month/day/year.
- 6 Press **MODE** to activate the clock setting.



Setting Pager Options

From the Function Menu, press **CURSOR** to move the cursor to .
Press **READ** to display the Pager Options Mode.



-Adjusting the LCD Contrast

- 1 From the Pager Options mode, press **CURSOR** to move the cursor to .
- 2 Press **READ**. "LCD CONTRAST" screen is displayed.
- 3 Press **CURSOR** to adjust Contrast of LCD display
- 4 Press **MODE** to exit.

 


-Adjusting Display the Time Out

- 1 From the Pager Options mode, press **CURSOR** to move the cursor to .
- 2 Press **READ**. "DISPLAY TIME" screen is displayed.
- 3 Press **CURSOR** to move the cursor to the desired display time (4,6,8,10,12,14,16,18,20,22,24 sec).
- 4 Press **MODE** to change the Display time.

-Adjusting the Unread Alert

- 1 From the Pager Options mode, press **CURSOR** to move the cursor to .
- 2 Press **READ**. "UNREAD ALERT" screen is displayed.
- 3 Press **CURSOR** to move the cursor to the desired alert duration (3,6,9,12,15,18,21,24,27,30 min).
- 4 Press **MODE** to change the Unread Alert setting.

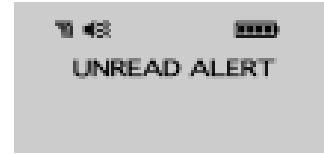


-Adjusting Scrolling

- 1 From the Pager Options mode, press **CURSOR** to move the cursor to .
- 2 Press **READ**. "SCROLLING" screen is displayed.
- 3 Press **CURSOR** to change the scroll method (FAST FULL, FAST HALF, SMOOTH FULL, SMOOTH HALF).
- 4 Press **MODE** to activate the Scroll Setting.



-Adjusting the Menu Language

 - 1 From the Pager Options mode, press **CURSOR** to move the cursor to .
- 2 Press **READ**. "MENU LANGUAGE" screen is displayed.
- 3 Press **CURSOR** to change the Language method (ENGLISH, PORTUGUESE, SPANISH).
- 4 Press **MODE** to activate the Scroll Setting.

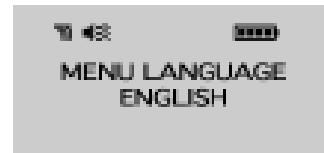

❖FCC Requirements ;

This device complies with part 15 of FCC rules. Operation is subject to the condition that this device does not cause harmful interference.

❖CAUTION ;

Any change of modification in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority the equipment.