



©1999 Long Hall Technologies L.L.C.


Nickelodeon and all related titles, logos and characters
are trademarks of Viacom International Inc.



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

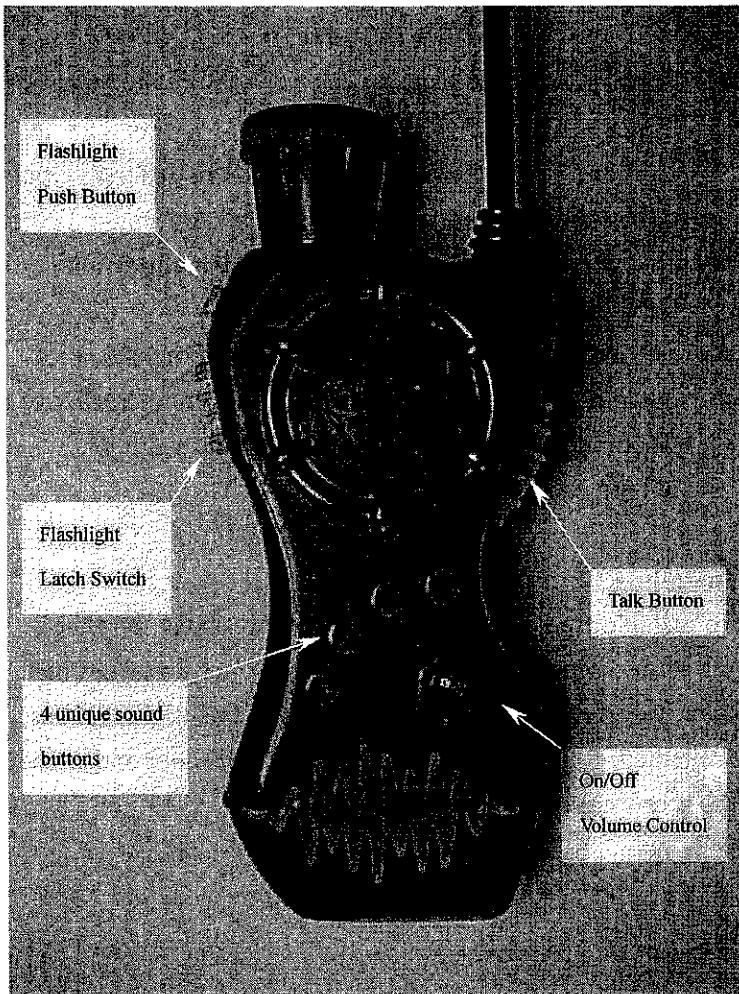

To Maintain the Best Performance:

1. Keep your walkie talkie dry. If it gets wet, wipe it dry immediately.
2. Use a damp cloth to wipe the outside clean. Don't use strong solvents or detergents.
3. Don't use or leave your walkie talkie in places that are extremely hot, humid, dusty or cold. Especially not in a bathroom, near a heater, or inside a parked car exposed to direct sunlight with the doors and windows closed.
4. Handle gently as dropping can cause damage.

Playing the walkie talkie:

1. To turn on the walkie talkie, turn the volume control clockwise.
2. Adjust the volume control to a comfortable listening level.
3. Press the TALK button to talk, and press the 4 sound buttons to transmit the corresponding sound.
4. Release the TALK button to hear, or press the 4 sound buttons to play around with the corresponding sound.
5. To turn off the radio, turn the volume control counterclockwise until it clicks.

TROUBLE CHECK

1. Flashlight not working?

- Replace both AA batteries with two new batteries.
- If the bulb is broken, replace a new bulb.

2. Poor reception?

- Replace the 9V battery with a new one.

WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IMPORTANT!

- Always use fresh batteries, never worn-out or exhausted ones.
- Don't mix old batteries with new ones or different types of batteries (e.g. carbon with alkaline.)
- Always remove batteries when not using your walkie talkie for long periods.
- The following factors can affect the performance and operating range of the walkie talkies: computers, active electronic equipments, fluorescent lights and tall buildings.

Installing Batteries

To install or replace batteries, use a screw driver to rotate the screw counter clockwise. Open the battery compartment door, insert two size AA batteries for the flashlight and one 9V battery for the walkie talkie. Replace the door and rotate the screw clockwise to lock the door.