

A5514SA

Operating Instructions

 
Contents

Before Use	Names of Each Part3
	Charging the Battery5
	Turning the Power ON/OFF5
	Basic Operation of the Phone.....6
	Switching the Screen Display to English7
	Setting the E-mail and EZweb Default Settings8
	Confirming Your Phone Number and E-mail Address8
	Changing Your E-mail Address9
Telephone	Making a Call 11
	Answering a Call 11
	Dialed / Received12
	Adjusting the Volume of the Other Party' s Voice ..12
	Adjusting the Ringer Volume13
	Changing the Ring Tone.....14
	Silent Mode15
	Recording Messages When Unable to Answer a Call.....15
	Using the Telephone Overseas17
Address Book	Adding an Entry to the Address Book19
	Calling a Number from the Address Book21
	Editing an Entry in the Address Book21
Mail	About E-mail.....23
	Creating and Sending E-mail23
	Reading Received E-mail25
	Replying to Received E-mail26
	About C-mail28
	Creating and Sending C-mail28
	Reading Received C-mail30
Camera	Taking a Photo31
	Recording a Movie32
	Send a Photo or Movie by E-mail34
EZweb (Internet)	About EZweb35
	Connecting to Information Sites.....35
	Download and Setup CHAKU-UTA.....36
	Registering Frequently Accessed Sites37
EZnavi	Using EZnaviwalk39

Infrared Data Communication	About Infrared Data Communication.....41
	Using Infrared Data Communication.....42
Pair Function	Register a Pair Partner43
	Call a Pair Partner.....44
Smart Mode	About Smart Mode45
	Using the Phone in Smart Mode.....47
Character Input	About Character Input.....53
	Entering Text54

Before Use

Names of Each Part

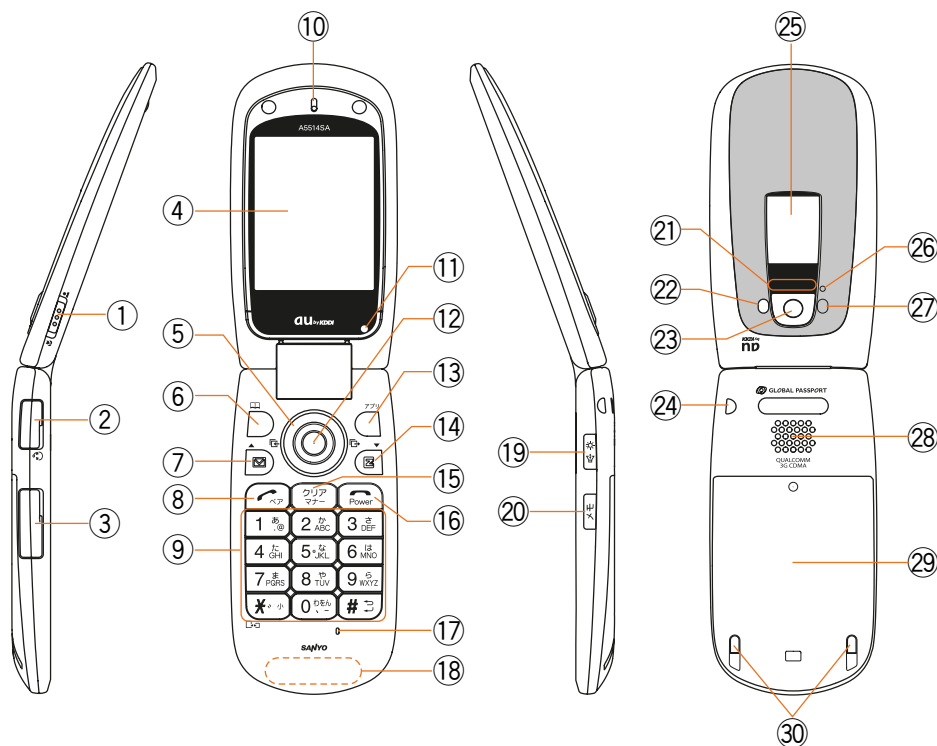

- ①Close-up Switch
- ②Flat-type Earphone Jack
- ③External Connection Terminal
- ④Main Display
- ⑤Scroll Key
- ⑥Address Book Key
- ⑦Mail Key
- ⑧Call / Pair Key
- ⑨Dial Keys
- ⑩Earpiece (Receiver)
- ⑪Light Sensor
- ⑫Center Key
- ⑬Application Key
- ⑭EZweb Key
- ⑮Clear / Manner Key
- ⑯Power / End Key
- ⑰Microphone
- ⑱Internal Antenna
- ⑲Hands Free / Flashlight Key
- ⑳Memo Key
- ㉑Infrared Port
- ㉒Flash
- ㉓Camera
- ㉔Hand Strap Attachment Hole
- ㉕Sub-Display
- ㉖Charge Indicator Light
- ㉗Incoming Call Indicator Light
- ㉘Speaker
- ㉙Battery Cover (Battery Pack inside)
- ㉚Charging Terminals

OPTION

- Battery Pack
- Desktop Stand
- AC Adapter
- DC Adapter
- Earphone
- Carry Case

Charging the Battery

At the time of purchase, the battery pack will not be sufficiently charged. Before using the phone, ensure the battery pack has been fully charged. Instructions for charging the battery pack are shown below.

●Charging Using the Desktop Stand

Connect the AC Adapter connector to the desktop stand then plug in the power main. Place the A5514SA on to the stand. When the phone is charging, the Charge Indicator Light will be flashing red. When charging has finished, the light will go out.

●Charging Using the AC Adapter

Connect the AC Adapter connector to the A5514SA phone external jack and plug it into the power socket. When the phone is charging, the Charge Indicator Light will be flashing red. When charging has finished, the light will go out.


Turning the Power ON/OFF

●Turn the Power On

Press  for more than one second.
The standby screen will appear.

●Turn the Power Off

Press  for more than one second.

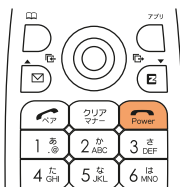

Basic Operation of the Phone

How to Use the Keys



Scroll Key

- Moves the cursor and the screen
- From the standby screen, a right press will open the Outbound Call History. A left press will open the Inbound Call History.

In this manual, the use of the Scroll Key is indicated as in the diagram below;

Up	Down	Left	Right



Center Key

- Displays the Main Menu screen
- Selects the highlighted item



Application Key

- Starts EZ Applications (BREW®)



EZweb Key

- Connects to EZweb



Power / End Key

- Turns the Power ON/OFF
- Ends the phone call

Dial Keys

- To enter numbers or text



Address Book Key

- Displays the Address Book



Mail Key

- Displays the E-mail and C-mail menu





Call / Pair Key

- Make or answer a call
- Displays the Pair menu



Clear / Manner Key

- Silent mode settings
- Delete entered text

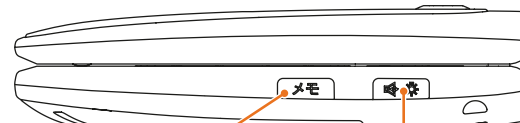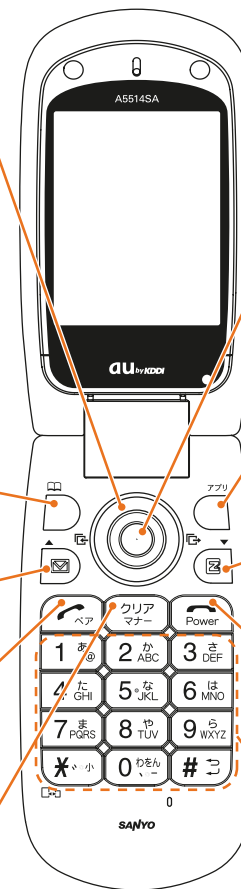

Memo Key

- Setup for Missed Call Answer Phone
- Play the messages in the missed call answer phone



Hands Free / Flashlight Key

- Use the hands-free service
- Use the flashlight

Making a Selection / Go Back

When you wish to select an item, use the  key to position the cursor, then press the  key. If there is a number beside the item, pressing the corresponding key on the Dial Keys will also select this item.

To go back by one screen, press the  key. If  is displayed at the bottom of the screen, pressing the corresponding button will also take you back one screen.

Switching the Screen Display to English

- 1 From the Standby screen, press .



- 2 Using , choose [機能] and press  [選択].



- 3 Using , choose [画面表示] and press  [選択].



- 4 Using , choose [Set Language] and press  [選択].



- 5 Using , choose [English] and press  [選択].



Setting the E-mail and EZweb Default Settings

In order to use E-mail and EZweb, you must first subscribe. If you did not subscribe when you purchased the phone, please visit an 'au Shop' or 'au Customer Center'.

Also, before you use E-mail or EZweb, please reset the phone. Resetting the phone automatically selects an E-mail address. To change the email address to one of your choice, please refer to [Changing Your E-mail Address] on page 9.

- 1 From the Standby screen, press one of ,  or .



- 2 Press  [OK].

Resetting the phone allows automatic selection of an email address.



- 3 Press  [OK].

After the reset is completed, the menu screen will be displayed.

Confirming Your Phone Number and E-mail Address

- 1 From the Standby screen, press .




- 2 Using , choose [Settings] and press  [Select].



- 3 Using , choose [Profile] and press  [Select].

Your own telephone number and E-mail address will be displayed.

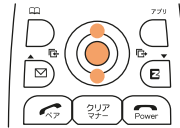

Information

- From the standby screen, pressing , then  will also display these.


Changing Your E-mail Address



- 1 From the Standby screen, press .



- 2 Using , choose [E-Mail Settings] and press  [Select].

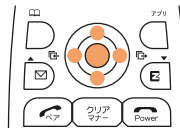

- 3 Using , choose [Other Settings] and press  [Select].



- 4 Using , choose [Eメールアドレスの変更] and press  [OK].



- 5 Enter your P.I.N. number and press  [Complete], then using , select 送信 and press  [OK].



- Your P.I.N. number is a 4-digit number you entered on the application at the time of purchase.
- If you enter the incorrect P.I.N. number 3 times in one day, you will not be able to continue with these changes until the next day.

- 6 Using , select [承諾する] and press  [OK].



- 7 Using , place the cursor into the edit box and enter your E-mail address. Finish by pressing  [Complete].



- 8 Using , select 送信 and press  [OK].

- If the E-mail address you have entered is already being used by someone else, please enter an alternative.



- 9 Using , select OK and press  [OK].
The email address is now changed.



Information

- Please note that once you have changed your email address, it is not possible to change it back to the previous address.

Telephone

Making a Call

- 1 From the Standby screen, use the Dial Keys  –  to enter a telephone number.

●When making a call to a landline telephone number, start with the area code first.



- 2 Press .

When you want to end the call, press .



○Caller I.D. Transmission Options

- 1 After entering the telephone number, press  [Dial], then using , choose the transmission method and press .



●The options displayed will be:

- Dial :Call is made in accordance with current caller ID settings.
- 184+Number→Dial :Caller Identification is not transmitted.
- 186+Number→Dial :Caller Identification is transmitted.

Answering a Call

- 1 Press  and begin speaking.

When you have finished the conversation, press .



Dialed/Received

Calling Someone You Have Previously Called (Dialed)

- 1 From the Standby screen, press .
The Outgoing Call History list will be displayed.



- 2 Using , select the number you would like to call again, press .
- The number you selected will be dialed.



Calling Someone Who Has Previously Called You (Received)

- 1 From the Standby screen, press .
The Incoming Call History List will be displayed.



- 2 Using , select the number you would like to call back, and press .
- The number you selected will be dialed.



Information

- Incoming and Outgoing Call History will display 20 of the most recent numbers each.

Adjusting the Volume of the Other Party's Voice

- 1 During a telephone conversation, press .
The volume can be adjusted at 5 levels.

-  :Increase Volume
-  :Decrease Volume



Adjusting the Ringer Volume

- 1 From the Standby screen, press .
- 2 Using , choose [Settings] and press  [Select].
- 3 Using , choose [Sound/Vibration] and press  [Select].
- 4 Using , choose [Incoming Call] and press  [Select].
The current settings for the Standard Ring will be displayed.
- 5 Using , choose [Volume] and press  [Select].
The volume can be adjusted at 5 levels.
 : Increase Volume
 : Decrease Volume

- By pressing  [Confirm], the volume level will be set.
 - By setting it to S(OFF), the ringer will be silent.
 - Using , the ringer can also be set to Step Down/Step Up

Step Down : Ringer volume gradually reduces.
Step Up : Ringer volume gradually increases.

- 6 Using , adjust the volume and press  [Select].
- 7 Press  [Complete].

Changing the Ring Tone

<Example> Setting the ring tone to [Original]

- 1 Follow the instructions on P.13.
After step 4, using , choose [Sound] and press  [Select].
- 2 Using , choose [Original] and press  [Select].
A list of ring tones will be displayed.

● By pressing  [Confirm], the selected ring tone will be selected.
- 3 Using , choose a ring tone and press  [Select].
- 4  [Complete] を押す
The ring tone will be changed.

Silent Mode

By setting the phone to Silent Mode, you will be alerted to any incoming calls by a vibration. When you are not able to take the call, the caller can record a message.

○Setting Silent Mode to ON

- 1 From the Standby screen, press  for more than one second.



○Setting Silent Mode to OFF

- 1 While Silent Mode is ON, press  for more than one second.

 
Recording Messages When Unable to Answer a Call

By setting the In-Phone Ans Machn to ON, callers will be greeted with a pre-recorded message and will be able to record a message to you.

Setting the In-Phone Ans Machn

○Setting In-Phone Ans Machn to ON

- 1 From the Standby screen, press  for more than one second.

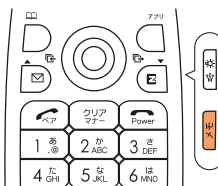

○Setting In-Phone Ans Machn to OFF

- 1 While the In-Phone Ans Machn is ON, press  for more than one second.

Playing a Saved Message

When a message has been recorded on the In-Phone Ans Machn, an alert on the Standby screen will advise you.

- 1 Using , choose  (Mesgs) and press . The recorded message playback screen will be displayed.



- By pressing  [Delete], the recorded message will be deleted.

- 2 Using , choose the message you want to listen to and press  [Play]. The recorded message will play.



Information

- The maximum number of messages able to be recorded is 3 – with a maximum length of 20 seconds each.
- When the number of recorded messages is at maximum, the Answer Phone cannot be turned ON.
- From the Standby screen, pressing  and selecting [Playback] will also cause the In-Phone Ans Machn screen to be displayed.

Using the Telephone Overseas

With the help of the International Roaming feature, the A5514SA may be used overseas.

Setting the Roaming Area

- 1 From the Standby screen, press .
- 2 Using , choose [Global Functions] and press  [Select].
- 3 Using , choose [Roam.Area Setup] and press  [Select].
- 4 Using , choose the Area (Country) and press  [Select].

Calling Japan from Overseas

- 1 Enter the number you wish to call and press  [Submenu].
- 2 Using , choose [Int'l.Call:toJapan] and press  [Select], then .

Information

- At the time of purchase, this phone will have been set up with the latest area information (PRL: Roaming Area Information). However, this information changes many times a year and so it is highly recommended that before traveling overseas, you get the latest roaming information.
- When calling from Japan to an overseas phone set up with a Global Passport, please dial the number as per normal.
- Please subscribe to EZweb and initialize your phone for use with EZweb while in Japan.

Address book

Adding an Entry to the Address Book

Often-called phone numbers, names, E-mail addresses, etc. can be stored for easy access.

<Example> Adding a name, telephone number and E-mail address to the Address Book.

- 1** From the Standby screen, press  for more than one second. The Address Book edit screen will be displayed.



- 2** Using , choose **Na me** (Name) and press  [Select].



- 3** Enter the name and press  [Complete].

●When entering a Japanese name, the reading will automatically appear.



- 4** Using , choose  (Phone No.1) and press  [Select].

 


- 5** Enter the telephone number and press  [Complete].

●When the number is a standard landline, be sure to include the area code.




- 6** Using , choose the type of telephone number and press  [Select]. The icon that corresponds to your choice will appear.

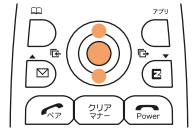


●If you do not wish to enter an E-mail address, proceed to Step 10.

 
- 7** Using , Choose  (EMailAdd1) and press  [Select].

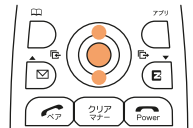

 - 8** Enter the E-mail address and press  [Complete].

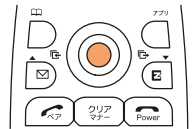


 - 9** Using , choose the type of E-mail address and press  [Select]. The icon that corresponds to your choice will appear.

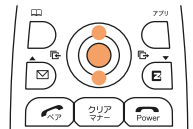

- 10** Press  [Complete].

 A pop-up screen with the memory location number will appear.

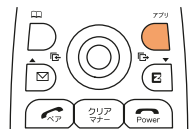

- 11** Press  [Complete]. The entry is saved to the Address Book.



Information

 
- Up to 1000 entries may be saved in the Address Book.
- Under each entry, 3 items of telephone number, E-mail address may be saved.
- The memory location number will automatically be assigned as the smallest unallocated number between 000 – 999. You are also able to over-ride this and enter your own number using the Dial Keys.

Calling a Number from the Address Book

- 1 From the Standby screen, press  .
The Address Book list will be displayed.

- 2 Using , choose the person you wish to call and press  .

● If there are multiple numbers saved under one entry, select the one you wish to dial using .

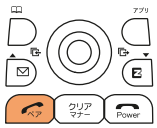
- 3 press  .


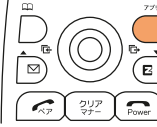 
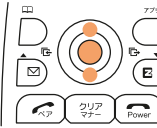 
Editing an Entry in the Address Book

- 1 From the Standby screen, press  .
The Address Book list will be displayed.

- 2 Using , choose the entry you wish to modify and press  [Select].
The detailed information saved under that entry will appear.

- 3 Press  [Submenu].


- 4 Using , choose [Edit] and press  [Select].
The Address Book edit screen will appear.

- 5 Edit the data and press  [Complete].
Yes :Overwrite existing data with new data.
No :Do not save new data – existing data remains.

- 6 Using , choose [Yes] and press  [Select].
The Address Book entry will be saved.


Mail

About E-mail

In order to use E-mail, you must first subscribe to EZweb. If you did not subscribe when you purchased the phone, please visit an 'au Shop' or 'au Customer Center'. Also, before you use E-mail or EZweb, please reset the phone. For information about resetting your phone, please refer to "Setting the E-mail and EZweb Default Settings" on P.8.

E-mail is a service that allows the sending and receiving of messages between compatible cell phones and personal computers, using the Internet. Messages containing up to 5000 double-width characters may be sent and received. Digital photographs and movies can also be sent and received.

- ※ E-mail messages can be sent to a maximum of 5 recipients at a time.
- ※ A maximum of 1000 E-mails can be sent per day (one recipient = 1 E-mail).

Creating and Sending E-mail

- 1 From the Standby screen, press . The E-mail menu will be displayed.



- 2 Using , choose [Create New] and press [Select]. The Create Mail screen will be displayed.



- 3 Using , choose **To** and press [Edit] then press [Edit]. The Recipient input method option screen will appear.



- 4 Using , choose [Go To Address Book] and press [Select]. The Address Book list will be displayed.



- From the Recipient input method option screen, you can also choose to enter the recipient's address from the Send/Receive history or Manual Input, etc.

- 5 Using , choose the person to whom you wish to send the E-mail and press [Select], then [Select] again.



- If there are multiple addresses saved under one entry, select the one you wish to send to using and select ☒ 1-3.

 
- 6 Press [Finish].



- 7 Press [Complete]. The recipient will have been entered.



- 8 Using , choose and press [Edit]. The Subject input screen will be displayed.

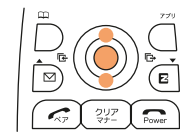

- 9 Enter the Subject line and press [Complete]. The Subject will have been entered.

 


- The Subject may be up to 50 double-width characters long (100 single-width).

- 10 Using , choose and press [Edit]. The Body input screen will be displayed.



- 11 Enter the message and press [Complete]. The message will have been entered.

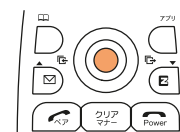


12 Press [Send].

The Select Send Method screen will be displayed.

- The display contents will be the following:

Send	Message will be sent as it is.
Photo Mail	To send photos or movies to cell phones of other service providers.
My Pictograph	Send pictographs to au cell phones.
Easy Pictograph	Transform pictographs into other service provider format and send.

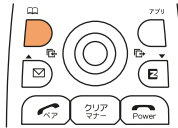 

13 Using , choose [Send] and press .

The E-mail will be sent.

- Once the E-mail has been sent, it will be saved in the Outbox.



Reading Received E-mail

When E-mail is received, an alert on the Standby screen will advise you.

1 Using , choose (E-Mail) and press .

The Inbox Folder list will be displayed.



2 Using , choose [メインフォルダ] and press .

The Received E-mail list will be displayed.



3 Using , choose the E-mail you wish to read and press .

The received E-mail will be displayed.



- By pressing the  -  buttons, you can move up and down through the list of E-mails.

Reading E-mail from the Inbox

1 From the Standby screen, press , choose the [Inbox] using and press .

The Inbox Folder list will be displayed.



2 Using , choose [メインフォルダ] and press .

The Received Email list will be displayed.



3 Using , choose the E-mail you wish to read and press .

The selected E-mail will be displayed.



To View Attached Photos or Movies

1 Using , choose the attachment at the end of the body. Press .

The selected attachment will be displayed.



Replying to Received E-mail

1 From the Standby screen, press . The E-mail menu will be displayed.

 


2 Using , choose [Inbox] and press .

The Inbox Folder list will be displayed.



- 3** Using , choose [メインフォルダ] and press The Received E-mail list will be displayed.

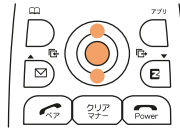

- 4** Using , choose the E-mail you would like to reply to and press The selected E-mail will be displayed.



- 5** Press  [Reply].
The new message input screen will be displayed.
The recipient will be automatically entered and subject and body will have been copied from the original message.



 
- 6** Using , choose The body input screen will be displayed.



- 7** Enter the message text and press The message will have been entered.



- 8** Press  [Send].
The Send-method screen will be displayed.

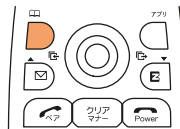

- 9** Using , choose [Send] and press The e-mail will be sent.



About C-mail

To use C-mail, customers in the Tokyo and Chubu regions are not required to subscribe. Customers outside of the Tokyo or Chubu areas are required to purchase an application for C-mail. If you did not subscribe when you purchased the phone, please visit an 'au Shop' or 'au Customer Center'.

C-mail is a message service for use between au C-mail compatible cell phones. A maximum of 50 double-width or 100 single-width character messages may be sent and received.

Creating and Sending C-mail

 
- 1** From the Standby screen, press The C-mail menu will be displayed.



- 2** Using , choose [Create New] and press The Create Mail screen will be displayed.



- 3** Using , choose **To** and press The Recipient input method option screen will appear.

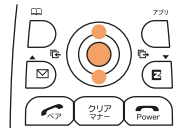

- 4** Using , choose [Go To Address Book] and press The Address Book list will be displayed.



- From the Recipient input method option screen, you can also choose to enter the recipient's number from the Send/Received history or Manual Input.

5 Using , choose the person to whom you wish to send the C-mail and press  [Select].

- If there is only one phone number listed under the name, proceed to step 7.
- If there are multiple numbers listed under the name, use  to select 1-3.



6 Press  [Select].



7 Using , choose  and press  [Edit].
The Body input screen will be displayed.



8 Enter the message and press  [Complete].
The message will have been entered.



9 Press  [Send].
The C-mail will be sent.

- Once the C-mail has been sent, it will be saved in the Out box.



Reading Received C-mail

When C-mail is received, an alert on the Standby screen will advise you.

1 Using , choose  (C-Mail) and press .
The Inbox will be displayed.

- When multiple new C-mails have arrived, the most recent will be displayed. By pressing the  -  buttons, you can move up and down through the list of C-mails.
- By pressing  [Reply], a reply message can be sent.



Reading C-mail from the Inbox

1 From the Standby screen, press  for more than one second.
The C-mail menu will be displayed.



2 Using , choose [Inbox] and press  [Select].
The Received C-mail list will be displayed.



3 Using , choose the C-mail you wish to read and press  [Display].
The selected C-mail will be displayed.



Camera

Taking a Photo

Select 'Camera' and Take a Photo

- 1 From the Standby screen press  and using , choose [Camera] and press  [Select].
Photo/Movie option screen will be displayed.



- 2 Using , choose [Photo] and press  [Select].

●By pressing , you can change to Movie mode.



- 3 Press  [Shoot].
You will hear a shutter noise and the photo you have taken will be displayed on the screen.

●By pressing , you can delete the photo just taken.



- 4 Press  [Save].
The photo will be saved.



View Photos

- 1 Follow the steps on P. 31 After step 2, press  [Submenu].



- 2 Using , choose [Photo Folder] and press  [Select].
The Photo Data folder will be displayed.

●All photo data is stored in the [All Photo] folder.



- 3 Using , choose the folder in which the photo you wish to view is stored and press  [Select].
A list of photo data will be displayed.



- 4 Using , choose the photo you wish to view and press  [Play].
The photo you have selected will be displayed.

●By pressing the - buttons, you can move up and down through the list of photos.



Recording a Movie

Select 'Movie' and Record a Movie

- 1 After step 1 on P. 31, use , to choose [Movie] and press  [Select].

●By pressing , you can change to Photo mode.



 
- 2 Press  [Rec.].
A shutter noise will be heard and recording will begin. To stop the recording, press  [Stop], or wait 15 seconds.

●During recording, pressing the  [Cancel] button will allow you to rerecord.
●By pressing , you can delete the movie you have just recorded.
●After recording is completed, you can view the movie by selecting [Play] from the  [Submenu].




3 Press [Save].

The recorded movie will be saved.

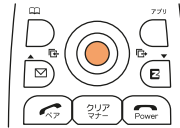

View Movies

 1 Follow step 1 on P. 32 then press [Submenu].

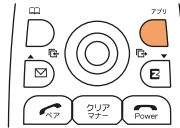

2 Using , choose [Movie Folder] and press [Select].

 
The Movie Data Folder list will be displayed.

●All movie data is stored in the [All Movie] folder.



3 Using , choose the folder that contains the movie you wish to view is stored and press [Select].

A list of movie data will be displayed.

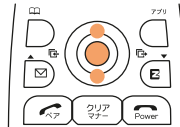

4 Using , choose a movie and press [Play].

The movie you selected will begin to play.

●By pressing the - buttons, you can move up and down through the list of movies.



Send a Photo or Movie by E-mail

<Example> Sending to an au cell phone or a personal computer.

1 After following the Photo instructions (P. 31 steps 1 – 3) or the movie instructions (P. 32 steps 1 – 2), press [E-mail].

 
The new E-mail screen will be displayed with the photo or movie attached.



2 Following the instructions for [Creating and Sending E-Mail] (P. 23 steps 3 – 11), input the recipient, the subject and the body.

3 Press [Send].

The Select Send Method screen will be displayed.

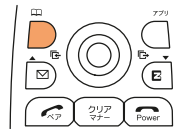

4 Using , choose [Send] and press [Select].

The E-mail will be sent.



EZweb (Internet)

About EZweb

In order to use EZweb, you must first subscribe to EZweb. If you did not subscribe when you purchased the phone, please visit an 'au Shop' or 'au Customer Center'. Also, before you use E-mail or EZweb, please reset the phone. For information about resetting your phone, please refer to "Setting the E-mail and EZweb Default Settings" on P.8.

EZweb is a service, which allows you to use your cell phone to enjoy the Internet. From information sites, you can download ring tones and get the latest news.

※Some information sites incur access fees additional to the standard communication charges.

Connecting to Information Sites

Display the Top Menu

- 1 From the standby screen, press  and using  choose [Top Menu] and press  [Select].

The EZweb Top Menu will be displayed.



Navigating Within EZweb

- Using , choose a topic and press  to display the following screen.
- Using  or , you will return to the previous screen. Pressing either for more than one second will return you to the Top Menu.
- If the whole page cannot be displayed on the screen, press  to scroll forward and  to scroll backward.

Download and Setup CHAKU-UTA

You can download CHAKU-UTA from Information Sites and set them as your phone's ring tone. You can also download pictures and set them as your background or standby screen.

<Example> The method for downloading depends on each site.

We are presenting one example – depending on circumstances, it may differ.

- 1 From the standby screen press , and using  choose [Top Menu] and press  [Select].

The EZweb top menu will be displayed.



- 2 Using , choose [カコリで探す] and press  [OK].



- 3 Using , choose [着うた・着ムビ-] and press  [OK].



- 4 Using , choose a category and press  [OK].



- 5 Using , choose an Information Site and press  [OK], then follow the download instructions on the screen.




- 6 Press  [Play].

The data you have downloaded will begin to play.



7 Press [Enter]

A screen asking what to save it as, will be displayed.

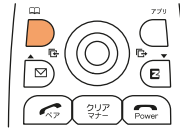

8 Using choose [Sound Setup] and press [Select].

The type you have chosen will be displayed.



9 Using choose [Incoming Call] and press [Select].

The downloaded data will be saved as your Incoming Tone.

Information

- Some sites will require you to pay a subscription fee and submit an EZweb password. This EZweb password will be the 4 digit number you received when you first registered for EZweb pay services. Please be sure to remember this password.

Registering Frequently Accessed Sites


Registering as a Favorite Site

By registering the URL of frequently accessed information sites in your Favorite Site, you will be able to access these sites quickly and easily.

1 Go to the site that you would like to save.

2 Press [BrsrMnu].


The browser menu will be displayed.

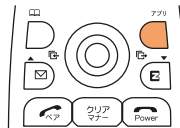

3 Using , choose [New Bookmark] and press [OK].


The site title, URL and folder name will be displayed.

- Some sites are not able to be saved to Favorite Site.

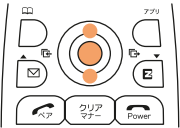

4 Press [Registe].

This site will be saved in your Favorite Site.

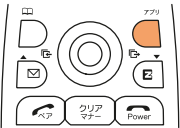

Accessing Sites Saved in Favorites Site


1 From the Standby screen, press .

The EZweb menu will be displayed.



2 Using , choose [Favorite Site] and press [Select].

All the sites you have saved as a Favorite Site will be displayed in a list.

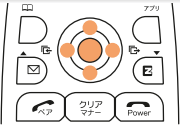

3 Using , choose the site to which you would like to connect and press [Select].

You will be connected to the site you have chosen.



Using EZnaviwalk


EZnaviwalk is a service where a map is displayed on the screen of your mobile cell phone, and you are directed along a route by verbal instructions and vibrations.


○Register 'My Home'

<Example> Register your current position as 'home'.

- 1 From the Standby screen press , then using  choose [EZnavi] and press  [Select].






- 2 Using , choose [EZnaviwalk] and press  [Select].

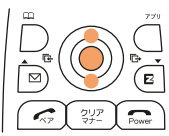- 3 Using , choose [My Spot] and press  [Select].
The My Spot screen will be displayed.

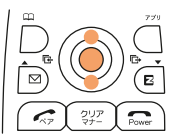- 4 Using , choose [My Home] and press  [Save].
A screen asking for method of saving will be displayed.

- 5 Using , choose [My Map] and press  [Select].
GPS data will be retrieved.

- 6 Press  [Save].
Your current location will have been saved as 'My Home'.

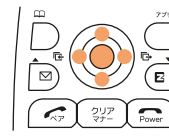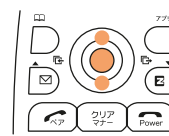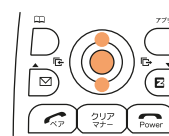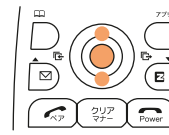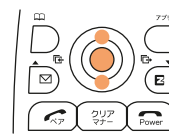○Find the Route Home

Using the GPS information saved under 'Home', you can find your way home.

- 1 From the Standby screen press , then use  to choose [EZnavi] and press  [Select].

- 2 Using , choose [EZnaviwalk] and press  [Select].

- 3 Using , choose [Return Home] and press  [Select].
A confirmation screen will be displayed.

- 4 Using , choose [Yes] and press  [Select].
A possible route will be displayed.

- 5 Using , choose [ルート案内開始] and press .
Navigation will begin.


Information

- Before using EZnaviwalk, please be sure to reset the phone. For instructions on how to reset your phone, refer to [Setting the E-mail and EZweb Default Settings] on P.8.
- In order to use EZnaviwalk, you must first have the EZnaviwalk application installed. When EZnaviwalk is first used, a download screen will be displayed. Please follow the instructions given.
- To use EZnaviwalk you must first pay for a subscription to the service. Also, there will be data transfer charges and other information charges.

Infrared Data Communication

About Infrared Data Communication

Infrared Data Communication is a feature by which au cell phones use infrared light to facilitate data communication with other au cell phones. This data includes Address Books, profile data, contents of data folders, photos, movies, etc.

Using Infrared Data Communication

Align the infrared ports of two cell phones so they will not move and are no more than 20cm apart.

Data able to be sent via infrared

- Address book
- Profile
- Schedule
- Task list
- Diary
- Favorite Site
- Contents of data folder (photo, movie etc.)

Information

- Due to copyright protection, not all data may be transferred.
- Dependent upon the type of infrared port being used, not all cell phones may communicate with each other.
- Other circumstances may prevent infrared data communication from working these include direct sunlight, being directly under a fluorescent light or other infrared beams.

Using Infrared Data Communication

Receiving Data

<Example> Receive profile data.

- 1 From the Standby screen press  and using  choose [Tools], then press  [Select].



- 2 Using , choose [Rem Cont/Infrared] and press  [Select].



- 3 Using , choose [Recv IR Data] and press  [Select].
The phone will begin to receive data.



- 4 If you wish to receive the data, use  to choose [Yes] and press  [Select].
The data will be saved.



Sending Data

<Example> Send Profile data.

- 1 Display your profile data (refer to P.8-9) and press  [Detail].



- 2 Press  [Submenu] and use  to choose [Send IR Data] and press  [Select].
Data will be sent.



Pair Function

Register a Pair Partner

The Pair function allows you to register someone as your pair partner and makes calling that person or sending that person an e-mail, as well as other functions. a one-step process.


- 1 From the Standby screen, press  .
The Pair menu will be displayed.



- 2 Using , choose the number you wish to register and press  [Select].




- 3 Using , choose [Yes] and press  [Select].
The address list screen will be displayed.

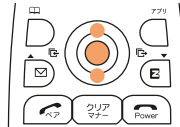

- 4 Using , choose the person you would like to register and press  [Select].



- 5 Press  [Complete].

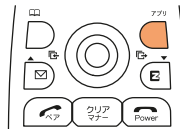


Calling a Pair Partner

- 1 From the Standby screen, press  .
The Pair menu will be displayed.



- 2 Using , choose the person you wish to call, and using  choose [Phone] then press  [Select].
The phone will dial that person.

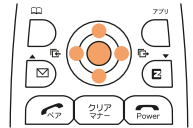

Smart Mode

About Smart Mode

Smart Mode allows you to select a few often used applications including telephone, address book, camera, mail, EZweb, etc. and limit the phone to these applications – making the operation of your phone a whole simpler.

Smart Mode – activating/deactivating

○ Activating Smart Mode

- 1** From the Standby screen, press .
The main menu will be displayed.

- 2** Using , choose [Smart Mode] and press  [Select].
A confirmation screen will be displayed.

- 3** Using , choose [Yes] and press  [Select].
Smart Mode has been activated.


○ Deactivating Smart Mode

- 1** From the Standby screen, press .
The Smart menu will be displayed.

- 2** Using , choose [Settings] and press  [Select].

- 3** Using , choose [Cancel Smart Mode] and press  [Select].
A confirmation screen will be displayed.

- 4** Using , choose [Yes] and press  [Select].
The Smart Mode has been deactivated.


Information


- When activating Smart Mode, some of the settings made in normal mode may be changed. Depending on the feature, a message informing you of this change may be displayed.


Using the Phone in Smart Mode


Adding to the Address Book


In Smart Mode, you can save the name, reading, telephone number and e-mail address.


- 1** From the Standby screen, press  .
The Smart menu will be displayed.

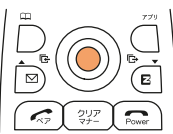

- 2** Using , choose [Phone] and press  [Select].

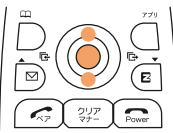
- 3** Using , choose [Address Book] and press  [Select].
The Address Book list will be displayed.

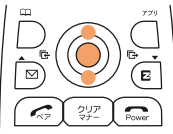

- 4** Press  [New].

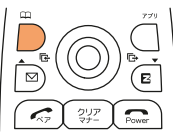
- 5** Enter the name and press  [Complete].

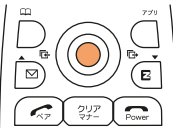 - When you enter the name, the reading will automatically be inserted.
- 6** Confirm the reading and press  [Complete].
The telephone number input method option screen will be displayed.

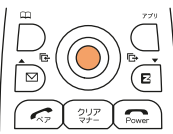
 - If you do not wish to enter a telephone number, press  [Next] and proceed to step 8.

- 7** Using , choose [Manual Input] and press  [Select].

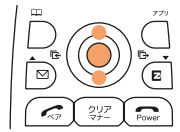
- 8** Enter the telephone number and press  [Complete].
The e-mail address input method option screen will be displayed.

 - If the telephone number is a standard landline, remember to include the area code.
 - If you do not wish to enter an E-mail address, press  [Next] to proceed to step 10.
- 9** Using , choose [Manual Input] and press  [Select].

 
- 10** Enter the E-mail address and press  [Complete].
The Address Book 'Save' screen will be displayed.

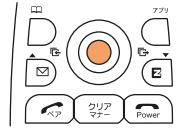 - By pressing , you can edit the entries.
- 11** Press  [Complete].
The data will be saved into the Address Book.



Information

- You may store up to 1000 entries in the Address Book.
- You can also add entries by pressing  from the Standby screen then pressing  [New].

Creating and Sending E-mail

- 1** From the Standby screen, press .
The Smart menu will be displayed.



- 2** Using , choose [Mail] and press  [Select].
The Mail option screen will be displayed.



- 3** Using , choose [E-Mail] and press  [Select].
The E-mail menu will be displayed.



- 4** Using , choose [Create New] and press  [Select].



- 5** Using , choose [Go To Address Book] and press  [Select].
The Address Book list will be displayed.



- 6** Using , choose the person to whom you wish to send an e-mail and press  [Select].
The Subject input screen will be displayed.



- 7** Enter the Subject and press  [Complete].
The Body input screen will be displayed.

- The Subject may be up to 50 double-width characters long (100 single-width).



- 8** Enter the message and press  [Complete].
The Send E-mail screen will be displayed.

- By pressing  [Edit] you can edit any details.
- By pressing  [Save], the message will be saved in the Outbox.



- 9** Press  [Send].
The Select Send Method screen will be displayed.



- 10** Using , choose [Send] and press  [Select].
The e-mail will be sent.

- Once the e-mail has been sent, it will be saved in the Outbox.



Information

- From the Standby screen, press  to display the Mail option screen.
- You may attach one attachment of up to 500KB.
- You may not attach data that is copyright.
- In Smart Mode, you can send one e-mail to one person. But, if you choose to send e-mail from the Pair function, you can choose  [All Send] and send to all those listed as Pair Partners.

Take Photos/Record Movies

○Taking Photos

- 1 From the Standby screen, press .
The Smart menu will be displayed.



- 2 Using , choose [Camera] and press [Select].
The photo/movie option screen will be displayed.



- 3 Using , choose [Photo] and press [Select].
The view from the camera will be displayed.



- By pressing , you can change between photo and movie mode.
- By pressing [Mode], you can change the size of the photograph from QQVGA to QVGA to SXGA size.

- 4 Press [Shoot].
You will hear a shutter sound and the photo will be displayed on the screen.



- By pressing , you can delete the photo you have just taken.
- By pressing [E-Mail], you can attach the photo to a new e-mail.

- 5 Press [Save].
The photograph will be saved.



○Recording a Movie

- 1 After step 2 on P. 51, using , choose [Movie] and press [Select].
The view from the camera will be displayed.



- By pressing , you can change between the photo and movie modes.
- By pressing [Mode], you can change the size of the photograph from Standard Small to Standard Medium to High-Quality Large to Video Large size.

- 2 Press [Rec.].
You will hear a recording-start tone and the recording will begin. While recording, you can press [Stop] or wait until the recording runs out of time. When the recording has finished, you will hear a recording-end tone and the movie as it finished recording will be left displayed on the screen.



- Pressing [Cancel] or will stop the recording.
- After recording has finished, pressing will delete the movie.
- Pressing [E-Mail] will attach the movie to a new e-mail.
- Pressing [Play] will play the movie again.

- 3 Press [Save].
The recorded movie will be saved.



Character Input

About Character Input

When adding to the Address Book, creating mail, etc. requires the input of text. Kanji, Hiragana, Katakana, Alphabet, Numerals, Symbols, Pictographs and Phrases can all be entered.

Character Assigned to Each Key

Each key represents a number of characters. By pressing the key repeatedly, you can cycle through until the character you are looking for is displayed.

Input Mode Key	Hiragana/Kanji (double-width)	Katakana (double/Single width)	English (double/Single width)	Numerals (double/Single width)
1 [1]	あいうえおあいうえお1	アイウエオアイウエオ1	. @ _ / : ~ 1	1
2 [2 ABC]	かきくけこ2	カキクケコ2	a b c A B C 2	2
3 [3 DEF]	さしすせそ3	サシスセソ3	d e f D E F 3	3
4 [4 GHI]	たちつとっ4	タチツテトッ4	g h i G H I 4	4
5 [5 JKL]	なにぬねの5	ナニヌネノ5	j k l J K L 5	5
6 [6 MNO]	はひふへほ6	ハヒフヘホ6	m n o M N O 6	6
7 [7 PQRS]	まみむめも7	マミムメモ7	p q r s P Q R S 7	7
8 [8 TUV]	やゆよゃゅょ8	ヤユヨャュョ8	t u v T U V 8	8
9 [9 WXYZ]	らりるれろ9	ラリルレロ9	w x y z W X Y Z 9	9
0 [0 DEL CLR]	わをんわ、。ー・〜! ? _ 0	ワランワ、。ー・〜! ? _ 0	0, . - ~ ! ? _	0
* [Shift]	* (Voiced sound symbol) , * (Semi-voiced symbol)			✕
	Change between Capital and small characters			
	Change between pictographs / face symbols / symbols			
# [Enter]	↵ (Hard return)			#
	Reverse cycle of characters while entering			

※ [~] can only be entered in 'double-width' mode. Half-width mode gives [~].

※ 「ワ」 (small size) can only be entered in 'double-width' mode.

※ _ is a space.

※ Voiced sound symbol/Semi-voiced symbol and Large/Small letter changes can be made after input by pressing [*]. If you complete the input, then press [*], the input text will change to pictographs and symbols.

<Example> つ → っ → づ → っ ハ → バ → パ → ハ a → A → a

Changing the Input Mode

Pressing [D] in the text input screen will display the input mode list.

To change input modes;

● Using [D], choose the input mode and press [Select].

● Press [D] [Switch], choose the input mode and press [Select].

● Press the Dial Key relating to the desired input mode on the input mode list.

※ Dependent on each feature/function, the types of characters which can be input will differ.

Entering Text

Entering Kana/Kanji

<Example> In the Address Book entry screen, enter the name “岡垣”

1

On the text input screen;

Press [1] 5 times.....「お」

Press [2 ABC] once「か」

[Cursor to the right]

Press [2 ABC] once「か」

[Voiced sound symbol] ...「が」

Press [2 ABC] 2 times.....「き」



● By pressing a key, a character is input. By continually pressing a key, the character will change. By pressing [#], the character will change back.


● When you want to enter the same character twice, you should move the cursor to the right after completing the first character.

● As you enter characters, the phone will predict what word you are trying to input. Using [D], select the word/phrase you are trying to enter.

2

Press [Convert].

[おかがき] will change into Kanji. If you continue to press [D], a list of other options will be displayed.

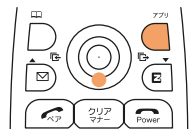

3

Using [D], select [岡垣] and press [Select].

[岡垣] will be displayed.



Input of English Characters

<Example> In the Address Book entry screen, enter the name 'tottori'.

1 On the text input screen;

Press once [t]

Press 3 times... [o]

Press once [t]


(Cursor to the right)

Press once [t]

Press 3 times... [o]

Press 3 times... [r]

Press 3 times... [i]

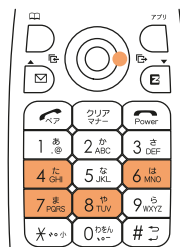

● When you want to enter the same character twice, you should move the cursor to the right after completing the first character.

Input Phrases

<Example> In the E-mail address box, input [@ezweb.ne.jp].

1 On the text input screen, press [Submenu].



2 Using , choose [Phrases] and press [Select]

The Phrases group will be displayed.



3 Using , choose [Internet] and press [Select].

The list of Phrases will be displayed.



4 Using , choose [@ezweb.ne.jp] and press [Select].

[@ezweb.ne.jp] will be entered.



Input Pictographs/Face Symbols/Symbols

<Example> Input a Pictograph.

1 On the text input screen, press .
The input mode list will be displayed.



2 Using , choose and press [Select].
The pictograph list will be displayed.

- By pressing , you can cycle through the Pictograph categories.
- By pressing , you can change between Pictograph/Face Symbols/Symbols modes.
- By pressing , you can continue to input the same character.



3 Using , choose the pictograph you want and press [Select].

The chosen pictograph will be entered.



Information

- To delete one character, take the cursor to the character and press . To delete all the characters to the right of the cursor, press and hold for more than 1 second. If there are no characters to the right of the cursor, all of the characters will be deleted.

Acknowledging Special Precautions and the FCC notice

FCC Notice

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas(such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA02269, Attn: Publication Sales Division.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and voids the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Body-worn Operation

To maintain compliance with FCC RF exposure requirements, Body-worn operations are restricted to designated optional holster of A5514SA or to belt-clips, holsters or similar accessories that have no metallic component in the assembly and that provide at least 1.5cm separation between the device and the user's body. Use of non-recommended accessories may violate FCC RF exposure requirements.

For more information about RF exposure, please visit the FCC website at www.fcc.gov.

Specific Absorption Rate (SAR) for Wireless Phones

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset. The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values A5514SA are:

CDMA modes(Part 22)- Head: 0.359 W/kg; Body-worn: 0.528 W/kg

FCC Radio Frequency Emission

This phone meets the FCC Radio Frequency Emission Guidelines. FCC ID number: NRNA5514SA. More information on the phone's SAR can be found from the following FCC website: <http://www.fcc.gov/oet/fccid>.