

INSTRUCTIONS

WP800D-320B WP1000D-C30(B) WP1000DI-C30C(A)

Only use utensils that are suitable for use in microwave ovens

Keep an eye on it when heating food in plastic or paper containers

Eggs in their shell and whole hard-boiled eggs should not be heated in it

If smoke is observed, switch off or unplug the appliance and keep the door closed.

Warning

Children should only use it under adult supervision

Liquids and other foods must not be heated in sealed containers since they are liable to explode.